



QuickStartGuide

M6504

www.rcaaudiovideo.com

 


Congratulations on purchasing your new RCA player.


Please read these instructions for quick tips on using the player.

Getting Started

- The battery should be fully charged before using your device for the first time. Use the supplied USB connector cable to connect it to your computer or other USB power source. It should be **charged for at least 4 hours** before using for the first time.

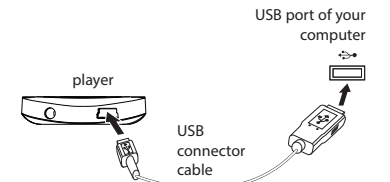

 - Transfer audio/video/photo/text files to the **MUSIC, VIDEO, PHOTO** or **EBOOK** folders of the player by dragging and dropping files using Windows Explorer.
- In the Windows system tray, click **Safely Remove Hardware** icon and select the device with the appropriate driver letter from the list of devices. Disconnect the player from the computer and enjoy media on the go.

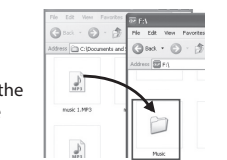

Windows is a registered trademark of Microsoft Corporation in the United States and other countries.

v2.0 (1.0.2.0) (EN/E)

- Video files must be converted by RCA AMV Converter for playback on your player. To install RCA AMV Converter, go to **My Computer** (XP users) /Go to **Computer** (Vista, 7, and 8 users) in the Start menu, find and open the drive letter associated with the player (i.e. RCA MP3) and then double-click the **RCA_AMVConverter_setup.exe** file to launch the installer. For detailed explanation on using RCA AMV Converter, open the RCA AMV Converter software and click

 
the Help module on the main screen.

Note: Audio, video, photo and text files must be transferred to their respective folders on the player to ensure proper detection and playback.

Inserting (or removing) memory card

This player has a memory card slot for reading data from a microSD memory card (not included).

To insert card: Push the card in until a click is heard



To remove card: Push card in until a click is heard, then slowly release the card. As card is under minimal tension when locked in memory slot, please use care when removing. As the memory card is small in size, it is recommended to use a small coin to help insert or remove it.

Learn more about the player

To view the user manual directly from the player:

- Click **Start**.
- Click **My Computer** (XP users) / Click **Computer** (Vista, 7, and 8 users).
- Find and open the drive letter associated with the player and then open the User Manuals folder.
- From the User Manuals folder, select the user manual in your preferred language for more information on the player's features, safety and warranty

information, and answers to Frequently Asked Questions (FAQ's).

 
Keep player out of direct sunlight. Exposure to direct sunlight or extreme heat (such as inside a parked car) may cause damage or malfunction.

Need more help?

Do not return this product to the store.

Visit www.rcaaudiovideo.com for the latest firmware, user manual and FAQ's.

General controls

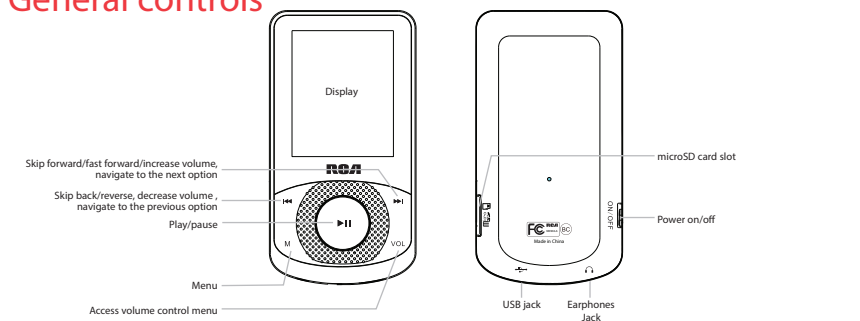

Turn the player on/off

Slide the **ON/OFF** switch to ON to turn on the player. Slide the **ON/OFF** switch to OFF to turn off the player.

Go to the Home menu (to access Music, Video, Record, Voice, FM Radio, Photo, Setup, E-book and Game)

Press and hold **M** to return to the Home menu.

Show the Option menu

Press **M** at the playback screen.

Navigate to an audio/video/photo/text file

In the Home menu, press **⏪** or **⏩** to select **MUSIC, VIDEO, RECORD, VOICE, FM RADIO, PHOTO,** or **E-BOOK** and then press **M** to confirm your selection. Press **⏪** or **⏩** to navigate to the desired file. Press **M** to confirm your selection.

Play an audio/video/photo/text file

Press **▶**.

Pause playback

Press **⏸** at the playback screen, press again to resume.

Adjust the volume

Press **VOL** to access the volume control menu and then press **⏪** or **⏩** to adjust the volume. Press **M** or **▶** to exit the menu.

Skip to the next file

Press **⏩**.

Skip to the previous file

Press **⏪**.

Reverse or fast forward an audio file

Press and hold **⏪** or **⏩** during playback.

Start or pause recording

In the Home menu, press **⏪** or **⏩** to select **Record** and then press **M** to confirm your selection. In the **Record** mode, press **▶** to start or pause recording. To save the recording, press and hold **▶**.

Playback a voice recording

In the Home menu, press **⏪** or **⏩** to select **Voice**. In the **Voice** mode, press **⏪** or **⏩** to select the desired recording, and press **▶** to begin playback.

Reset the player (if it is not responding)

Slide the **ON/OFF** switch to OFF. Slide the **ON/OFF** switch to ON to reset the player.

Product registration

Thank you for purchasing an RCA product. We pride ourselves on the quality and reliability of all our electronic products but if you ever need service or have a question, our customer service staff stands ready to help. Contact us at www.rcaaudiovideo.com

PURCHASE REGISTRATION: Registering On-line will allow us to contact you in the unlikely event a safety notification is required under the Federal Consumer Safety Act.

Register Online at:

WWW.RCAAUDIOVIDEO.COM

Click on Product Registration and Fill Out the Brief Questionnaire



12 Month Limited Warranty Applies to RCA Portable Media Players

VOXX Accessories Corporation (the Company) warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced with reconditioned product (at the Company's option) without charge for parts and repair labor.

To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the Company at the address shown in the User Manual.

This Warranty does not extend to the elimination of externally generated static or noise, to correction of antenna problems, loss/interruptions of broadcast or internet service, to costs incurred for installation, removal or reinstallation of product, to corruptions caused by computer viruses, spyware or other malware, to loss of media, files, data or content, or to damage to tapes, discs, removable memory devices or cards, speakers, accessories, computers, computer peripherals, other media Players, home networks or vehicle electrical systems.

This Warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Visit <http://store.audiovox.com> to find the best accessories for your products.

For Customer Service Visit Our Website At www.rcaaudiovideo.com Product Information, Photos, FAQ's, User Manual

©2014 VOXX Accessories Corporation A wholly-owned subsidiary of VOXX International Corporation Indianapolis, IN Trademark Registered Printed in China