


U N I V E R S A L

**RCA**

**Remote**

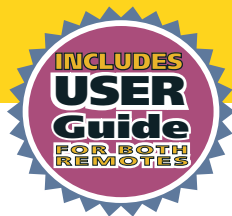

**SUPER VALUE  
PACK!**

**2 REMOTES FOR  
THE PRICE OF 1!**

**RCU800**

- Controls 8 Components
- Sleep Timer
- Control On-screen Channel Guides
- Home Theater & Audio Control


**RCU403**

- Controls 3 Devices
- Palm-size

U  
N  
I  
V  
E  
R  
S  
A  
L

# Table of Contents

Product Diagram .....	2
Introduction .....	3
Battery Information and Installation .....	3
Key Descriptions .....	3
Primary Key Descriptions for VIDEO Operations .....	4
Secondary Key Descriptions for AUDIO Operations .....	5
Program for TV—Direct Entry Method .....	5
Program for VCR 1 and VCR 2—Direct Entry Method .....	6
Program for DVD/CD Systems—Direct Entry Method .....	6–7
Program for SATELLITE—Direct Entry Method .....	7
Program for CABLE Box—Direct Entry Method .....	8
Program for AUDIO Systems—Direct Entry Method .....	8–9
Operating AUDIO System Functions .....	9
Program for AUX—Direct Entry Method .....	10
Code Search Methods .....	11
Manual Code Search .....	11
Auto Code Search .....	11
Code Retrieval .....	12
Sleep Feature .....	12
Programming the Sleep Timer .....	12
Canceling the Sleep Timer .....	12
On-screen Menus .....	13
Accessing a Menu System .....	13
Highlighting and Selecting Menu Items .....	13
Exiting a Menu System .....	13
Troubleshooting .....	14–15
RCU800B Code List .....	16–18
RCU403 Instruction Book .....	19

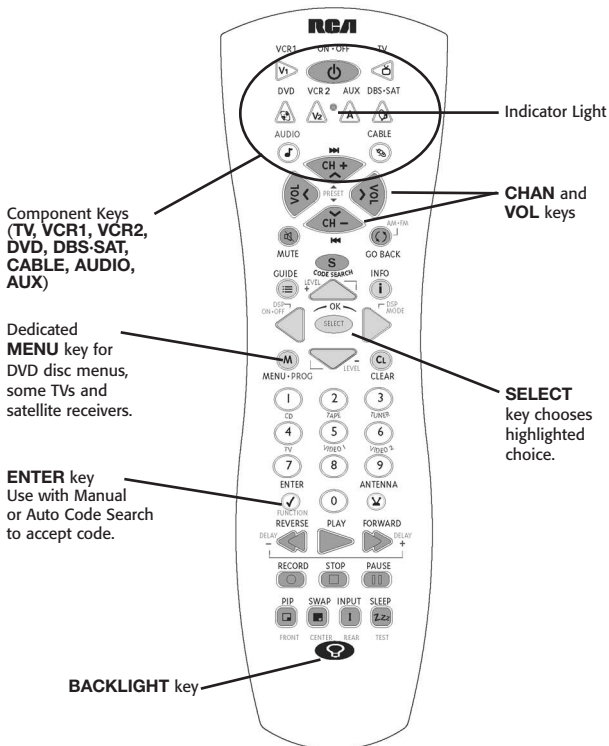




## 8 Component Universal Remote

Congratulations on your purchase of the eight-component universal remote. This universal remote controls up to eight electronic components and makes juggling remote controls a thing of the past. You can program this RCA universal remote to operate most models of most brands of infrared, remote-controlled components manufactured after 1990. (See enclosed Code List for a complete list of brands.) The eight-component universal remote is easy to use, easy to program and gives you control at the touch of your fingertips.

**Note:** The eight-component universal remote is already programmed to operate most RCA, GE and PROSCAN branded TVs, VCRs, DVD players and SATELLITE receivers (DBS). Just press the corresponding component key—**TV, VCR1, VCR2, DVD, DBS•SAT, CABLE, AUDIO, AUX**—and your eight-component universal remote is ready to go!

## Battery Information and Installation

Your universal remote requires two new AA alkaline batteries (batteries may or may not be included, depending on the model). To install the batteries:

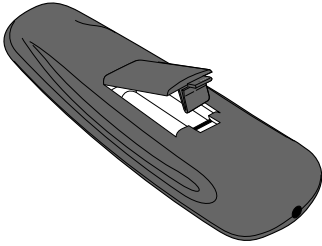

1. Remove the battery compartment cover.
2. Insert the batteries, matching the batteries to the (+) and (-) marks inside the battery case.
3. Replace the battery cover.

**Note:** Reprogramming may be required after batteries are replaced.

## Key Descriptions



**Indicator Light**—flashes when a valid key is pressed to indicate the remote is working. Status of this light is important when you are programming the remote.

**Component Keys (TV, VCR1, VCR2, DVD, DBS•SAT, CABLE, AUDIO, AUX)**— selects the component you want the remote to operate.

For example, after you've programmed the remote to operate your TV, you must press the **TV** key first to put the remote in TV Mode. While in TV Mode, the **CHAN** keys change the channel on the TV, the **VOL** keys adjust the TV's volume, etc.

**Transport Keys**—**REVERSE, PLAY, FORWARD, STOP, PAUSE, RECORD**—operate the same as your original VCR or DVD remote control, although key labels may vary (**REWIND, FAST FORWARD**).

**Backlight Key (select models only)**—turns backlighting on and off. Backlighting remains on for approximately eight seconds after the last keypress to conserve battery life.

# Primary Key Descriptions For VIDEO Operations

## Other Keys (Listed Alphabetically)

Certain keys on the eight-component universal remote have dual functions. Primary functions are printed in black. Secondary key functions are printed in blue on the remote and are used for AUDIO operations.

**0-9 (Number Keys):** operate the same as number keys on your original remote and are used to enter component codes when programming the remote control with Direct Entry method.

**ANTENNA:** in TV Mode, switches between the signal coming from a satellite receiver or cable box and an off-air antenna. In VCR Mode, switches between the signal coming from a VCR and a TV.

**CH+ and CH- (CHANNEL UP and CHANNEL DOWN):** goes to the next highest or lowest channel number in the component channel list, respectively, except for DVDs. In DVDs, the **CH+** and **CH-** keys refers to the **NEXT/PREVIOUS** chapter.

**CLEAR:** removes the on-screen display to return to normal viewing.

**CODE SEARCH:** use to program the remote.

**ENTER:** use with Manual or Automatic Code Search method to accept code (See Code Lists enclosed). Also, some brands require you to press the **ENTER** key after you enter a channel number. In some menu systems, you must press the **ENTER** key to select a highlighted item.

**GO BACK:** switches back to previous channel— operates the same as **PREV CH, LAST CHANNEL** or **RECALL** keys found on some brands of remote controls.

**GUIDE:** brings up the on-screen TV program guide, if your TV is equipped with that feature.

**INFO:** shows program information, if your component is equipped with this feature. Functions the same as a **DISPLAY** key.

**INPUT:** selects the video inputs of your TV, if equipped with this feature.

**MENU•PROG:** accesses DVD disc menus when playing a DVD disc. Accesses menu systems of some TVs, a few RCA brand VCRs and satellite receivers. (For more information, refer to the On-screen Menus section on page 13).

**MUTE:** lowers the TV's volume to its minimum level.

**NAVIGATION KEYS & SELECT:** used to move through on-screen menus and guides. Use the **NAVIGATION** keys to move the highlighted choice up, down, left or right.

**ON•OFF:** turns component on and off.


**Note:** Some RCA, GE and PROSCAN models require that you press the component key to turn the component on and the **ON•OFF** key to turn the component off.

**PIP:** (Picture-in-Picture) and **SWAP** operate your TV's Picture-in-Picture, if your TV is equipped with this feature.

**RECORD:** use with VCR to record programming. You must press the **RECORD** key twice to start recording.

**SLEEP:** allows you to set a time to turn off your TV automatically.

**VOL:** increases or decreases the TV or AUDIO system's volume level.

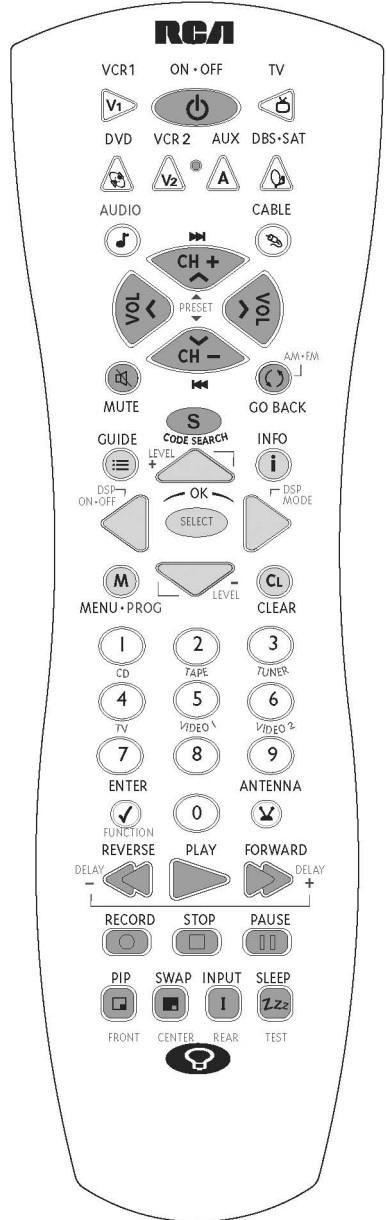

## Secondary Key Descriptions For AUDIO Operations

Certain keys on the eight-component universal remote have dual functions. Secondary key functions are printed in blue on the remote and are used for AUDIO operations. Not all functions work for all brands. Experiment with your AUDIO system to determine which functions work with your components. See the enclosed AUDIO Code List to operate your brand of equipment.

### Press the AUDIO key to enable the Audio Mode.

**AM•FM:** allows you to select the AM•FM band on your AUDIO receiver.

**CD, TAPE, TUNER, TV, VIDEO 1, VIDEO 2:** For some AUDIO systems, these keys will select the corresponding component input.

**DELAY -, ON, DELAY +:** increases or decreases the delay between the surround and main speakers when the receiver is in the Surround Sound Mode.

**DSP ON•OFF:** enables the receiver's Digital Signal Processing Mode.

**DSP MODE:** When the DSP mode is enabled, pressing this key allows the user to cycle through the various DSP Modes.

**FRONT, CENTER, REAR, TEST:** adjusts the levels of the front, center, and rear speakers used with **LEVEL +/LEVEL -**. The test tone must be enabled first by pressing the **TEST** key.

**FUNCTION:** selects the different AUDIO input components. The number keys also select the function labeled below the keys when in Audio Mode.

**LEVEL+/LEVEL-:** sets the level of the speakers during Test Tone Mode.

**PRESET:** cycles through preset channels while the Tuner input on your AUDIO system is active.

## Program for TV—Direct Entry Method

In order for the eight-component universal remote to control your TV, you must program it with the TV code that matches your TV. These instructions explain the preferred method of programming the remote—the Direct Entry method. To program your remote to control your TV, follow these steps:

1. Manually turn on the TV.
2. Locate the enclosed TV Code List. Find your brand of TV.  
**Note:** If your brand is not listed, use one of the Code Search methods to program this remote control. (See section on Code Search.)
3. Press and hold the **CODE SEARCH** key until the indicator light illuminates. Then release the **CODE SEARCH** key.
4. Press and release the **TV** key. The indicator light blinks and then remains lit.
5. Use the number keys to enter the first code listed for your brand. After you enter a valid three-digit code, the indicator light turns off.

**Note:** If you enter an invalid code, the LED flashes rapidly for two seconds. Start over at step 3.

6. Aim the remote at your TV and press the **ON•OFF** key. If your TV turns off, you have found the correct code.
7. Enter the code in the box provided on this page for future reference.
8. If your TV doesn't turn off, repeat steps 3-6 above, entering the next code for your brand.

 
If none of the codes work or your brand is not listed, use one of the Code Search methods to program this remote. (See Code Search section on page 11.)

**CODE SEARCH**    **INDICATOR LIGHT**



**TV**

**(BLINK)**



**(OFF)**

**ON•OFF**



TV CODE		

## Program for VCR1 and VCR2—Direct Entry Method


In order for the eight-component universal remote to control your VCR, you must program it with the code that matches your VCR. If you have two VCR's, the second VCR can be programmed using the **VCR2** key. To program your remote to control your VCR, follow these steps:

1. Manually turn on the VCR.
2. Locate the enclosed VCR Code List. Find your brand in the VCR Codes.  
**Note:** If your brand isn't listed, use one of the Code Search methods to program this remote control. (See section on Code Search on page 11).
3. Press and hold the **CODE SEARCH** key until the indicator light illuminates. Then release the **CODE SEARCH** key.
4. Press and release the **VCR1** or **VCR2** key. The indicator light blinks and then remains lit.
5. Use the number keys on the remote to enter the first code listed for your brand. After you enter a valid three-digit code, the indicator light turns off.

**Note:** If you enter an invalid code, the LED flashes rapidly for two seconds. Start over at step 3.

6. Aim the remote at your VCR. Press the **ON•OFF** key. If your VCR turns off, you have found the correct code.
7. Enter the code in the box provided on this page for future reference.
8. If your VCR does not turn off, repeat steps 3-6 above, entering the next code for your brand.

If none of the codes work or your brand is not listed, use one of the Code Search methods to program this remote. (See Code Search section on page 11).

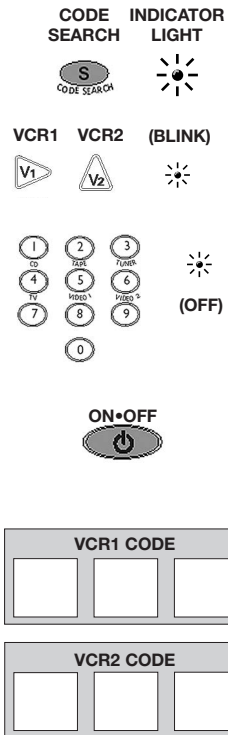

## Program for DVD/CD Systems—Direct Entry Method

In order for the eight-component universal remote to control your DVD or CD systems, you must program it with the code that matches your component. To program your remote to control your DVD/CD system, follow these steps:

1. Manually turn on the DVD/CD system.
2. Locate the enclosed DVD or CD Code List. Find your brand in the DVD or CD Codes.  
**Note:** If your brand isn't listed, use one of the Code Search methods to program this remote control. (See section on Code Search on page 11).
3. Press and hold the **CODE SEARCH** key until the indicator light illuminates. Then release the **CODE SEARCH** key.
4. Press and release the **DVD** key. The indicator light blinks and then remains lit.
5. Use the number keys on the remote to enter the first code listed for your brand. After you enter a valid three-digit code, the indicator light turns off.

**Note:** If you enter an invalid code, the LED flashes rapidly for two seconds. Start over at step 3.



6. Aim the remote at the component. Press the **ON•OFF** key. If your DVD/CD system turns off, you have found the correct code.
7. Enter the code in the box provided on this page for future reference.
8. If your DVD/CD system does not turn off, repeat steps 3-6 above, entering the next code for your brand. If none of the codes work or your brand is not listed, use one of the Code Search methods to program this remote. (See Code Search section on page 11).



**DVD OR CD CODE**

--	--	--


 
## Program for SATELLITE—Direct Entry Method

In order for the eight-component universal remote to control your DBS system, you must program it with the code that matches your SATELLITE receiver. To program your remote to control your DBS system, follow these steps:

1. Manually turn on the satellite receiver.
2. Locate the enclosed SATELLITE Code List. Find your brand in the SATELLITE Codes.
 

**Note:** If your brand isn't listed, use one of the Code Search methods to program this remote control. (See section on Code Search on page 11).
3. Press and hold the **CODE SEARCH** key until the indicator light illuminates. Then release the **CODE SEARCH** key.
4. Press and release the **DBS•SAT** key. The indicator light blinks and then remains lit.
5. Use the number keys on the remote to enter the first code listed for your brand. After you enter a valid three-digit code, the indicator light turns off.
 

**Note:** If you enter an invalid code, the LED flashes rapidly for two seconds. Start over at step 3.
6. Aim the remote at the SATELLITE receiver. Press the **ON•OFF** key. If your SATELLITE receiver turns off, you have found the correct code.
7. Enter the code in the box provided on this page for future reference.
8. If your SATELLITE receiver does not turn off, repeat steps 3-6 above, entering the next code for your brand. If none of the codes work or your brand is not listed, use one of the Code Search methods to program this remote. (See Code Search section on page 11).

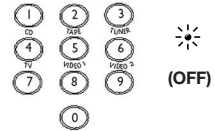

**DBS (SATELLITE) CODE**

--	--	--

## Program for CABLE Box—Direct Entry Method

In order for the eight-component universal remote to control your CABLE box, you must program it with the code that matches your CABLE box. To program your remote to control your CABLE box, follow these steps:

1. Manually turn on the CABLE box.
2. Locate the enclosed CABLE box Code List. Find your brand in the CABLE box Codes.


 
 
**Note:** If your brand isn't listed, use one of the Code Search methods to program this remote control. (See section on Code Search on page 11).

3. Press and hold the **CODE SEARCH** key until the indicator light illuminates. Then release the **CODE SEARCH** key.
4. Press and release the **CABLE** key. The indicator light blinks and then remains lit.
5. Use the number keys on the remote to enter the first code listed for your brand. After you enter a valid three-digit code, the indicator light turns off.

**Note:** If you enter an invalid code, the LED flashes rapidly for two seconds. Start over at step 3.

6. Aim the remote at the CABLE box. Press the **ON•OFF** key. If your CABLE box turns off, you have found the correct code.
7. Enter the code in the box provided on this page for future reference.
8. If your CABLE box does not turn off, repeat steps 3-6 above, entering the next code for your brand.

If none of the codes work or your brand is not listed, use one of the Code Search methods to program this remote. (See Code Search section on page 11).

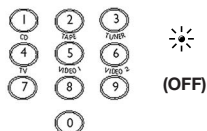

ON•OFF



CABLE BOX CODE		

## Program for AUDIO Systems—Direct Entry Method

This remote control will operate many features found in AUDIO systems.

To program your remote to control your audio component, follow these steps:


 
 
**Note:** CD systems need to be programmed using the DVD component key.

1. Manually turn on the AUDIO component you wish to control.
2. Locate the enclosed AUDIO system Code List. Find your brand in the AUDIO Codes.

**Note:** If your brand isn't listed, use one of the Code Search methods to program this remote control. (See section on Code Search on page 11).

3. Press and hold the **CODE SEARCH** key until the indicator light illuminates. Then release the **CODE SEARCH** key.
4. Press and release the **AUDIO** key. The indicator light blinks and then remains lit.
5. Use the number keys on the remote to enter the first code listed for your brand. After you enter a valid three-digit code, the indicator light turns off.

**Note:** If you enter an invalid code, the LED flashes rapidly for two seconds. Start over at step 3.

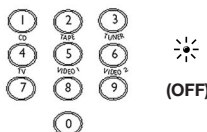



- Aim the remote at the AUDIO component. Press the **ON•OFF** key. If your AUDIO component turns off, you have found the correct code. If your AUDIO component does not turn off, repeat steps 3-6 above, entering the next code for your brand.
- With your AUDIO component on, press the **VOL+** (**VOLUME UP**) key. If the AUDIO component responds, no further programming is required.
- Enter the code in the box provided on this page for future reference.
- If none of the codes work or your brand is not listed, use one of the Code Search methods to program this remote. (See Code Search section on page 11).

**ON•OFF**



**VOL+**



AUDIO SYSTEM CODE		

## Operating AUDIO System Functions

The following is a list of instructions for operating Audio functions. Not all functions work for all brands. Experiment with your AUDIO system to determine which functions work with your components. See the enclosed AUDIO Code List to operate your brand of equipment.

### TURNING ON THE RECEIVER OR MINI-SYSTEM

Point the remote control at the receiver and press the **AUDIO** key and then the **ON•OFF** key to turn the system on.

### SELECTING A COMPONENT INPUT

Component inputs such as a DVD player or VCR may be selected depending on the features of your receiver or mini-system. Input selection may be made either by pressing the labeled number key or pressing the **FUNCTION** key to toggle through the inputs available on your system.

**Note:** You may need to experiment with your system since manufacturers' products do not all work in the same manner.

### USING THE NUMBER KEYS TO CHANGE AUDIO INPUTS

To select a component, press the number key (**1-6**) that corresponds with the component you want to operate (**CD, TAPE, TUNER, TV, VIDEO 1, or VIDEO 2**).

### USING THE FUNCTION KEY TO CHANGE AUDIO INPUTS

To select a component, press the **FUNCTION** key until the input you want to operate appears on your system.

### OPERATING THE AM-FM TUNER

- Press the **AUDIO** key and then the **ON•OFF** key to turn the system on.
- Press the **TUNER (3)** key.
- Press the **AM•FM** key to toggle between AM and FM.
- Use the Preset (**CH+/CH-**) keys to move up and down channel presets.

### OPERATING A HOME THEATER SURROUND SOUND SYSTEM

- Turn the TV on.
- Press the **AUDIO** key and then the **ON•OFF** key to turn the system on.
- Select the AUDIO input either by using the labeled number keys or the **FUNCTION** key.
- Press the **VOL+** or **VOL-** keys to control volume.

**Note:** The **VOLUME** keys may operate both TV and receiver volume at the same time. If this presents a problem, it may be resolved by entering the TV menu and disabling the TV speakers.

### CONTROLLING THE SURROUND SOUND FEATURE

Press the **DELAY+** or **DELAY-** key to achieve the desired delay effect.

Press the **DSP ON•OFF** key to turn DSP (Digital Signal Processing) on or off.

Press the **DSP MODE** key until the desired effect is achieved.

Press the **TEST** key to listen to speaker levels.

Press **FRONT, CENTER, or REAR** keys to select speakers.

Press the **LEVEL+** or **LEVEL-** keys to adjust the speaker levels.



# Program for AUX—Direct Entry Method

The **AUX** key can be used to control any of the following components:  
TV, VCR, DVD/CD, Satellite Receiver, Cable Box, or an Audio component.

1. Manually turn on the component you wish to control.

Locate the enclosed component list. Find your component brand under the corresponding component list.

2. Press and hold the **CODE SEARCH** key until the **INDICATOR LIGHT** illuminates, then release the **CODE SEARCH** key.
3. Press and release the **AUX** key (The **INDICATOR LIGHT** will blink then remain lit). Then press the key for the component you want to program (TV, VCR, DVD, DBS•SAT, CABLE, AUDIO). Press the **DVD** key to program the **AUX** key for a CD player.

4. Use the number keys on the remote to enter the first code listed for your brand. After you enter a valid three-digit code, the indicator light turns off.

**Note:** If you enter an invalid code, the LED flashes rapidly for two seconds. Start over at step 2.


5. Aim the remote at the component you wish to control and press the **ON•OFF** key. If your component turns off, you have found the correct code.

6. Enter the code in the box provided on this page for future reference.

**INDICATOR LIGHT**



**(BLINK)**

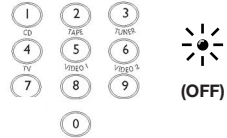

**ON•OFF**



AUX CODE			
<b>TV</b>	<b>VCR</b>	<b>CABLE</b>	<b>DBS</b>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<b>CD</b>	<b>AUDIO</b>	<b>LD</b>	<b>DVD</b>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>


✓



# Code Search Methods

If your component's brand is not listed in the Code List or you have tried all the codes for your brand and the remote does not operate your component, use one of the Code Search methods below—Manual Code Search or Auto Code Search. Both Code Search methods search all of the codes since your component's code may be listed under another brand in the Code List.

**Note:** The Code Search method may take a long time because the remote searches all of the codes in its memory for the code that operates your component. Therefore, if your brand is listed in the Code List, use the Direct Entry method described on pages 5-9.

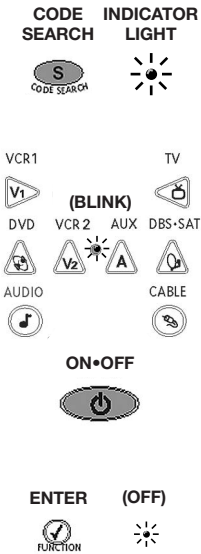

## Manual Code Search

1. Manually turn on the component you want the remote to operate.
2. Press and hold the **CODE SEARCH** key until the indicator light illuminates. Then release the **CODE SEARCH** key.
3. Press and release the component key that corresponds to the component you want the remote to operate (**TV, VCR, DVD, DBS•SAT, CABLE, AUDIO**). For an auxiliary component, press the **AUX** key, then the corresponding component key. For CD, press the **AUX** key, then the **DVD** key. The indicator light blinks once and then remains lit.
4. Aim the remote at the component. Press the **ON•OFF** key continuously until the component turns off.  
**Important:** Because there are so many codes, you may have to press the **ON•OFF** key many times—possibly up to 200 times.
5. When the component turns off, press the **ENTER** key to store the code.
6. Use the Code Retrieval section on the next page to identify the code for your component for future reference.



## Auto Code Search

1. Turn on the component you want the remote to operate.
2. Press and hold the **CODE SEARCH** key until the indicator light illuminates. Then release the **CODE SEARCH** key.
3. Press and release the component key that corresponds to the component you want the remote to operate (**TV, VCR, DVD, DBS•SAT, CABLE, AUDIO**). For an auxiliary component, press the **AUX** key, then the corresponding component key. For CD, press the **AUX** key, then the **DVD** key. The indicator light blinks once and remains lit.
4. Aim the remote at the component and press the **ON•OFF** key once. The remote automatically sends every code for the specified component one at a time, with the three-second delay between each code. Keep the remote aimed at the component throughout this process.
5. As soon as the component turns off, you must press the **ENTER** key immediately so the remote stores the correct code. If you do not press the **ENTER** key within three seconds, the remote sends the next code in the list, and you will have to start over from step 2.
6. Use Code Retrieval section on the next page to identify the code for your component for future reference.

# Code Retrieval

If you used one of the Code Search methods to program your remote, follow the steps below to find out which code is compatible with your component. Finding the actual code and writing it down will save you time if you ever need to program the remote again (e.g., if programming is lost when you change the batteries).

1. Press and hold the **CODE SEARCH** key until the indicator light illuminates. Then release the **CODE SEARCH** key.
2. Press and release the component key that matches the component's code you are retrieving (**TV, VCR, DVD, DBS•SAT, CABLE, AUDIO**). For an auxiliary component, press the **AUX** key, then the corresponding component key. For CD, press the **AUX** key, then the **DVD** key. The indicator light blinks once and then remains lit.
3. Press and release the **CODE SEARCH** key. The indicator light turns off.
4. Starting with 0 on the keypad, press the number keys in order (0-9) until the indicator light blinks.
5. The number that causes the indicator light to blink is the first digit of your code.
6. Repeat step 4 until you have retrieved all three numbers of the code.
7. Refer to the code box to write down the code for your component within the Direct Entry section (page 5-10) for the component just programmed.



# Sleep Feature

The Sleep feature turns off your TV automatically at a duration you choose from 1 to 99 minutes. To program your remote to control the Sleep feature, follow these steps:

## Programming the Sleep Timer

1. Press and hold the **SLEEP** key until the indicator light illuminates. Release the **SLEEP** key.
2. Enter time in minutes using the numerical keypad. The indicator light should turn off. (Minute 1 thru 9: press 0 before the actual number. Maximum: 99 minutes).
3. Leave remote aimed at television. (**IMPORTANT:** The Sleep feature will not work unless remote is left aimed at television.)



## Canceling the Sleep Timer

The Sleep Timer program can be cancelled and reset to zero by either of the following:

1. Press and hold the **SLEEP** key until the indicator light blinks.

**OR**

2. Press the **ON•OFF** key, turning the TV off.




# On-screen Menus

This remote cannot access every menu system of all models and brands of consumer electronics components. However, if you've successfully programmed the **DVD•AUX** key to operate a DVD player, you can access DVD disc menus with the **MENU** key.

The **MENU** key will access TV menu systems for most RCA, GE and PROSCAN TVs, as well as some other popular brands. In addition, some RCA VCR menus are supported by this remote's **MENU** key. This remote also supports select SATELLITE receiver menus.

If this remote's **MENU** key doesn't access the menu system for your component, you'll need to use the original remote to change menu settings.

**Note:** This remote's **MENU** key doesn't support CABLE box menu systems and some VCR menu systems.

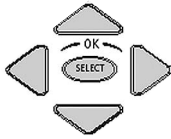

MENU•PROG



SELECT



ENTER



## Accessing a Menu System

To access a menu system, follow these steps:

1. Make sure your components are turned on and your TV is set to the component's input.
2. Press the component key on the remote (**TV**, **DVD**, **DBS•SAT**) for the desired menu screen.
3. Press the **MENU** key.
4. The menu for the component you have chosen should be visible on your television.

## Highlighting and Selecting Menu Items

To navigate on-screen menus, use the **ARROW** keys.

**Note:** For RCA, GE or PROSCAN TVs, press the **MENU** key to select the highlighted item. If menu items have numbers next to them, you can use the number keys to select an item. Additionally, the **SELECT** key can be used to select menu choices.

- For users of RCA, GE and PROSCAN DBS products, older DBS models require that the **INFO** or **MENU** key on this remote be used to make program selections. Use the **SELECT** key for making program selections on newer RCA, GE and PROSCAN DBS models.
- For Sony products, pressing the **ENTER** key while in Menu Mode returns you to the previous menu.
- In some menu systems, you must press the **ENTER** key to select the highlighted item.
- All functions in competitive models and brands of products may not be fully supported.
- Because of the wide variety of menu formats, some experimenting may be required.



This is an example of a DVD disc on-screen menu. English is the menu choice highlighted. Using this remote control, you would press the **SELECT** key to choose English.

To highlight another language, press the **DOWN ARROW** key. (In the example above, the highlight would move to Español.)

CLEAR



## Exiting a Menu System

To exit the Menu Mode, press the **CLEAR** key. The remote reverts back to its normal operation.

# Troubleshooting

## **Problem: The remote can't be programmed to operate your component.**

- You may be too far away from the component or at a wrong angle. This remote uses IR (infrared) technology to communicate with components. The remote sends the code and the component's IR sensor reads the code.

Therefore, there must be an unobstructed path between the remote and the IR sensor on the component. Move closer and make sure you point the remote at the component (VCR when programming the **VCR1** or **VCR2** key; DVD/CD when programming the **DVD** key; TV when programming the **TV** key; CABLE box when programming the **CABLE** key; SATELLITE receiver when programming the **DBS•SAT** key).

- If you've entered all of the codes for your brand that are in the enclosed Code Lists and followed the instructions, try one of the Code Search methods (See Code Search on page 11).
- You must put the remote in the correct mode by pressing the corresponding component key (**TV, VCR1 or VCR2, DVD, DBS•SAT, CABLE, AUDIO, AUX**) so the remote knows which component you want to operate.
- To program the eight-component universal remote to operate a combination unit (TV/VCR or TV/DVD), first try the VCR or DVD codes for your brand. Some units, however, require that you program both the **TV** key (using the TV codes) and the **VCR** or **DVD** key (using the VCR or DVD codes) for full operation.
- To program the eight-component universal remote to operate a combination unit (VCR/DVD), program the **VCR** key using the VCR codes and then program the **DVD** key using the DVD codes.

## **Problem: The indicator light does not light when you press a key.**

- You must put the remote in the correct mode by pressing the corresponding component key (**TV, VCR1 or VCR2, DVD, DBS•SAT, CABLE, AUDIO, AUX**) so the remote knows which component you want to operate.
- You may have pressed an invalid key for the mode the remote is in (e.g., the **RECORD** key only works in VCR Mode).
- Make sure the batteries are properly installed. (See Battery Installation on page 3).
- Replace the batteries with two new AA batteries. Reprogramming may be required.

## **Problem: The remote does not operate your component.**

- You must put the remote in the correct mode by pressing the corresponding component key (**TV, VCR1 or VCR2, DVD, DBS•SAT, CABLE, AUDIO, AUX**) so the remote knows which component you want to operate.
- Remove any obstacles between the remote and the component. Make sure to aim the remote at the IR sensor on the component.
- Make sure the batteries are properly installed. (See Battery Installation on page 3).
- Replace the batteries with two new AA batteries. Reprogramming may be required.
- Reset the remote. Remove the batteries. Then press and hold the number 1 key on the remote for several seconds to reset the microprocessor inside the remote. Release the number 1 key, reinstall the batteries, and try the remote again. Reprogramming will be required.

## **Problem: The remote is not performing commands properly.**

- You must put the remote in the correct mode by pressing the corresponding component key (**TV, VCR1 or VCR2, DVD, DBS•SAT, CABLE, AUDIO, AUX**) so the remote knows which component you want to operate.
- Make sure the component is "ready" (e.g., DVD player has disc loaded; VCR has tape loaded, etc.).
- You may have pressed an invalid key for the mode the remote is in (e.g., the **RECORD** key only works in VCR Mode).
- If you are trying to turn on an RCA, GE or PROSCAN component, press the component key (**TV, VCR1 or VCR2, DVD, DBS•SAT, CABLE, AUDIO, AUX**) instead of the **ON•OFF** key.
- If operating a VCR to record, you must press the **RECORD** key twice.
- If you're trying to change channels, try pressing the **ENTER** key after entering the channel number as this is a requirement of certain models and brands.
- There is a possibility that a programmed code may only be able to control some of your component features (e.g., only turns a component on and off). Follow the steps provided for programming the remote (See Programming sections on pages 5-9). If the component can be turned on and off, make sure you press the **CH+/CH-** key to see if the component responds. If not, try the next code from the list.

## Troubleshooting (continued)

### **Problem: The VCR won't record.**

- As a safety feature, you must press the **RECORD** key twice to begin recording.
- Make sure the tape is properly loaded in the VCR.
- Make sure the tape is not write-protected. If the safety tab is removed, the tape is write-protected and you cannot record onto that tape.

### **Problem: The remote will not change channels.**

- You must put the remote in the correct mode by pressing the corresponding component key (**TV, VCR1 or VCR2, DVD, DBS•SAT, CABLE, AUDIO, AUX**) so the remote knows which component you want to operate.
- Press the **ENTER** key after you enter a channel number.

### **Problem: The component's menu doesn't appear on the TV screen.**

- The TV must be tuned to the Video Input that matches the manner in which you connected the component to the TV.

For example, if you connected your DVD player to your TV by connecting audio/video cables (usually color-coded yellow, red and white) to the TV's Input 1 jack, you must tune the TV to its Video 1 Input channel. Remember, different manufacturers label these jacks differently. Consult the instruction manual that came with the TV for more information.

- You must put the remote in the correct mode by pressing the corresponding component key (**TV, VCR1 or VCR2, DVD, DBS•SAT, CABLE, AUDIO, AUX**) so the remote knows which component you want to operate.
- Menu access isn't supported for all brands. If that's the case, you need to use your original remote control to access menu functions for these components.

**If you have further questions, please visit [www.rca.com](http://www.rca.com).**



# RCU800 Code List

Use this code list when programming the eight-component universal remote.  
Use the code list on page 29 when programming the three-component universal remote.

## TV Codes

Abeq	.....	172
Admiral	.....	001, 046, 047, 083, 095, 173, 191, 211
Adventure	.....	174
Aiko	.....	016
Akai	.....	002
Allerion	.....	046, 047
Amtron	.....	038
Anam National	.....	003, 038, 192, 193, 194
AOC	.....	004, 005, 006, 007, 082, 195, 196
Apex	.....	236, 240, 241
Audiovox	.....	038
Belcor	.....	004
Bell & Howell	.....	001, 048, 049, 073, 083, 162
Bradford	.....	038
Broksonic	.....	000, 004, 250, 280
Brokwood	.....	004
Candle	.....	004, 006, 008, 132, 174, 196
Celebrity	.....	002
Citizen	.....	004, 006, 008, 016, 038, 105, 132, 171, 196
Colorlyme	.....	004, 006, 010, 196, 200
Concerto	.....	004, 006, 196
Contec/Cony	.....	012, 013, 038, 063
Craig	.....	038
Crosley	.....	000, 062
Crown	.....	038, 062, 130, 171
Curtis Mathes	.....	000, 004, 006, 015, 048, 049, 073, 105, 162, 171, 196, 212
CXC	.....	038
Daewoo	.....	004, 005, 006, 016, 017, 082, 127, 171, 190, 196, 202
Daytron	.....	004, 006, 171, 196
Dimensia	.....	000, 212
Dumont	.....	004, 151, 196, 217
Dynatech	.....	004
Electroband	.....	002
Electrohome	.....	000, 002, 003, 004, 006, 019, 020, 022, 064, 196
Emerson	.....	004, 006, 012, 023, 024, 025, 026, 027, 028, 074
.....	.....	030, 031, 032, 033, 034, 035, 036, 037, 038, 039, 041, 042, 043, 044, 046, 047, 048, 049, 073, 123, 124, 162, 171, 177, 179, 191, 196, 208
Envision	.....	004, 006, 196
Fisher	.....	048, 049, 051, 073, 162, 180
Fujitsu	.....	046, 047
Funai	.....	038, 046, 047, 189
Futuretec	.....	038
GE	.....	000, 003, 004, 006, 022, 052, 054, 055, 064, 087, 100, 164, 165, 166, 167, 168, 181, 196, 203, 212, 213, 233
Gilbralter	.....	004, 151
Goldstar	.....	004, 005, 006, 012, 019, 056, 057, 058, 082, 135, 156, 171, 172, 196
Grundig	.....	038, 046, 047, 171
Hallmark	.....	004, 006, 196
Harvard	.....	038
Hisense	.....	237
Hitachi	.....	004, 006, 012, 013, 059, 060, 061, 063, 135, 136, 137, 138, 139, 140, 141, 142, 143, 144, 145, 146, 148, 150, 179, 185, 196, 198, 199
IMA	.....	038
Infinity	.....	062, 130
Janelle	.....	174
JBL	.....	062, 130
JCB	.....	002
JC Penney	.....	000, 004, 005, 006, 008, 013, 022, 052, 054, 055, 057, 058, 063, 064, 072, 082, 087, 100, 104, 105, 109, 132, 166, 167, 171, 172, 181, 196, 201, 203, 207, 212, 233
Jensen	.....	004, 006, 196
JVC	.....	012, 013, 054, 055, 060, 063, 065, 066, 067, 123, 157, 158, 159, 182, 239
Kawasho	.....	002, 004, 006, 196
Kenwood	.....	004, 006, 019, 196
KLH	.....	236, 240, 241
Kloss Novabeam	.....	038, 068, 069, 174, 183
KTV	.....	038, 070, 171, 177
LG	.....	005, 082
Loewe	.....	062, 130
Logik	.....	001, 083
Luxon	.....	004, 006, 196
LXI	.....	000, 006, 048, 049, 062, 071, 072, 073, 100, 109, 130, 162, 181, 196, 203, 207, 212, 233
Magnavox	.....	000, 004, 006, 008, 019, 062, 068, 069, 075, 076, 077, 088, 130, 131, 132, 133, 134, 183, 196, 219, 235
Marantz	.....	004, 006, 059, 062, 078, 130, 196, 199
Marantz	.....	004, 006, 059, 062, 078, 130, 196, 199
Megatron	.....	006, 059, 196, 199
Memorex	.....	001, 005, 006, 046, 047, 048, 049, 073, 082, 083, 162, 191, 196
MCA	.....	004, 005, 006, 019, 022, 051, 064, 079, 080, 082, 196
Midland	.....	054, 055, 151, 171, 172, 181
Minutz	.....	052
Mitsubishi	.....	004, 005, 006, 019, 022, 051, 064, 079, 080, 081, 082, 125, 135, 196
Montgomery Ward	.....	001, 083
Motorola	.....	003, 173
MTC	.....	004, 005, 006, 082, 105, 196
Multitech	.....	038
Multivision	.....	084
NAD	.....	006, 071, 072, 109, 136, 185, 196, 207
NEC	.....	003, 004, 005, 006, 010, 082, 196, 200
Nikko	.....	006, 016, 196
NTC	.....	016
Onwa	.....	038
Optimus	.....	136, 185
Optonica	.....	095, 173
Orion	.....	030, 035, 191, 208
Panasonic	.....	003, 054, 055, 062, 109, 130, 170, 214, 350, 351
Philco	.....	003, 004, 005, 006, 008, 012, 019, 062, 068, 069, 075, 077, 082, 088, 130, 132, 134, 183, 196
Philips	.....	002, 003, 004, 008, 012, 019, 062, 068, 069, 075, 076, 086, 087, 088, 130, 132, 134, 167, 183, 196
Pilot	.....	004, 171, 196
Pioneer	.....	004, 006, 090, 091, 092, 136, 179, 185, 196
Portland	.....	004, 005, 006, 016, 082, 171, 196
Price Club	.....	238
Prima	.....	038
Prism	.....	054, 055
PROSCAN	.....	000, 100, 181, 203, 212, 233
Proton	.....	004, 006, 012, 093, 196
Pulsar	.....	004, 151
Quasar	.....	003, 054, 055, 070, 109, 170, 214
Radio Shack	.....	000, 048, 049, 073, 162, 212
Radio Shack/Realistic	.....	004, 006, 012, 038, 048, 049, 073, 095, 162, 171, 172, 196
RCA	.....	000, 003, 004, 005, 006, 007, 019, 054, 055, 082, 096, 098, 099, 100, 101, 102, 103, 129, 179, 181, 188, 190, 196, 202, 203, 212, 215, 233, 281, 352
Runco	.....	051, 217
Sampo	.....	004, 006, 171, 172, 196, 242
Samsung	.....	004, 005, 006, 012, 013, 015, 017, 019, 082, 104, 105, 106, 171, 172, 196, 201, 204
Sansui	.....	191, 208, 282
Sanyo	.....	004, 048, 049, 073, 080, 107, 162, 169, 180, 196
Scotch	.....	006, 196
Scott	.....	004, 006, 012, 024, 035, 038, 046, 047, 196
Sears	.....	000, 004, 006, 013, 019, 046, 047, 048, 049, 051, 063, 066, 071, 072, 073, 100, 109, 110, 162, 180, 181, 189, 196, 203, 207, 212, 233
Sharp	.....	004, 006, 012, 026, 029, 095, 111, 112, 113, 122, 171, 173, 196
Shogun	.....	004, 196
Signature	.....	001, 083, 173
Simpson	.....	008
Sony	.....	002, 205, 216, 218
Sony Design	.....	004, 006, 008, 038, 046, 047, 132, 196
Squareview	.....	189
SSS	.....	004, 038
Starlite	.....	038
Supre-Macy	.....	174
Supreme	.....	002
Sylvania	.....	004, 006, 008, 019, 062, 068, 069, 075, 076, 077, 088, 116, 130, 132, 134, 161, 183, 196, 353
Symphonic	.....	026, 029, 033, 038, 046, 047, 155, 189
Tandy	.....	173
Tashiko	.....	072
Tatung	.....	003
Technics	.....	054, 055
Techwood	.....	004, 006, 054, 055, 196
Teknika	.....	001, 004, 005, 006, 008, 012, 013, 016, 038, 046, 047, 063, 076, 082, 083, 105, 132, 170, 171, 196, 214
Telecaption	.....	117
Tera	.....	004, 012, 093
TMK	.....	004, 006, 196
Toshiba	.....	000, 048, 049, 071, 072, 073, 105, 109, 117, 118, 160, 161, 162, 190, 201, 207, 283
Television	.....	171
Universal	.....	052, 087, 166, 167
Victor	.....	066, 182
Vidtech	.....	004, 005, 006, 196
Viking	.....	174
Wards	.....	000, 001, 004, 005, 006, 019, 024, 033, 046, 047, 052, 062, 068, 069, 075, 076, 082, 083, 087, 088, 095, 119, 120, 130, 134, 166, 167, 173, 183, 196, 212
White Westinghouse	.....	000, 001, 190, 191
Yamaha	.....	004, 005, 006, 019, 082, 196
Zenith	.....	000, 001, 004, 051, 083, 151, 152, 153, 154, 196, 210, 217

## VCR Codes

Admiral	.....	001
Adventure	.....	026
Aiko	.....	027
Aiwa	.....	026
Akai	.....	003, 005, 007, 008, 111, 112, 113, 119
Allegro	.....	145
American High	.....	021
Asha	.....	015
Audio Dynamics	.....	009, 010
Audiovox	.....	014, 054
Beaumarck	.....	021
Bell & Howell	.....	011
Broksonic	.....	012, 025, 031, 135, 235
Calix	.....	014, 054
Candle	.....	013, 014, 015, 016, 017, 018, 019, 021, 022
Canon	.....	021, 012
Capchart	.....	020, 110
Carver	.....	062
CCE	.....	027, 061
Citizen	.....	013, 014, 015, 016, 017, 018, 019, 021, 054
Colorlyme	.....	009
Colt	.....	061
Craig	.....	013, 014, 023, 054, 061
Curtis Mathes	.....	000, 009, 013, 016, 018, 021, 022, 024
Cybermax	.....	086, 087, 089, 091, 111
Daewoo	.....	015, 017, 019, 025, 026, 027, 028, 110
Daytron	.....	061, 110
DBX	.....	009, 010
Dimensia	.....	000, 086, 089
Dynatech	.....	026
Electrohome	.....	014, 029, 054
Electrohome	.....	014, 029, 054
Emerson	.....	003, 007, 012, 014, 015, 021, 024, 025, 026, 029, 030, 031, 032, 033, 034, 036, 037, 038, 039, 040, 041, 042, 044, 045, 046, 047, 054, 065, 105, 113, 116, 117, 130, 136
Fisher	.....	011, 023, 048, 049, 050, 051, 052, 118
Fuji	.....	021, 119
Funai	.....	026
Garrard	.....	026
GE	.....	000, 013, 021, 022, 053, 086, 087, 089, 091, 115, 120
Go Video	.....	134, 137
Goldstar	.....	009, 014, 018, 054, 057
Gradiente	.....	026
Harley Davidson	.....	026
Harman Kardon	.....	009
Harwood	.....	061
Headquarter	.....	011
Hi-Q	.....	023
Hitachi	.....	026, 055, 056, 057, 084, 107, 111, 120
Instant Replay	.....	021
JCL	.....	021
JC Penney	.....	009, 010, 011, 012, 013, 014, 021, 022, 051, 054, 055, 056, 060, 061, 062, 084, 107, 118



Jensen	.....055, 056, 084, 111	Radio Shack	.....001, 014, 050, 054, 096
JVC	.....009, 010, 011, 018, 111, 123, 138	Radio Shack/Realistic	.....011, 013, 014, 021, 022, 023, 026
Kenwood	.....009, 010, 011, 016, 018, 111, 123		.....029, 049, 050, 054, 096
KLH	.....061	Radix	.....014, 054
Kodak	.....014, 021, 054	Randy	.....014
LG	.....014, 054	RCA	.....000, 003, 007, 013, 021, 022, 055, 056, 082, 083, 084
Lloyd's	.....026		.....085, 086, 087, 088, 089, 090, 091, 100, 107, 115, 120
Logik	.....061	Realistic	.....001, 011, 013, 014, 015, 021, 022, 023, 026, 029,
LXI	.....014, 054		.....049, 054, 096
Magnavox	.....021, 022, 062, 063, 104, 105, 108, 124	Ricoh	.....013
MAGNIN	.....013	Runco	.....104
Marantz	.....009, 010, 011, 016, 018, 021, 022, 062, 064, 076	Samsung	.....005, 013, 015, 033, 053, 112, 141, 142
Marta	.....014	Sanky	.....001, 104
Matsushita	.....021	Sansui	.....010, 031, 092, 111, 123, 130
MEI	.....021	Sanyo	.....011, 013, 023, 143
Memorex	.....001, 011, 013, 014, 021, 022, 023, 026, 031	Scott	.....012, 015, 025, 032, 038, 065, 116
	.....054, 104, 130	Sears	.....000, 011, 014, 021, 023, 026, 028, 048, 049, 050, 051
MGA	.....029, 065, 113		.....054, 055, 056, 084, 086, 089, 107, 118
MGN Technology	.....013	Sharp	.....001, 017, 029, 094, 095, 096, 097
Midland	.....053	Shintom	.....056, 061, 084, 098, 119
Minolta	.....055, 056, 084, 107	Shogun	.....013
Mitsubishi	.....029, 055, 056, 065, 066, 067, 068, 069, 070	Signature	.....001
	.....071, 072, 073, 074, 084, 106, 113, 123	Singer	.....021, 061, 128
Montgomery Ward	.....001, 075	Sony	.....098, 099, 119, 144
Motorola	.....001, 021	STS	.....021, 107
MTC	.....013, 126	Sylvania	.....021, 022, 026, 062, 063, 065, 124, 268
Multitech	.....013, 016, 026, 055, 061	Symphonic	.....026
	.....009, 010, 011, 016, 018, 064, 076, 078, 079, 111, 123	Tandy	.....011
NCC	.....014, 054	Tashiko	.....014, 054
Nikko	.....013	Tatung	.....111
Noblex	.....021	Teac	.....026, 085, 111
Olympus	.....001, 014, 054	Technics	.....021, 109
Optimus	.....096	Teknika	.....014, 021, 022, 026, 054, 100, 129
Optonica	.....000, 031, 086, 089, 130	TMK	.....013, 024, 047
Orion	.....021, 022, 109, 125, 126, 127, 265, 266	Toshiba	.....015, 049, 051, 055, 065, 113, 116, 118
Panasonic	.....021, 022, 109, 125, 126, 127, 265, 266	Totevision	.....013, 014, 054
Pentax	.....016, 055, 056, 084, 107, 120,	Unitech	.....013
Pentax Research	.....018	Vector Research	.....009, 010, 015, 016
Philco	.....021, 022, 062, 063	Victor	.....010
Philips	.....021, 022, 062, 096, 124, 133	Video Concepts	.....009, 010, 015, 016, 113
Pilot	.....014	Videosonic	.....013
Pioneer	.....010, 055, 080, 081, 123	Wards	.....001, 013, 014, 015, 021, 022, 023, 026, 029, 054,
Portland	.....016, 017, 019, 110		.....055, 056, 061, 084, 088, 090, 096, 101, 102, 103
PROSCAN	.....000, 083, 086, 089	XR-1000	.....021, 026, 061
Protec	.....061	Yamaha	.....009, 010, 011, 018, 111
Pulsar	.....104	Zenith	.....026, 098, 104, 119, 128, 130, 145
Quartz	.....011		
Quartz	.....011		
Quasar	.....021, 022, 125		

## PVR/DVR Codes

RePlay	.....316	Tivo	.....315
--------	----------	------	----------

## DVD Player Codes

Aiwa	.....350	Onkyo	.....255, 387
Allegro	.....510	Ortron	.....392
Apex	.....372, 373, 374	Panasonic	.....256, 257, 300, 301, 355, 388
Broksonic	.....500, 600	Philips	.....162, 258, 356, 357, 358, 389, 504
Daewoo	.....375	Pioneer	.....165, 259, 390, 391
Emerson	.....376, 377, 501	PROSCAN	.....160, 370
Funai	.....377	Qwestar	.....392
GE	.....160, 370, 378	RCA	.....160, 260, 302, 370, 371, 393, 409, 505, 601
Go Video	.....502	Samsung	.....394, 395, 396, 506, 507
Hitachi	.....351, 379	Sansui	.....397, 602
JBL	.....251	Sanyo	.....359, 508
JVC	.....161, 252, 352, 386, 503	Sharp	.....398, 399, 400, 401
Kenwood	.....380	Sony	.....166, 261, 360, 361, 402, 403, 404, 509
Konka	.....353, 354	Sylvania	.....303, 377
Koss	.....253, 254, 381	Toshiba	.....162, 167, 362, 363, 405, 406, 407, 603
Lasonic	.....382	Venturer	.....262
Magnavox	.....162, 357, 358, 383	Xbox ®*	.....160
Memorex	.....384	Yamaha	.....358, 558
Mintek	.....385	Zenith	.....364, 408, 510
Mitsubishi	.....163		
NAD	.....376		

\*Requires use of Xbox ® DVD playback kit.

## Portable DVD Player Codes

RCA	.....371	Sharp	.....399
-----	----------	-------	----------

## CD Player Codes

ADC	.....200, 201, 220	Mitsubishi	.....229, 230
ADO	.....201	Nakamichi	.....232, 233
Aiwa	.....175, 203	NEC	.....184
Akai	.....205	Onkyo	.....186, 234, 235
Denon	.....208	Optimus	.....237, 238, 239
Dynatech	.....177	Panasonic	.....188
Emerson	.....178	Pioneer	.....189, 240
Fisher	.....179, 212, 213	RCA	.....190, 211
GE	.....216	Sanyo	.....250
Hitachi	.....180	Sears	.....207
Inkel	.....220	Sherwood	.....243
JVC	.....181, 221	Sony	.....195, 209, 244
Kenwood	.....183, 222, 224	Teac	.....245, 246, 247
Luxman	.....225	Technics	.....197
Marantz	.....185, 226	Toshiba	.....231
MCS	.....228	Yamaha	.....198, 199, 248

## TV/VCR Combo Codes

Broksonic	.....TV 250 VCR 235
-----------	---------------------

## TV/DVD Combo Codes

Broksonic	.....TV 280 DVD 600	Sansui	.....TV 282 DVD 602
RCA	.....TV 281 DVD 601	Toshiba	.....TV 283 DVD 603

## TV/VCR/DVD Combo Codes

	TV	VCR	DVD
Panasonic	350	265	300
	351	266	301

	TV	VCR	DVD
RCA	352	267	302
Sylvania	353	268	303

## VCR/DVD Combo Codes

	VCR	DVD
Broksonic	135	500
Emerson	136	501
Go Video	137	502
JVC	138	503
Philips	139	504
RCA	140	505

	VCR	DVD
Samsung	141	506
Sanyo	142	507
Sanyo	143	508
Sony	144	509
Zenith	145	510

## Home Theater (HTIB) Systems Codes

	DVD	Audio
JBL	251	300
JVC	252	301
Koss	253	302
	254	303
Onkyo	255	304
Panasonic	256	305
	257	306

	DVD	Audio
Philips	258	307
Pioneer	259	308
RCA	260	309
	261	310
Venturer	262	311

## Satellite Codes

Alphastar	079
Bell ExpressVu	078, 091
Chaparral	056, 057
Dish Network	078, 089, 091
Drake	058, 059
Echostar	089
GE	047, 071, 080, 081, 093
General Instruments	060, 061, 062
Hitachi	083, 084
Hughes Network Systems	077, 083, 090
JVC	082
Magnavox	085
Motorola	047, 071, 080, 081
Panasonic	075

Philips	085
Primestar	076
PROSCAN	047, 071, 080, 081, 093
RCA	047, 071, 080, 081, 093
Realistic	063
Sony	072
Star Choice	076, 092
STS1	064
STS2	065
STS3	066
STS4	067
Toshiba	068, 073
Uniden	086

## HDTV Tuner Codes

RCA	200
-----	-----

## Cable Box Codes

ABC	001, 003, 004, 005, 006, 007
Antronix	008, 009
Artek	008, 009, 010, 011
Cabletenna	008
Cableview	008
Century	011
Citizen	011
Colour Voice	012, 013
Comtronics	015
Contec	016
Eastern	017
Garrard	011
GC Electronics	009
GE	000, 003
Gemini	018, 019
General Instruments	000, 001, 003, 046, 049
Hamlin	020, 021, 022, 028, 035
Hitachi	003
Jasco	011
Jerold	000, 001, 003, 005, 007, 018, 023, 024, 046, 049
Magnavox	025
Motorola	000, 003, 046
Movie Time	027, 028
NEC	005
NSC	027, 028
Oak	016, 029
Panasonic	000, 048

Philips	011, 012, 013, 015, 019, 025, 030, 031, 032
Pioneer	033, 034
PROSCAN	003
RCA	000, 007, 049
Realistic	009
Regal	022, 035
Regency	017
Rembrandt	003
Samsung	034
Scientific Atlanta	006, 036, 037, 038
Signal	018
Signature	003
Sprucer	000
Standard Component	039, 044
Starcom	001, 007, 018
Stargate	018
Starquest	018
Tocom	004, 023
Tusa	018
TV85	027
Unika	008, 009, 011
United Cable	001
Universal	008, 009, 010, 011
Video Way	044
View Star	015, 016, 025, 027
Zenith	000, 050, 051

## Audio System Codes

Aiwa	250, 251, 252, 253, 254, 255, 256, 268
Denon	274
Harman Kardon	267
JBL	300
JVC	257, 267, 301
Kenwood	258
Koss	302, 303
Onkyo	269, 304
Optimus	275
Panasonic	270, 271, 305, 306
Philips	307
Pioneer	308

RCA	259, 264, 265, 266, 309
Shenwood	273
Sony	260, 261, 272, 310, 312
Technics	270, 271
Venturer	311
Yamaha	262, 263

## Laser Disc Player Codes

RCA	133
-----	-----

U N I V E R S A L

**RCA**

**Remote**

Compatible with today's  
most popular brands.

U  
N  
I  
V  
E  
R  
S  
A  
L



TV



DVD or VCR



CABLE

remote

# Table of Contents


Product Diagram .....	20	Code Retrieval .....	25
Introduction .....	20	Sleep Feature .....	25
Battery Installation and Information .....	21	On-screen Menus .....	26
Key Descriptions .....	21	Accessing a Menu System .....	26
Program for TV—Direct Entry Method .....	22	Highlighting and Selecting	
Program for DVD or VCR—		Menu Items .....	26
Direct Entry Method .....	22	Exiting a Menu System .....	26
Program for Satellite or Cable Box—		Troubleshooting .....	27-28
Direct Entry Method .....	23	RCU403 Code List .....	29-31
Code Search Methods .....	24	Limited 90-Day Warranty .....	31
Manual Code Search .....	24		
Automatic Code Search .....	24		



## 3 Component Universal Remote

This universal remote controls up to three electronic components. You can program this RCA brand universal remote to operate most models of most brands of infrared, remote-controlled components manufactured after 1990. (See the enclosed Code List for a complete list of brands.)


**Note:** The 3 component universal remote is already programmed to operate most RCA, GE and PROSCAN branded TVs, VCRs, DVD players and satellite receivers (DBS). Just press the corresponding component key—**VCR•DVD** for a VCR or DVD player; **TV** for a television; **DBS•CABLE** for a satellite receiver or a cable box.

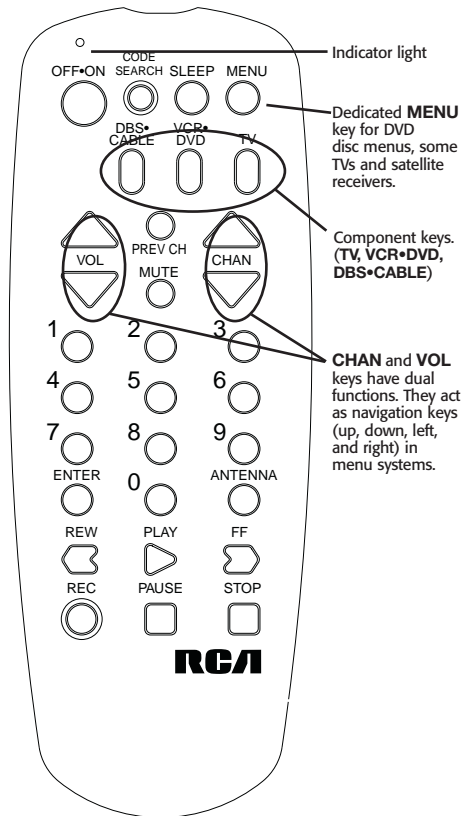

Actual model may vary from picture shown

# Battery Installation and Information


Your universal remote requires two AAA Alkaline batteries (batteries may or may not be included, depending on model). To install the batteries:

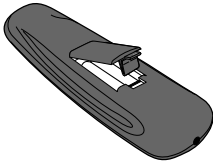

1. Remove the battery compartment cover.
2. Insert the batteries, matching the batteries to the (+) and (-) marks inside the battery compartment.
3. Press and push the battery cover back into place.

**Note:** Reprogramming may be required after batteries are replaced.

## Key Descriptions

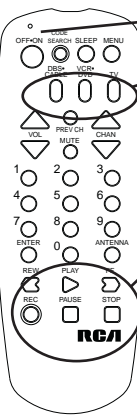

**Indicator Light**—flashes when a valid key is pressed to indicate the remote is working. Status of this light is important when you are programming the remote.

**Component keys (DBS•CABLE, VCR•DVD, TV)**: selects the component you want the remote to operate.

For example, after you've programmed the remote to operate your TV, you must press the **TV** key first to put the remote in TV Mode. While in TV Mode, the **CHAN** keys change the channel on the TV, the **VOL** keys adjust the TV's volume, etc.

**Transport keys—REW (Rewind), PLAY, FF (Fast Forward), PAUSE, STOP**: operate the same as your original VCR or DVD remote control, although key labels may vary (**REVERSE, FORWARD**).

## Other Keys (listed alphabetically)

**0-9 (Number Keys)**: operate the same as number keys on your original remote and are used to enter component codes when programming the remote control with Direct Entry method.

**ANTENNA**: in TV mode, switches between the signal coming from a satellite receiver or cable box and an off-air antenna. In VCR mode, switches between the signal coming from a VCR and a TV.

**CHAN (Channel) UP AND DOWN**: goes to the next highest or lowest channel number in the component channel list, respectively, except for DVDs. In DVDs the **CHAN UP/DOWN** goes to the **NEXT/PREVIOUS** chapter. Additionally, when you're using the remote with On-screen Menus, the **CHAN** keys act as **UP ARROW** and **DOWN ARROW** keys (moving the cursor or highlight up or down).

**CODE SEARCH**: use to program the remote.

**ENTER**: use with Manual or Automatic Code Search method to accept code (See Code Search on page 24). Also, some brands require you to press the **ENTER** key after you enter a channel number. In some menu systems, you must press **ENTER** to select a highlighted item.

**MENU**: accesses DVD disc menus when **VCR•DVD** key is programmed to operate a DVD player. Accesses menu systems of some TVs, a few RCA brand VCRs and satellite receivers. (For more information, refer to Using On-screen Menus section on page 10).

**MUTE**: lowers the TV's volume to its minimum level.

**ON•OFF**: turns component on and off. **Note:** Some RCA, GE and PROSCAN models require that you press the component key to turn ON the component and the **ON•OFF** key to turn OFF the component.

**PREV CH (Previous Channel)**: switches back to previous channel—operates the same as **LAST CHANNEL, GO BACK** or **RECALL** key found on some brands of remote controls.


**REC (Record)**: used with VCR to record programming. You must press the **REC** key twice to start recording.

**VOL (Volume) UP and DOWN**: increases or decreases the TV's volume level. Additionally, when you're using the remote with On-screen Menus, the **VOL** keys act as **RIGHT** or **LEFT ARROW** keys (moving the highlight or cursor right or left).

## Program for TV—Direct Entry Method

In order for the 3 component universal remote to control your TV, you must program it with the TV code that matches your TV. These instructions explain the preferred method of programming the remote—the Direct Entry method.


1. Manually turn on the TV.
2. Locate the enclosed TV Code List. Find your brand of TV.  
**Note:** If your brand isn't listed, use one of the Code Search methods to program this remote control (See Code Search on page 24).
3. Press and hold the **CODE SEARCH** key until the indicator light illuminates. Then release the **CODE SEARCH** key.
4. Press and release the **TV** key. The indicator light blinks and then remains lit.
5. Use the number keys to enter the first code listed for your brand.  
After you enter a valid three-digit code, the indicator light turns off.  
**Note:** If you enter an invalid code, the LED will flash rapidly for 2 seconds. Start over at step 3.
6. Aim the remote at your TV and press the **ON•OFF** key. If your TV turns off, you have found the correct code.
7. Enter the code in the box provided on this page for future reference.
8. If your TV doesn't turn off, repeat steps 3-6 above, entering the next code for your brand.  
If none of the codes work or your brand is not listed, use one of the Code Search methods to program this remote (See Code Search on page 24).  
For a description of each key on the remote control, refer to the Key Descriptions section on page 21.

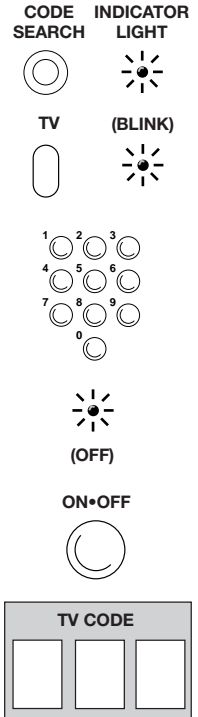

## Program for DVD or VCR—Direct Entry Method

In order for the 3 component universal remote to control your DVD or VCR, you must program it with the code that matches your component. The **VCR•DVD** key can be programmed to operate either a DVD or a VCR player. These instructions explain the preferred method of programming the remote—the Direct Entry method.


1. Manually turn on the VCR or DVD player.
2. Locate the enclosed VCR or DVD Code List. Find your brand in the VCR Codes or DVD Codes section, respectively.  
**Note:** If your brand isn't listed, use one of the Code Search methods to program this remote control (See Code Search on page 24).
3. Press and hold the **CODE SEARCH** key until the indicator light illuminates. Then release the **CODE SEARCH** key.
4. Press and release the **VCR•DVD** key. The indicator light blinks and then remains lit.
5. Use the number keys on the remote to enter the first code listed for your brand.  
After you enter a valid three-digit code, the indicator light turns off.  
**Note:** If you enter an invalid code, the LED will flash rapidly for 2 seconds. Start over at step 3.
6. Aim the remote at the component (VCR or DVD player). Press the **ON•OFF** key. If your VCR or DVD player turns off, you have found the correct code.
7. Enter the code in the box provided on this page for future reference.
8. If your VCR or DVD player doesn't turn off, repeat steps 3-6 above, entering the next code for your brand.  
If none of the codes work or your brand is not listed, use one of the Code Search methods to program this remote (See Code Search on page 24).  
For a description of each key on the remote control, refer to the Key Descriptions section on page 21.

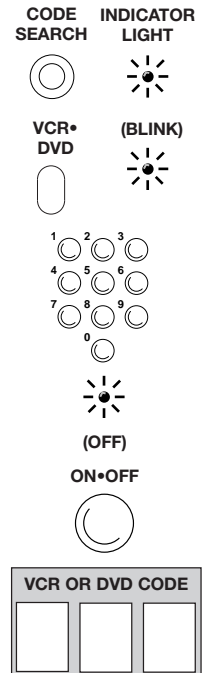

# Program for Satellite or Cable Box—Direct Entry Method

In order for the 3 component universal remote to control your satellite or cable box, you must program it with the code that matches your component. The **DBS•CABLE** key can be programmed to operate either a satellite receiver or a cable box. These instructions explain the preferred method of programming the remote—the Direct Entry method.


1. Manually turn on the satellite receiver or cable box.
2. Locate the enclosed Satellite or Cable Box Code List. Find your brand in the Satellite Codes or Cable Box Codes section, respectively.  
**Note:** If your brand isn't listed, use one of the Code Search methods to program this remote control (See Code Search on page 24).
3. Press and hold the **CODE SEARCH** key until the indicator light illuminates. Then release the **CODE SEARCH** key.
4. Press and release the **DBS•CABLE** key. The indicator light blinks and then remains lit.
5. Use the number keys on the remote to enter the first code listed for your brand. After you enter a valid three-digit code, the indicator light turns off.  
**Note:** If you enter an invalid code, the LED will flash rapidly for 2 seconds. Start over at step 3.
6. Aim the remote at your satellite receiver or cable box and press the **ON•OFF** key. If your Satellite receiver or cable box turns off, you have found the correct code.
7. Enter the code in the box provided on this page for future reference.
8. If your satellite receiver or cable box doesn't turn off, repeat steps 3-6 above, entering the next code for your brand.  
If none of the codes work or your brand is not listed, use one of the Code Search methods to program this remote (See Code Search on page 24).  
For a description of each key on the remote control, refer to the Key Descriptions section page 21.

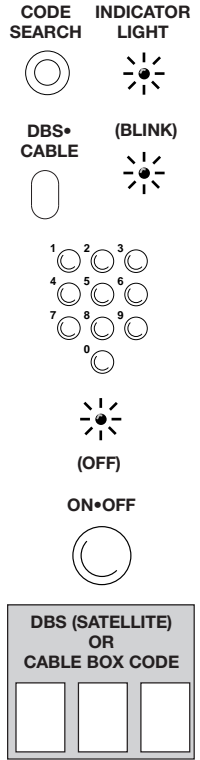

# Code Search Methods


If your component's brand isn't listed in the Code List or you have tried all of the codes for your brand and the remote does not operate your component, use one of the Code Search methods below—Manual Code Search or Auto Code Search. Both Code Search methods search all of the codes because your component's code may be listed under another brand in the code list.

**Note:** The Code Search method may take a long time because the remote searches all of the codes in its memory for the code which operates your component. Therefore, if your brand is listed in the Code List, use the Direct Entry method described on pages 22-23.

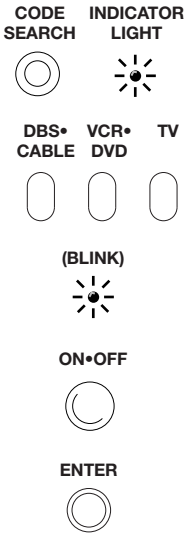

## Manual Code Search

1. Turn on the component you want the remote to operate.
2. Press and hold the **CODE SEARCH** key until the indicator light illuminates. Then release the **CODE SEARCH** key.
3. Press and release the component key that corresponds to the component you want the remote to operate (**TV**, **VCR•DVD** or **DBS•CABLE**). The indicator light blinks once and then remains lit.
4. Aim the remote at the component and press the **ON•OFF** key continuously until the component turns off.  
**Important:** Because there are so many codes, you may have to press the **ON•OFF** key many times—possibly up to 200 times.
5. When the component turns off, press the **ENTER** key to store the code.
6. Use Code Retrieval on the next page to identify the code for your component for future reference.

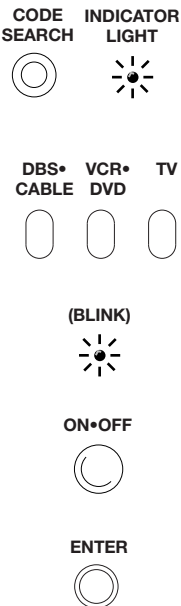

## Auto Code Search

1. Turn on the component you want the remote to operate.
2. Press and hold the **CODE SEARCH** key until the indicator light illuminates. Then release the **CODE SEARCH** key.
3. Press and release the component key that corresponds to the component you want the remote to operate (**TV**, **VCR•DVD** or **DBS•CABLE**). The indicator light blinks once and then remains lit.
4. Aim the remote at the component and press the **ON•OFF** key once. The remote automatically sends every code for the specified component one at a time, with a 3 second delay between each code. Keep the remote aimed at the component throughout the process.
5. As soon as the component turns off, you must press the **ENTER** key immediately so the remote stores the correct code. If you don't press **ENTER** within 3 seconds, the remote will send the next code in the list, and you will have to start over from step 2.
6. Use Code Retrieval to identify the code for your component for future reference.



## Code Retrieval


If you used one of the Code Search methods to program your remote, follow the steps below to find out which code is compatible with your component. Finding the actual code and writing it down will save you time if you ever need to program the remote again (e.g., if programming is lost when you change the batteries).



1. Press and hold the **CODE SEARCH** key until the indicator light illuminates. Then release the **CODE SEARCH** key.
2. Press and release the component key that matches the component's code you are retrieving (**TV**, **VCR•DVD**, or **DBS•CABLE**). The indicator light blinks once and then remains lit.
3. Press and release the **CODE SEARCH** key. The indicator light turns off.
4. Starting with 0 on the keypad, press the number keys in order (0-9) until the indicator light blinks.
5. The number that causes the indicator light to blink is the first digit of your code.
6. Repeat step 4 until you have retrieved all three numbers of the code.
7. Refer to the code box to write down the code for your component within the Direct Entry Section (pages 22-23) for the component just programmed.

## Sleep Feature (Select Models Only)

This feature will automatically turn off your TV at a duration you choose from 1 to 99 minutes.

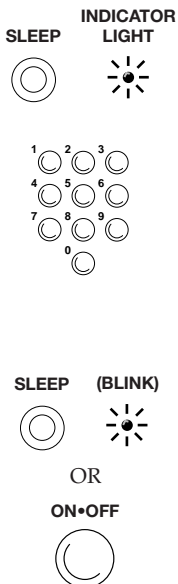

### PROGRAMMING SLEEP FEATURE

1. Press and hold the **SLEEP** key until the indicator light illuminates. Release the **SLEEP** key.
2. Enter time in minutes using the numerical key pad. The indicator light should turn off. (Minute 1 thru 9: press 0 before the actual number. Maximum: 99 minutes).
3. Leave remote aimed at television. (Sleep Feature will not work unless remote is left aimed at television.)

### CANCELING THE SLEEP TIMER

The Sleep Timer program will be canceled and reset to zero by either of the following.

1. Press and hold the **SLEEP** key until the indicator light blinks.
2. Press the **ON•OFF** key, turning TV off.

# Using On-screen Menus


This remote cannot access every menu system of all models and brands of consumer electronics components. However, if you've successfully programmed the **VCR•DVD** key to operate a DVD player, you can access DVD disc menus with the **MENU** key.

The **MENU** key will also access TV menu systems for most RCA, GE and PROSCAN TV's, as well as some other popular brands. Also, some RCA VCR menus are supported by this remote's menu key. This remote also supports select satellite receiver menus.

If this remote's **MENU** key doesn't access the menu system for your component, you'll need to use the original remote to change menu settings.

**Note:** This remote's **MENU** key doesn't support cable box menu systems and some VCR menu systems.

## Accessing a Menu System

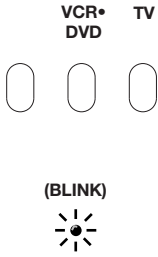

1. Make sure your components are turned on and your TV is set to the component's input.
2. Press the component key on the remote (**TV**, **VCR•DVD** or **DBS•CABLE**).
3. Press the **MENU** key. The indicator light blinks continuously to indicate the remote is in Menu Mode and the component's menu should appear on the TV screen.

## Highlighting and Selecting Menu Items

To navigate On-screen Menus, use the **VOL UP/DOWN** and/or **CHAN UP/DOWN** keys.

**VOL UP/DOWN** keys move the cursor (or the highlight) right/left. **CHAN UP/DOWN** keys move the cursor (or the highlight) up/down.

For RCA, GE or PROSCAN products, press the **MENU** or **ENTER** key to select the highlighted item. If menu items have numbers next to them, you can use the number keys to select an item. Additionally, the **ENTER** key can be used to select menu choices.

For Sony products, pressing the **ENTER** key while in Menu Mode returns you to the previous menu.



This is an example of a DVD disc On-screen Menu. English is the menu choice highlighted. Using this remote control, you would press the **ENTER** key to select English.

To highlight another language, you would press the **CHAN DOWN** key (In the example above, the highlight would move to Español).

### Notes:

All functions in competitive models and brands of products may not be fully supported.

The remote will automatically time out in Menu Mode and the indicator light will stop blinking after approximately 10 seconds of inactivity (no keys being pressed). For DVD menus, the Menu Mode will time out after approximately 15 seconds.

Because of the wide variety of menu formats, some experimenting may be required.

## Exiting a Menu System

To exit Menu Mode, press the corresponding component key on the remote (**TV**, **VCR•DVD** or **DBS•CABLE**). The indicator light goes out and the remote reverts to its normal mode of operation.

# Troubleshooting

## **Problem: The remote can't be programmed to operate your component.**

- You may be too far away from the component or at a wrong angle. This remote uses IR (infrared) technology to communicate with components. The remote sends the code and the component's IR sensor reads the code.  
Therefore, there must be an unobstructed path between the remote and the IR sensor on the component. Move closer and make sure you point the remote at the component (VCR or DVD player when programming the **VCR•DVD** key; TV when programming the **TV** key; cable box or satellite receiver when you're programming the **DBS•CABLE** key).
- If you've entered all of the codes for your brand that are in the accompanying Code List and followed the instructions, try one of the Code Search methods (See Code Search on page 24)
- You must put the remote in the correct mode by pressing the corresponding component key (**TV**, **VCR•DVD**, **DBS•CABLE**) so the remote knows which component you want to operate.
- To program the 3 component universal remote to operate a combination unit (TV/VCR or TV/DVD), first try the VCR or DVD codes for your brand. Some units, however, require that you program both the TV (using the TV codes) and the VCR or DVD (using the VCR or DVD codes) for full operation.

## **Problem: The indicator light does not light when you press a key.**

- You must put the remote in the correct mode by pressing the corresponding component key (**TV**, **VCR•DVD**, **DBS•CABLE**) so the remote knows which component you want to operate.
- You may have pressed an invalid key for the mode the remote is in (for example, **REC** only works in VCR Mode).
- Make sure the batteries are properly installed.
- Replace the batteries with two new AAA batteries. Reprogramming may be required.

## **Problem: The remote does not operate your component.**

- You must put the remote in the correct mode by pressing the corresponding component key (**TV**, **VCR•DVD**, **DBS•CABLE**) so the remote knows which component you want to operate.
- Remove any obstacles between the remote and the component. Make sure to aim the remote at the IR sensor on the component.
- Make sure the batteries are properly installed (See Battery Installation on page 21).
- Replace the batteries with two new AAA batteries. Reprogramming may be required.
- Reset the remote. Remove the batteries, then press and hold the number 1 key on the remote for several seconds to reset the microprocessor inside the remote. Release the number 1 key, reinstall the batteries, and try the remote again. Reprogramming will be required.

## **Problem: The remote is not performing commands properly.**

- You must put the remote in the correct mode by pressing the corresponding component key (**TV**, **VCR•DVD**, **DBS•CABLE**) so the remote knows which component you want to operate.
- Make sure component is "ready" (e.g., DVD player has disc loaded; VCR has tape loaded, etc.)
- You may have pressed an invalid key for the mode the remote is in (for example, **REC** only works in VCR mode).
- If you're trying to turn on an RCA, GE or PROSCAN component, press the component key (**TV**, **VCR•DVD**, **DBS•CABLE**) instead of the **ON•OFF** key.
- If operating a VCR to record, you must press the **REC** key two times.
- If you're trying to change channels, try pressing the **ENTER** key after entering the channel number as this is a requirement of certain models and brands.
- There is a possibility that a programmed code may only be able to control some of your component features (e.g., only turns a component on and off). Follow the steps provided for programming the remote (See Programming Sections on pages 22-23). If the component can be turned on and off, make sure you press the **CHAN UP/DOWN** key to see if the component responds. If not, try the next code from the list.

## **Problem: The VCR won't record.**

- As a safety feature, you must press the **REC** key twice to begin recording.
- Make sure the tape is properly loaded in the VCR.
- Make sure the tape is not write-protected. If the safety tab is removed the tape is write-protected and you cannot record onto that tape.

## **Problem: The remote will not change channels.**

- You must put the remote in the correct mode by pressing the corresponding component key (**TV**, **VCR•DVD**, **DBS•CABLE**) so the remote knows which component you want to operate.
- Press the **ENTER** key after you enter a channel number.

**Problem: The component's menu doesn't appear on the TV screen.**

- The TV must be tuned to the Video Input that matches the manner in which you connected the component to the TV.

For example, if you connected your DVD player to your TV by connecting audio/video cables (usually color-coded yellow, red, and white) to the TV's Input 1 jack, you must tune the TV to its Video Input 1 channel. Remember, different manufacturers label these jacks differently. Consult the instruction manual that came with the TV for more information.

- You must put the remote in the correct mode by pressing the corresponding component key (**TV**, **VCR•DVD**, **DBS•CABLE**) so the remote knows which component you want to operate.
- Menu access isn't supported for all brands. If that's the case, you'll need to use your original remote control to access menu functions for these components.

**If you have further questions, please visit [www.rca.com](http://www.rca.com).**



# RCU403 Code List

Use this code list when programming the three-component universal remote.  
Use the code list on page 16 when programming the eight-component universal remote.

## TV Codes

Abex	.....	172
Admiral	.....001, 046, 047, 083, 095, 173, 191	
Adventura	.....	174
Aiko	.....	016
Akai	.....	002
Alleron	.....	046, 047
Amtron	.....	038
Anam National	.....	003, 038
AOC	.....004, 005, 006, 007, 082	
Apex	.....	236
Audiovox	.....	038
Belcor	.....	004
Bell & Howell	.....001, 048, 049, 073, 083, 162	
Bradford	.....	038
Broksonic	.....000, 004, 239	
Brokwood	.....	004
Candle	.....004, 006, 008, 174	
Celebrity	.....	002
Citizen	.....004, 006, 008, 016, 038, 105, 132, 171, 174, 177, 191	
Colortyme	.....	004, 006
Concerto	.....	004, 006
Contec/Cony	.....012, 013, 038, 063	
Craig	.....	038
Crosley	.....	000, 062
Daewoo	.....038, 062, 130, 171	
Curtis Mathes	.....000, 004, 006, 015, 048, 049, 073, 105, 162, 171, 212	
CXC	.....	038
Daewoo	.....004, 005, 006, 016, 017, 082, 171, 190	
Daytron	.....	004, 006, 171
Dimensia	.....	000, 212
Dumont	.....	004, 151, 217
Dynatech	.....	004
Electroband	.....	002
Electrohome	.....000, 002, 003, 004, 006, 019, 022, 064	
Emerson	.....004, 006, 012, 023, 025, 026, 029, 030, 033, 035, 036, 037, 038, 041, 042, 043, 046, 047, 048, 049, 073, 123, 162, 171, 177, 191, 212	
Envision	.....	004, 006
Fisher	.....048, 049, 051, 073, 162, 180	
Fujitsu	.....	046, 047
Funai	.....038, 046, 047, 189	
Futurtec	.....	038
GE	.....000, 003, 004, 006, 022, 052, 054, 055, 064, 087, 100, 165, 166, 167, 181, 203, 212, 233	
Gibralter	.....	004, 151
Goldstar	.....004, 005, 006, 012, 019, 056, 082, 155, 156, 171, 172	
Grundig	.....038, 046, 047, 171	
Hallmark	.....	004, 006
Harvard	.....	038
Hisense	.....	237
Hitachi	.....004, 006, 012, 013, 059, 060, 063, 135, 136, 145, 148, 179, 185	
IMA	.....	038
Infinity	.....	062, 130
Janel	.....	174
JBL	.....	062, 130
JCB	.....	002
JC Penney	.....000, 004, 005, 006, 008, 013, 022, 052, 054, 055, 063, 064, 072, 082, 087, 100, 104, 105, 109, 132, 166, 167, 171, 172, 181, 203, 212, 233	
Jensen	.....	004, 006
JVC	.....012, 013, 054, 055, 060, 063, 065, 066, 123, 157, 159, 242	
Kawasho	.....	002, 004, 006
Kenwood	.....	004, 006, 019
Kloss Novabeam	.....038, 068, 069, 174, 183	
KTV	.....038, 070, 171, 177	
LG	.....	005, 082
Lera	.....	062, 130
Logik	.....	001, 083
Luxman	.....	004, 006
LXI	.....000, 006, 048, 049, 062, 072, 073, 100, 109, 130, 162, 181, 203, 212, 233	
Magnavox	.....000, 004, 006, 008, 019, 062, 068, 069, 075, 076, 077, 088, 130, 132, 133, 134, 183, 219, 235	
Marantz	.....	004, 006, 059, 062, 130
Megatron	.....	006, 059
Memorex	.....001, 005, 006, 046, 047, 048, 049, 073, 082, 083, 162, 191	
MGA	.....004, 005, 006, 019, 022, 051, 064, 079, 080, 082	
Midland	.....	054, 055, 151, 171, 172, 181
Minutz	.....	052

Mitsubishi	.....004, 005, 006, 019, 022, 051, 064, 079, 080, 082, 125, 135	
Montgomery Ward	.....	001, 083
Motorola	.....	003, 173
MTC	.....004, 005, 006, 082, 105	
Multitech	.....	038
NAD	.....006, 072, 109, 136, 185	
NEC	.....003, 004, 005, 006, 082	
Nikko	.....	006, 016
NTC	.....	016
Onwa	.....	038
Optimus	.....	136, 185
Optonica	.....	095, 173
Orion	.....030, 035, 191	
Panasonc	.....003, 054, 055, 062, 109, 130, 170	
Philco	.....003, 004, 005, 006, 008, 012, 019, 062, 068, 069, 075, 077, 082, 088, 130, 132, 134, 183	
Philips	.....002, 003, 004, 008, 012, 019, 062, 068, 069, 075, 076, 087, 088, 130, 132, 134, 167, 183	
Pilot	.....	004, 171
Pioneer	.....004, 006, 136, 179, 185	
Portland	.....004, 005, 006, 016, 082, 171	
Price Club	.....	105
Prima	.....	238
Prism	.....054, 055	
PROSCAN	.....000, 100, 181, 203, 212, 233	
Proton	.....	004, 006, 012
Pulsar	.....	151
Pulsar	.....	004
Quasar	.....003, 054, 055, 070, 109, 170	
RadioShack	.....000, 048, 049, 073, 162, 212	
RadioShack/Realistic	.....004, 006, 012, 038, 048, 049, 073, 095, 162, 171, 072	
RCA	.....000, 003, 004, 005, 006, 007, 019, 054, 055, 082, 098, 099, 099, 100, 101, 102, 103, 129, 179, 181, 188, 190, 203, 212, 233, 240	
Runco	.....	151, 217
Sampo	.....004, 006, 171, 172	
Samsung	.....004, 005, 006, 012, 013, 015, 017, 019, 082, 104, 105, 106, 171, 172	
Sansui	.....	191
Sanyo	.....004, 048, 049, 073, 080, 162, 169, 180	
Scotch	.....	006
Scott	.....004, 006, 012, 035, 038, 046, 047	
Sears	.....000, 004, 006, 013, 019, 046, 047, 049, 049, 051, 063, 066, 072, 073, 100, 109, 110, 162, 180, 181, 189, 203, 212, 233	
Sharp	.....004, 006, 012, 026, 029, 095, 111, 112, 171, 173	
Shogun	.....	004
Signature	.....	001, 083, 173
Simpson	.....	008
Sound	.....	018
Soundesign	.....004, 006, 008, 038, 046, 047, 132	
Squareview	.....	189
SSS	.....	004, 038
Starlite	.....	038
Supra-Macy	.....	014
Sylvania	.....004, 006, 008, 019, 062, 068, 069, 075, 076, 077, 088, 130, 132, 134, 183, 189	
Symphonic	.....026, 029, 033, 038, 046, 047, 155, 189	
Tandy	.....	173
Tashiko	.....	004, 012
Tatung	.....	003
Technics	.....	054, 055
Techwood	.....004, 006, 054, 055	
Teknika	.....001, 004, 005, 006, 008, 012, 013, 016, 038, 046, 047, 063, 076, 082, 083, 105, 132, 170, 171	
Ter	.....	004, 012
TMK	.....	004, 006
Toshiba	.....000, 048, 049, 072, 073, 105, 109, 118, 160, 162, 190, 241	
Totevision	.....	171
Universal	.....052, 087, 166, 167	
Victor	.....	066
Viking	.....004, 005, 006	
Wards	.....000, 001, 004, 005, 006, 019, 033, 046, 047, 052, 062, 068, 069, 075, 076, 082, 083, 087, 088, 095, 130, 134, 166, 167, 173, 183, 212	
White Westinghouse	.....	000, 001, 190, 191
Yamaha	.....004, 005, 006, 019, 082	
Zenith	.....000, 001, 004, 051, 083, 151, 152, 154, 217	

## VCR Codes

Admiral	.....	001
Adventura	.....	026
Aiko	.....	027
Aiwa	.....	026
Akai	.....003, 007, 111, 112, 119	
American High	.....	021
Asha	.....	013
Audio Dynamics	.....	009, 010
Audiovox	.....	014, 054
Beaumarck	.....	013
Bell & Howell	.....	011
Broksonic	.....	012, 025, 031
Calmex	.....	014, 054
Candle	.....013, 014, 015, 016, 017, 018, 019	
anon	.....	021, 022
Capehart	.....	110
Carver	.....	062
Citizen	.....013, 014, 015, 016, 017, 018, 019, 022, 054	
Colortyme	.....	009
Colt	.....	061
Craig	.....	013, 014, 023, 054, 061
Curtis Mathes	.....000, 009, 013, 016, 018, 021, 022, 024, 087, 091, 115	
Cybernet	.....	013
Daewoo	.....015, 017, 019, 025, 026, 027, 110	
Daytron	.....	061, 110
DBX	.....	009, 010
Dimensia	.....	000
Dynatech	.....	026
Electrohome	.....014, 029, 054	
Electrohome	.....	014
Emerson	.....003, 007, 012, 014, 015, 021, 024, 025, 026, 029, 031, 032, 033, 038, 041, 054, 065, 116, 130	
Fisher	.....011, 023, 049, 051, 118	
Fuji	.....	021, 119
Funai	.....	026
Garrard	.....	026

GE	.....000, 013, 021, 022, 053, 087, 091, 115, 120	
Go Video	.....	131, 138
Goldstar	.....009, 014, 018, 054, 057	
Gradiente	.....	026
Harley Davidson	.....	026
Harman Kardon	.....	009
Harwood	.....	061
Headquarter	.....	011
Hitachi	.....026, 055, 056, 057, 084, 107, 111, 120	
Hi-Q	.....	023
Instant Replay	.....	021
JCL	.....	021
JC Penney	.....009, 010, 011, 012, 013, 014, 021, 022, 051, 054, 055, 056, 061, 062, 084, 107, 118	
Jensen	.....055, 056, 084, 111	
JVC	.....009, 010, 011, 018, 111, 123, 132	
Kenwood	.....009, 010, 011, 016, 018, 111, 123	
KLH	.....	061
Kodak	.....014, 021, 054	
LG	.....	014, 054
Lloyd	.....	026
Logik	.....	061
LXI	.....	014, 054
Magnavox	.....021, 022, 062, 063, 104, 124	
Magnin	.....	013
Marantz	.....009, 010, 011, 016, 018, 021, 022, 062	
Marta	.....	014
Matsushita	.....	021
MEI	.....	021
Memorex	.....001, 011, 013, 014, 021, 022, 023, 026, 031, 054, 104, 130	
MGA	.....	029, 065
GN Tech	.....	013
Midland	.....	053
Minolta	.....055, 056, 084, 107	
Mitsubishi	.....029, 055, 056, 065, 066, 084, 125	
Montgomery Ward	.....	001
Motorola	.....	001, 021

MTC.....	013, 026	Sanky.....	001, 104
Multitech.....	013, 016, 026, 053, 061	Sansui.....	010, 031, 111, 123, 130
NEC.....	009, 010, 011, 018, 111, 123	Sanyo.....	011, 013, 023, 135
Nikko.....	014, 054	Scott.....	012, 015, 025, 032, 038, 065, 116
Noblex.....	013	Sears.....	000, 011, 014, 021, 023, 026, 049, 051, 054, 055, 056, 084, 107, 118
Olympus.....	021	Sharp.....	001, 017, 029, 096
Optimus.....	001, 014, 054	Shintom.....	056, 061, 084, 098, 119
Optonica.....	096	Shogun.....	013
Orion.....	000, 031, 130	Signature.....	001
Panasonic.....	021, 022, 109, 125, 127	Singer.....	021, 061, 128
Pentax.....	016, 055, 056, 084, 107, 120	Sony.....	098, 099, 119
Pentax Research.....	018	STS.....	021, 107
Philco.....	021, 022, 062, 063	Sylvania.....	021, 022, 026, 062, 063, 065, 124
Philips.....	021, 022, 062, 096, 124, 136	Symphonic.....	026
Pilot.....	014	Tandy.....	011
Pioneer.....	010, 055, 123	Tashiko.....	014, 054
Portland.....	016, 017, 019, 110	Tatung.....	111
PROSCAN.....	000	Teac.....	026, 085, 111
Protec.....	061	Technics.....	021, 109
Pulsar.....	104	Technika.....	014, 021, 022, 026, 054, 100
Quarter.....	011	Toshiba.....	015, 049, 051, 055, 065, 113, 116, 118
Quartz.....	011	Totevision.....	013, 014, 054
Quasar.....	021, 022, 125	TMK.....	013, 024
RadioShack.....	001, 014, 054, 096	Unitech.....	013
RadioShack/Realistic.....	011, 013, 014, 021, 022, 023, 026, 029, 049, 054, 096	Vector Research.....	009, 010, 015, 016
Radix.....	014, 054	Victor.....	010
Randex.....	014	Video Concepts.....	009, 010, 015, 016
RCA.....	000, 003, 007, 013, 021, 022, 055, 056, 082, 083, 084, 085, 086, 087, 088, 089, 090, 091, 100, 107, 115, 120, 125, 133	Videoconic.....	013
Realistic.....	001, 011, 013, 014, 015, 021, 022, 023, 026, 029, 049, 054, 096	Wards.....	001, 013, 014, 015, 021, 022, 023, 026, 029, 054, 055, 056, 061, 084, 088, 090, 096, 107, 116
Ricoh.....	128	XR-1000.....	021, 026, 061
Runco.....	104	Yamaha.....	009, 010, 011, 018, 111
Samsung.....	013, 015, 033, 053, 055, 112, 134	Zenith.....	026, 098, 104, 119, 128, 130, 137

## PVR\* Codes

RePlay.....	139
Tivo.....	140

\*PVR's are programmed under the VCR-DVD or VCR key

## DVD Codes

Aiwa.....	350
Apex.....	383, 384, 389
Broksonic.....	379
Daewoo.....	385
Emerson.....	386, 387
Funai.....	387
Go Video.....	372
Hitachi.....	141, 351
JVC.....	146, 161, 352, 373
Kenwood.....	142
Konka.....	353, 354
Magnavox.....	143, 162, 357, 358
Memorex.....	144
Mintek.....	145
Mitsubishi.....	163
NAD.....	386

Onkyo.....	147
Oritron.....	152
Panasonic.....	148, 355
Philips.....	162, 356, 357, 358, 371, 377
Pioneer.....	149, 150, 165
PROSCAN.....	160
Qwestar.....	152
RCA.....	153, 160, 374, 380, 382
Samsung.....	154, 155, 368, 375
Sansui.....	168
Sanyo.....	359, 376
Sharp.....	156, 158, 369
Sony.....	157, 159, 164, 166, 360, 361
Sylvania.....	387
Toshiba.....	167, 169, 362, 363, 365, 366, 381
Zenith.....	364, 367, 378

## TV/DVD Combo

.....	TV	DVD
Broksonic.....	239	379
RCA.....	240	380
Toshiba.....	241	381

## VCR/DVD Combo

.....	VCR	DVD
Go Video.....	131	372
JVC.....	132	373
Philips.....	136	377
RCA.....	133	374

.....	VCR	DVD
Samsung.....	134	375
Sanyo.....	135	376
Zenith.....	137	378

## Portable DVD

RCA.....	382
----------	-----

## Satellite Codes

Alphastar.....	079
Dish Network.....	078
Echostar.....	089
Express Vu.....	091
GE.....	047, 071, 080, 081
Hitachi.....	083, 084
Hughes Network Systems.....	077, 083, 090
JVC.....	082
Magnavox.....	085
Motorola.....	047, 071

Panasonic.....	075
Philips.....	085
Primostar.....	076
PROSCAN.....	047, 071, 080, 081
RCA.....	047, 071, 080, 081
Sony.....	072
Star Choice.....	092
Toshiba.....	073
Uniden.....	086

# Cable Box Codes

ABC.....	.001, 003, 004, 005, 006	RCA.....	.000, 049
Antronix.....	.008, 009	Realistic.....	.009
Archer.....	.008, 009, 011	Regal.....	.022, 035
Cabletenna.....	.008	Regency.....	.017
Cableview.....	.008	Rembrandt.....	.003
Century.....	.011	Samsung.....	.034
Citizen.....	.011	Scientific Atlanta.....	.006, 036, 037, 038
Colour Voice.....	.012	Signal.....	.018
Eastern.....	.017	Signature.....	.003
Garrard.....	.011	Sprucer.....	.000
GC Electronics.....	.009	Starcom.....	.001, 018
GE.....	.000, 003	Stargate.....	.018
Gemini.....	.018	Starquest.....	.018
General Instruments.....	.000, 001, 003, 046, 049	Tocom.....	.004, 023
Hamlin.....	.020, 021, 022, 035	Tusa.....	.018
Hitachi.....	.003	TV86.....	.027
Jasco.....	.011	Unika.....	.008, 009, 011
Jerold.....	.000, 001, 003, 005, 018, 023, 046, 049	United Cable.....	.001
Magnavox.....	.025	Universal.....	.008, 009, 011
Motorola.....	.000, 003, 046	View Star.....	.025, 027
Movie Time.....	.027	Zenith.....	.000, 050, 051
NEC.....	.005		
NSC.....	.027		
Panasonic.....	.000, 048		
Philips.....	.011, 012, 025		
Pioneer.....	.033, 034		
PROSCAN.....	.003		

RC532J US CODELIST REV B


## Limited 90-Day Warranty

THOMSON INC. warrants that for 90 days from date of purchase, it will replace this product if found to be defective in materials or workmanship. Return it postage prepaid to the Product Exchange Center address for prompt, no-charge replacement with a current equivalent. This replacement is THOMSON INC.'s sole obligation under this warranty. THOMSON INC. will not be responsible for any incidental or consequential damages or for any loss arising in connection with the use or inability to use this product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty excludes defects or damage due to misuse, abuse or neglect. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

Product Exchange Center  
11721 Alameda Ave.  
Socorro, TX 79927

# SUPER VALUE PACK!

## 2 REMOTES FOR THE PRICE OF 1!

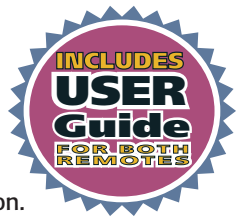

- Replace 8 remotes with a single universal remote control!
- Get a bonus 3 component remote control!
- Easy to use, easy to program, so you have control at the touch of a button.
- Compatible with over 300 of today's most popular brands!
- Full code lists for both remotes included!
- See inside for more details.

Your RCA Universal Remote is compatible with most brands (of infrared remote controlled components manufactured after 1990). Below is a list showing some of those brands. Check the enclosed Code List for a complete listing along with their corresponding popular setup codes for quick and easy reference. **The remote already operates most RCA, GE and PROSCAN products without any programming!**

TV	VCR	DVD	CD	SATELLITE	CABLE	AUDIO
Apex Audiovox Broksonic Citizen Curtis Mathes Daewoo Emerson <b>GE</b> Hisense Hitachi JC Penney JVC Kenwood KLH LG (Goldstar) LXI Magnavox Mitsubishi Mitsubishi Montgomery Ward NEC Orion Panasonic Philco Philips Pioneer Prima <b>PROSCAN</b> Quasar RadioShack/ Realistic <b>RCA</b> Sampo Samsung Sanyo Sears Sharp Sony Sylvania Tandy Teknika Toshiba Victor Wards Yamaha Zenith	Allegro Broksonic Canon Curtis Mathes Daewoo Emerson <b>GE</b> Go Video Hitachi JC Penney JVC Kenwood LG (Goldstar) LXI Magnavox Matsushita Mitsubishi Montgomery Ward NEC Panasonic Philco Philips <b>PROSCAN</b> Quasar RadioShack/ Realistic <b>RCA</b> Samsung Sanyo Sears Sharp Sony Sylvania Tandy Teknika Toshiba Victor Wards Yamaha Zenith	Aiwa Allegro Apex Broksonic Daewoo Emerson Funai <b>GE</b> Go Video Hitachi JBL JVC Kenwood Konka Koss Lasonic Magnavox Memorex Mintek Mitsubishi NAD Onkyo Oritron Panasonic Philips Pioneer <b>PROSCAN</b> Qwestar <b>RCA</b> Samsung Sansui Sanyo Sharp Sony Sylvania Toshiba Venturer Xbox®* Yamaha Zenith	Aiwa ADC ADO Akai Denon Dynatech Emerson Fisher <b>GE</b> Hitachi Inkel JVC Kenwood Luxman NEC Marantz MCS Mitsubishi Nakamichi Onkyo Optimus Panasonic Pioneer <b>RCA</b> Sanyo Sears Sherwood Sony Teac Technics Yamaha	Alphastar Bell ExpressVu Chaparral Dish Network Drake Echostar <b>GE</b> General Instruments Hitachi Hughes Network Systems JVC Magnavox Motorola Panasonic Philips Primestar Realistic <b>PROSCAN</b> <b>RCA</b> Sony Star Choice Toshiba Uniden	ABC Antronix Archer Cableview Century Citizen Contec Garrard <b>GE</b> Gemini General Instruments Hitachi Jasco Jerrold Magnavox Motorola NEC Panasonic Philips <b>PIONEER</b> <b>PROSCAN</b> <b>RCA</b> Realistic Regency Samsung Scientific Atlanta Standard Component Starcom Stargate Starquest Tocom TV86 United Cable Universal View Star Zenith	Aiwa Denon Harman Kardon JBL JVC Kenwood Koss Onkyo Optimus Panasonic Philips Pioneer <b>RCA</b> Sherwood Sony Technics Venturer Yamaha

\*Requires Xbox® DVD playback kit.

\*Bonus RCU403 remote can control up to three components including TV, VCR or DVD, and Satellite Receiver or Cable Box. See inside for more details.

**RCU800 requires 2 AA batteries (sold separately).**  
**RCU403 requires 2 AAA batteries (sold separately).**

©2004 THOMSON INC.  
 10330 North Meridian Street  
 Indianapolis IN 46290  
 Made In Indonesia

**RCU800B US CAW REV B**

Trademark(s) ®Registered Marca(s) Registrada(s)  
[www.rca.com](http://www.rca.com)



0 79000 32267 2

**RCU800B**