

Setting up your TV

1. Access the menu of your TV and make sure the TV is in ANT/AIR mode and not CABLE/CATV mode. Please refer to your TV manual for the exact steps to change this option.
2. Access the menu of your TV and run the "Auto Program" option. Please refer to your TV manual for the exact steps to change this option.
3. Set your TV to your favorite channel.
4. To fine tune local channel reception, rotate the TV44 antenna around the perimeter of the dish until you receive the best possible picture. Tighten the clips so that the antenna is firmly secured to the satellite dish in that position.
5. The TV44 is now ready to receive local programming.

Note: Satellite receiver should be turned off to view local channels.

Limited Warranty

TERK TECHNOLOGIES CORP. (TERK) warrants this product against defects in materials or workmanship for one year from the date of purchase. During this warranty period this product will be repaired or replaced, at TERK's option, without charge.

Please read your instructions thoroughly and use this product only as directed. This warranty does not cover any damage due to commercial use, accident, misuse, abuse, or negligence. This warranty is valid only in the United States of America.

Repair or replacement as provided under this warranty is the exclusive remedy of the consumer. TERK shall not be liable for any incidental or consequential damages for breach of any expressed or implied warranty on this product, except to the extent prohibited by applicable law. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the duration of this warranty.

For more information, visit www.terk.com. or,
for technical support, call 1.800.942.TERK (8375).

78P008A