




# JENSEN®

# VX3014

## 7" Single DIN Multimedia Receiver

AM-FM / DVD / Pandora / Bluetooth / iPhone® / iPod® / USB / AV In

# Operation Manual

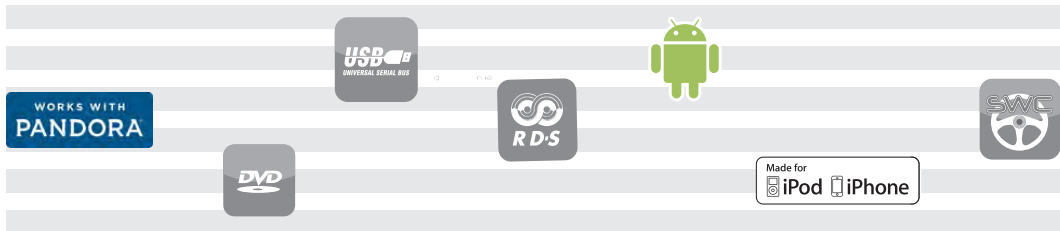

**160** Watts Peak  
40w x 4



---

Thank you for choosing a Jensen product. We hope you will find the instructions in this owner's manual clear and easy to follow. If you take a few minutes to look through it, you'll learn how to use all the features of your new Jensen VX3014 Mobile Multimedia Receiver for maximum enjoyment.

iPod® Control "iPod" is a trademark of Apple Computer, Inc., registered in the U.S. and other countries.

## **CONTENTS**

|  |
|--|
| FCC STATEMENT                          |
| SAFETY PRECAUTIONS                     |
| FEATURES                               |
| FRONT PANEL CONTROLS AND INDICATORS    |
| REMOTE CONTROL OPERATION               |
| REMOTE CONTROL BATTERY REPLACEMENT     |
| QUICK START                            |
| SYSTEM SETTINGS                        |
| AM-FM RADIO                            |
| PLAYBACK OF AUDIO FILES                |
| EQUALIZER CONTROLS MENU                |
| iPod® / iPhone® CONTROLS               |
| BT / HANDS FREE CALLING                |
| AV In1 / AV In2 SOURCES                |
| STEERING WHEEL CONTROL (SWC) OPERATION |
| REAR CAMERA OPERATION                  |
| TROUBLESHOOTING                        |
| SPECIFICATIONS                         |
| CARE AND MAINTENANCE                   |
| NOTES                                  |
| VX3014 COMMON REPLACEMENT PARTS        |





---

## FCC Statement

1. This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.**

This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

## FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 centimeters between the radiator and your body.

"Made for iPod," and "Made for iPhone" mean that an electronic accessory (This head unit) has been designed to connect specifically to iPod, or iPhone, respectively, and has been certified by the developer to meet Apple performance standards.


Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this head unit with iPod or iPhone may affect mobile phone performance.

iPhone and iPod are trademarks of Apple Inc., registered in the U.S. and other countries.


## Safety Precautions

Please read through these operating instructions so you will know how to operate your model properly. After you've finished reading the instructions, keep this manual in a safe place for future reference.

Only connect the unit to a 12-volt power supply with negative grounding.

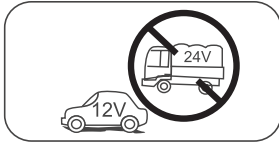

Never install this unit where the operation & condition for safe driving is impaired.

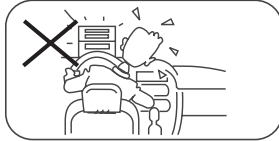


Never use the video display function in the front when driving to prevent the violation of laws & regulations and also to reduce the risk of traffic accident except for using rear view video camera.




Never expose this unit, amplifier and speakers to moisture or water to prevent electric sparks or fire.



Please don't change the fuse on the power cord without professional guidance, using an improper fuse may cause damage to this unit or even cause fire.

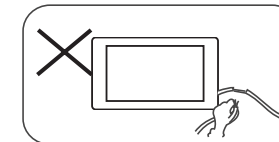

Please contact your nearest dealer if one of the following symptoms is experienced:

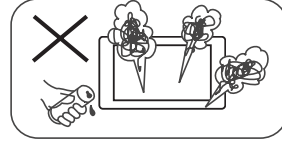

- Water or other objects enter the unit.
- There is smoke.
- Peculiar smell.

To ensure safe driving, please adjust the volume to a safe and comfortable level in case of emergency situations.

- Never disassemble or adjust the unit without any professional guidance. For details, please consult any professional car shop / dealer for inquiry.
- If the front panel or TFT monitor is dirty, please use a clean silicone cloth and neutral detergent to wipe off the spot. Using a rough cloth and non-neutral detergent such as alcohol for cleaning may result in damage to the monitor.
- If any abnormal behavior of the unit is found, please refer to trouble shooting guide of this manual. If no relevant information is found, please press the [RESET] key on the front panel to resume factory default.
- If you have parked the car in hot or cold weather for a long time, please wait until the temperature in the car becomes normal before operating the unit.
- Using the car heater in low temperature environment may result in moisture inside the unit, DO NOT use the unit in this situation. Eject the disc and wipe off the moisture on the disc. If the unit still doesn't work after a few hours, please contact the service center.
- Do not impact the LCD monitor which could cause damage.
- To prevent damage to the screen, avoid touching it with sharp objects.
- To provide a clear demonstration and an alternative for easy understanding to the operation of this unit, graphic illustrations are used. However, some illustrations are different from the actual images displayed on the screen.
- Operate the unit correctly according to this manual to prevent unnecessary problem. The guarantee won't be valid if the problem is caused by inappropriate operation.



---

## FEATURES

Please read the instruction manual for this product before using. The documentation provided will allow the user to fully enjoy all the features of your new Jensen VX3014 Mobile Multimedia Receiver. Please read all of the instructions before beginning the installation and save this manual for future reference. We recommend having your Jensen VX3014 installed by a reputable installation shop.

### DVD

- Audio Equalizer
- Next Chapter and Previous Chapter
- Play/Pause
- Track Direct Entry
- Disc Menu
- Selection Repeat / Track Repeat
- Disc Audio
- Disc Language
- Picture Control

### CD / MP3 / WMA

- CD-Text Compatible
- ID3 Tag Compatible
- Directory Search (MP3 / WMA Only)
- Audible Forward / Reverse Track Search
- Random, Repeat and Intro
- Play, Pause, Stop, Next Track and Previous Track

### AM-FM Tuner

- Region Support: USA, Asia, Japan, Europe, Eur LW (Europe Long Wave), Oirt
- 30 Station Presets (18 FM / 12 AM)
- Auto Stereo / Mono
- Local / Distance
- AutoStore

### iPod®/ iPhone®

- iPod®/ iPhone® via USB
- High Speed Direct Connect Interface to Access iPod® Playlists, Artists, Albums and Songs.
- Power Management Charges iPod®/ iPhone® while Connected



---

## Chassis

- 1.0 DIN (Import / ISO-DIN Mountable)
- Motorized Front Panel
- 7" High Definition TFT LCD
- Resolution: 800h x 480v x RGB WVGA
- Beep Tone Confirmation

## General

- Built-In BT providing Hands-Free operation for safety and convenience and A2DP for streaming music from your smartphone or other BT device.
- External BT Microphone For Best Voice Intelligibility
- Noise / Echo Canceling Microphone Circuitry
- One Composite Video Output for Additional Screens
- Front Panel Audio/Video Input
- 8 Band Equalizer w/ Sub Crossover and Level Control
- Front Panel 3.5mm AV In and Rear Chassis A/V RCA In
- Front, Rear and Sub RCA Line Output - 4VRMS
- Rear Camera Input
- Touch Screen Calibration
- Rotary Encoder Audio Control (Volume Control)
- USB Charging Current - 2.1 Amp
- LCD Screen Dimmer Circuit - Dims Screen at Night Automatically

## REAR CAMERA

The VX3014 is "Camera Ready." Before accessing any camera features, you must purchase and install a rear video camera.

## FRONT PANEL CONTROLS AND INDICATORS



### Controls and Indicators


**Notice:**




The graphic in this manual is for reference only, and may be different from the actual unit. Reference to actual unit is suggested.





---

**1.) SRC Button (Source Menu):** Momentarily pressing the [SRC] button will display the Main Source Menu.

**2.) ROTARY ENCODER / POWER (  ) ON-OFF:** Push the rotary encoder to turn the unit ON. Rotate the control to adjust the volume from 0 to 40. Pressing the control momentarily will mute / un-mute the audio. Press and hold the control for 2 seconds to turn the unit OFF.

**3.) REVERSE [  ] Button:** Press [  ] to Seek backward. In Radio mode, Press [  ] to Seek a previous station.

**4.) FORWARD [  ] Button:** Press [  ] to Seek forward. In Radio mode, Press [  ] to Seek the next station.

**5.) IR REMOTE SENSOR:** Used to receive command signals from the remote control.


**6.) USB/AV CONNECTOR COVER:** Covers the USB/AV interface connector.

**7.) RESET Button:** Press this button to reset the system settings (except password and parental lock settings) and to correct a system halt or other illegal operation. Use the tip of a pen to press the Reset button.

**8.) AV INPUT:** Attach compatible A/V devices.

**9.) TFT MONITOR [OPEN/CLOSE] Button:** Press to open the TFT monitor into viewing position. Press again to close the TFT. With the monitor open, press and hold to enter TFT Angle setting mode. Rotate the volume knob to adjust to the desired angle. Press and hold after adjustment, to save TFT position or let the feature time-out after 4 seconds.

**10.) [ DISP ] Button:** With the monitor open, during DVD playback, press once to view Time, Title, Chapter info or twice for Audio, Subtitle, Angle, and Bit Rate info. With the monitor closed, press to view alternate LCD display information.

**11.) EJECT [  ] Button:** Press this button to eject a DVD/CD/MP3 disc. Disc play is stopped, the disc is ejected and the unit will change to radio operation. If the disc is not removed from the unit and the button is pressed again, the disc will be re-loaded. If the disc is not removed from the disc slot within 10 seconds of being ejected, it will be automatically reloaded to prevent it from being accidentally damaged.

**12.) DISC SLOT:** Accepts DVD/CD/MP3 discs. If the unit is turned on, playback begins when a disc is inserted.



## REMOTE CONTROL FUNCTIONS

1. **SOURCE (SRC) Button:** Press this button to switch between and select available sources. (Radio/Disc/BT/USB/BT Audio/AV In 1/AV In 2/Camera)
2. **EJECT Button (▲):** Press this button to eject a DVD/CD/MP3 disc. Disc play is stopped, the disc is ejected and the unit will change to radio operation. If the disc is not removed from the unit and the button is pressed again, the disc will be re-loaded. If the disc is not removed from the disc slot within 10 seconds of being ejected, it will be automatically reloaded to prevent it from being accidentally damaged.
3. **AUDIO Button:** Press to display and select the audio language in DVD mode. Each time the button is pressed, the language changes.  
**NOTE: The languages for audio vary from disc to disc.**
4. **VOLUME Button (VOL + and -):** Press these buttons to increase or decrease the playback volume.
5. **BAND Button:** Press this button to scroll though preset stations or when in disc mode, this button is used for Fast playback / Slow playback. Press this button to answer an incoming BT phone call.
6. **REPEAT (RPT) Button:** Repeat playback.
7. **MUTE Button:** Press this button to turn the audio output ON and OFF.
8. **POWER Button (⏻):** Press this button to turn the unit ON and OFF.
9. **SUBTITLE Button:** Press to display and select the subtitle language in DVD mode. Each time the button is pressed, the subtitle language changes.  
**NOTE: The type and number of languages for subtitles vary from disc to disc.**
10. **MENU Button:** Press this button to access the root menu of a DVD or CD during playback. The disc will return to normal playback and the root menu will disappear if no selection is made within 10 seconds.
11. **FAST FORWARD [▶▶] Button:** Press this button to forward Disc play 2x, 4x, 8x or 20x normal speed. Press this button while in Radio mode to search available radio station by increasing tuning frequency.





- 
- 12. NEXT (▶▶) Button:** Press this button to skip to the next chapter, track or song during playback of a disc. Press this button while in Radio mode to search available radio station by increasing tuning frequency.
  - 13. PLAY / PAUSE (▶/||) Button:** Press this button to pause the playback of a disc. Press this button again to resume normal playback.
  - 14. PREVIOUS (◀◀) Button:** Press this button to go back to the previous chapter, track or song during playback of a disc. Press this button while in Radio mode to search available radio station by decreasing tuning frequency.
  - 15. FAST REVERSE (◀◀) Button:** Press this button to reverse Disc play 2x, 4x, 8x or 20x normal speed. Press this button while in Radio mode to search available radio station by decreasing tuning frequency.
  - 16. NUMBER Buttons (1-6):** Press these buttons to directly access chapters and tracks, dialing phone numbers, or entering passwords.
  - 17. RANDOM (RDM) Button:** Press this button to play tracks or chapters in random order while playing a disc.


#### NOTES ON REMOTE CONTROL USAGE


- Aim the remote control at the TFT/screen.
- Remove the battery from the remote control or insert a battery insulator if the remote control will not be used for a month or longer.
- DO NOT store the remote control in direct sunlight or in a high temperature environment, or it may not function properly.
- The battery will last for 6 months under normal conditions. If the remote control does not work, please change the battery.
- Use lithium battery type CR2025 (3V) only.
- DO NOT recharge, disassemble, heat or expose the battery to fire.
- Insert the battery in the proper direction according to the (+) and (-) polarity marks.
- Store the battery in a place where children cannot reach it to avoid the risk of a choking accident.

---

## QUICK START GUIDE

### Turning the Unit ON-OFF


Press the front panel rotary control [  ] to turn the unit ON.

To turn the unit OFF, press and hold the rotary control [  ] for 2 seconds.

### Selecting an Audio/Video Source, BT or Backup Camera

To access an Audio/Video source:

1. Momentarily press the front panel SRC button or touch the " < " Back arrow in the top left-hand corner of the user interface.

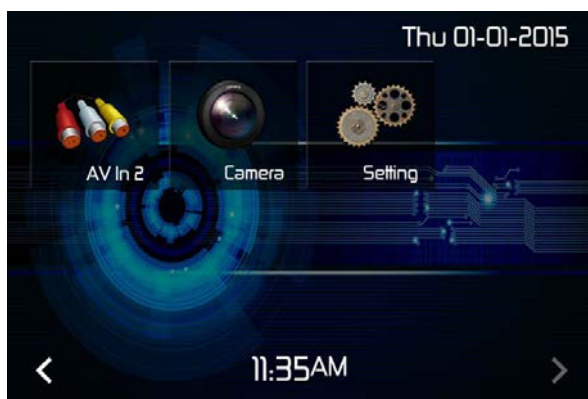

**VX3014 Main Menu Screen**

2. Touch the desired source icon on one of the two main menu screens.  
Screen 1 of 2: Radio, Disc, BT, USB.  
Touch page arrow ( > ) at the bottom of the screen to access Screen 2 of 2:  
BT Audio, AV IN 1, AV IN 2, or Camera.



## Mute

Press the rotary control on the front panel or press the [MUTE] button on the remote control to mute the volume from the unit. Press again to un-mute.

## Volume Adjustment

### Volume Increase/Decrease

To increase or decrease the volume level, turn the rotary control on the front panel. When the volume level reaches "0" or "40", a beep sounds, indicating that the adjustment limit has been reached. The screen displays the volume level for 2 seconds.

### Programmable Turn-On Volume

To set the Turn-On Volume, rotate the rotary control (Volume control) to the desired volume level, then press and hold the rotary control while the volume bar is shown on the screen.

## Audible Beep Confirmation

An audible beep tone confirms each function selection. The beep tone can be disabled through the Setup menu.

## Resetting the System

Soft Reset - To correct a system halt or other illegal operation, use the tip of a pen to press and release the Reset button located just below the Eject button.



[RESET] Button

### System Reset Button

For a Hard Reset - Go to "Settings" > DVD tab > Load Factory > Reset. After a "System Reset", the unit will restore all default settings.

## Change Aspect Ratio (DVD / AV In Sources Only)

Press the [WIDE] button on the remote control to adjust the aspect ratio.

### Image Settings (DVD / AV In Sources Only)

1. Enter image setting mode by pressing the [PIC] Button on the remote control.
2. Select the item to be adjusted and touch the Left or Right direction icons [◀] / [▶] on the user interface to adjust the value.
3. To exit image setting mode, press the [PIC] Button on the remote control again or simply stop making adjustments.

## Equalizer Controls

Equalizer (EQ): Adjustments can be made after entering one of the audio/video sources (Disc, Radio, USB, AV IN 1, or AV IN 2) Touch the Equalizer (EQ) icon to view the Equalizer Control Screen to make adjustments to the audio Balance and Fader levels. Touch the return icon to return to the current source.

## Playing a Disc

To begin playback of an Audio/Video Disc:


1. Press the front panel Power/Volume/Mute control knob to turn the unit ON.
2. Insert a disc with the label side facing UP and playback will begin automatically.

## Parking Brake Inhibit

When the pink "Parking" wire is connected to the vehicle Parking Brake circuit, the front TFT monitor will display video when the Parking Brake is engaged.

## SYSTEM SETTINGS

1. Press the Menu button to display the Main SRC Menu.
2. Touch the Settings icon [ ⚙ ] and the Settings Menu is displayed.

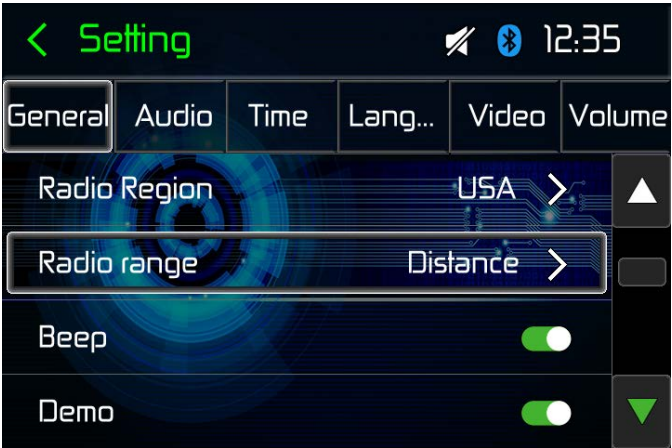



## General Settings

1. Touch [ General ], if necessary.
2. Touch to highlight a setting to display/select an option.

| General settings | Options                           | Description   |
|------------------|-----------------------------------|---|
| Radio region     | USA/Asia/Japan/Europe/Eur LW/Oirt | Select one that matches your location.                                |
| Radio range      | Local                             | Select Local to receive only stations with extremely strong signal.   |
|                  | Distance                          |   |
| Beep             | On                                | Turn-ON the beep sound. Each time you press a button, the unit beeps. |
|                  | Off                               | Turn-OFF the beep sound.  |
| Calibration      | Start                             | Calibrate the touch screen.   |
| Demo             | On                                | Turn-ON Retail Demo Mode.   |
|                  | Off                               | Turn-OFF Retail Demo Mode   |


4. Touch the " < " Back arrow in the upper left corner of the display to exit.

## Calibration

Calibrate the touch screen using the calibration setting function.

### Recalibrating the Touch Screen:

1. Press the [ Calibration ] option on the setup menu to enter.
2. Touch [ Yes ] to enter.
3. Press and hold the center of [ + ] for 5 seconds, the [ + ] will move automatically.
4. Aim at center of [ + ], follow the path as shown in the figure. Once steps 1-4 are complete the system will automatically exit calibrating mode.

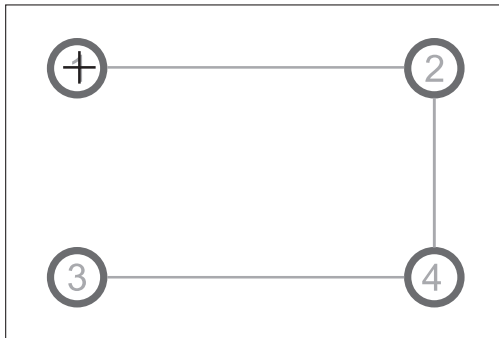

**Calibration Screen**

## Video Settings

1. Touch [Video].
2. Touch an option repeatedly to select.

| Video settings | Options | Description  |
|----------------|---------|--|
| Aspect Ratio   | Full    | Adjust aspect ratio.   |
|                | Normal  |  |
| Rear Camera    | Mirror  | Reverse the camera image as if looking through a rear-view mirror. |
|                | Normal  |  |

3. Touch the return icon to exit and return to the previous screen.

## Time Settings

1. Touch [ Time ].
2. Touch an option repeatedly to select:

| Sound settings | Options              | Description   |
|----------------|----------------------|---|
| Date           | Year / Mon / Day     | Touch [ ▲ ] or [ ▼ ] to set year, month and day.  |
| Clock mode     | 12Hr/24Hr            | Touch [12Hr] or [24Hr] to switch clock mode.  |
| Time           | Hour / Min / AM / PM | Touch [ ▲ ] or [ ▼ ] to set hour and minutes.<br>Touch [ ▲ ] or [ ▼ ] to set AM/PM (only for 12Hr). |

3. Touch the return icon to exit and return to the previous screen.

## Audio Settings

1. Touch [ Audio ].
2. Touch an option repeatedly to select.

| Audio settings   | Options | Description  |
|------------------|---------|--|
| Subwoofer        | ON      | Turn-ON the subwoofer.   |
|                  | OFF     | Turn-OFF the subwoofer   |
| Subwoofer filter | 80Hz    | Select a crossover frequency to set a cut-off frequency for the subwoofer's LPF (low-pass filter). |
|                  | 120Hz   |  |
|                  | 160Hz   |  |
| Loudness Switch  | ON/OFF  | Select low frequency boost.  |
|                  |         |  |

3. Touch the return icon to exit and return to the previous screen.

## Language Settings

1. Touch [ Language ].
2. Touch an option repeatedly to select.

| Language settings | Description  |
|-------------------|--|
| OSD               | Select on-screen display language.                                     |
| DVD audio         | Select DVD audio language. Options available depending on DVD disc.    |
| DVD subtitle      | Select DVD subtitle language. Options available depending on DVD disc. |
| Disc menu         | Select DVD menu language. Options available depending on DVD disc.     |

3. Touch the return icon to exit and return to the previous screen.

## BT Settings

1. Touch [BT].
2. Touch an option repeatedly to select.

| BT Settings  | Options | Description  |
|--------------|---------|--|
| BT           | ON      | Turn-ON the BT function.   |
|              | OFF     | Turn-OFF the BT function.  |
| Auto connect | ON      | If the pre-paired device is within the effective range, the unit re-connects to pre-paired device automatically. |
|              | OFF     | Need to re-connect manually.   |
| Auto answer  | ON      | Answer paired phone call automatically.  |
|              | OFF     | Answer phone call manually.  |
| Pairing code |         | Set the password for pairing the unit with other BT devices.   |

3. Touch the return icon to exit and return to the previous screen.

## DVD Rating

1. Touch [ DVD ].
2. Touch an option repeatedly to select.

| DVD rating   | Options  | Description  |
|--------------|----------|--|
| Set password |          | Set password to restrict the play of discs. The default password is 1234.    |
| Rating level | Kid safe | Acceptable for children.   |
|              | G        | Acceptable for general viewers.  |
|              | PG       | Parental guidance suggested.   |
|              | PG-13    | Unsuitable for children under age 13.  |
|              | PG-R     | Recommend parents to restrict viewing for children under 17.                 |
|              | R        | Restricted re-parental guidance is advised for children under the age of 17. |
|              | NC-17    | Unsuitable for children under age 17.  |
|              | Adult    | Acceptable for adults only.  |



|              |   |
|--------------|---|
| Load factory | Restore to default settings.  |
| Version Info | The Version menu is used to identify the model, hardware and software versions. |

3. Touch the return icon to exit and return to the previous screen.

### Adjust Source Volumes (Relative Level)


You can set different relative volumes for different sources.

1. Touch the [Volume] icon to display and access the Volume Setting Sub-Menu

2. Touch the source to be adjusted.

3. Touch [▲] or [▼] to assign value: 0 to 12. Default is "6", which is 0dB. Setting "0" is -6dB. Setting "12" is +6dB.

4. Touch the return icon to exit and return to the previous screen.

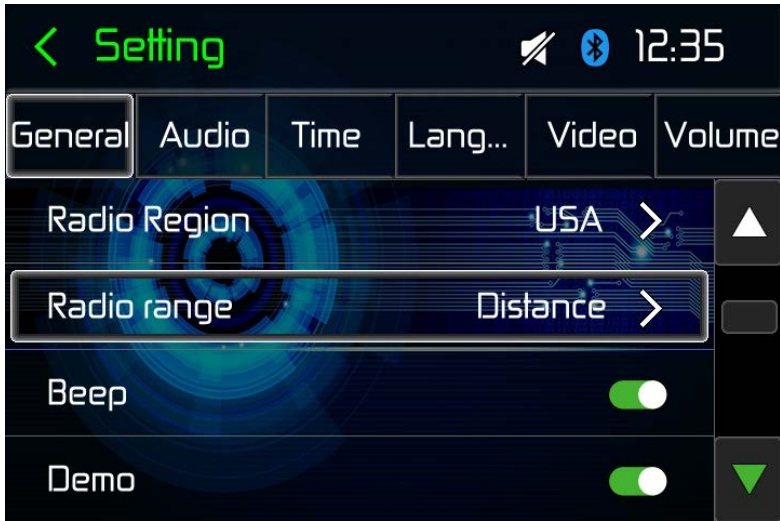



---

## RADIO TUNER MODE

### Select Radio as Playing Source

Open the SOURCE MENU and then touch [Radio].

### Selecting a Radio Band

Press th BAND button on the remote control or touch the BAND icon on the user interface to select one radio band among FM1, FM2, FM3, AM1 and AM2.

### Tuning AM-FM Stations

#### Seek Tuning

Press the [▶▶] / [◀◀] Buttons on the remote control or touch the [▶▶] / [◀◀] icons on the user interface to Seek the next / previous radio station.

To stop searching, repeat the operation above or press other buttons having radio functions.

**NOTE: When a station is received, searching stops and the station is played.**

#### Manual Tuning

##### Method 1:

Press and hold [▶▶] or [◀◀] icon for 1 second to enter manual tuning mode and increment one frequency step. Press and hold [▶▶] or [◀◀] again to increment to the next frequency step. Continue this method until the desired frequency is tuned in.

##### Method 2:

1. Touch the numeric keypad icon [⌨]. Numeric keyboard is displayed, touch numbers to input frequency.
2. Touch [✕] to delete the input numbers step by step.
3. Touch [OK] to enter.

#### Preset Stations

The unit has 5 bands, such as FM1, FM2, FM3, AM1, AM2, and each band can store 6 stations; hence the unit can store 30 stations in total.

#### Storing Radio Stations in Memory

1. Tune to a desired station.
2. Touch and hold one of the presets (1 to 6) to save the selected station.



## AutoStore (AS)

Touch AUTOSTORE to search radio stations and store the 6 strongest stations in the current band automatically.

## Recalling a Station

1. Select a band.
2. Touch an on-screen preset button to select the corresponding stored station.

## Local / Distance

When the Local function is on, only radio stations with a strong local radio signal are played. To activate the Local function in the AM/FM tuner mode, touch [⋮] / MORE on the screen. The Options tab is revealed. Choose Radio Local or Distance. When the Local function is active, LOCAL will appear on the screen. When the Distant function is active, DISTANCE will appear on the screen.

## EQ Selection

Touch [⋮] / MORE and the Option menu is displayed. Touch EQ to enter EQ settings.

## RDS (Radio Data System)

RDS transmits data to the radio which displays information such as station identification, song artist, and song title.

RDS service availability varies with areas/regions. If RDS service is not available in your area, the following service will not be available.

## Adjust RDS Settings

1. In Radio menu, touch [⋮] / MORE. The Option menu is displayed.
2. Touch on the selected option to change the setting:
  - [CT]: Turn on or off "Clock Time" synchronization function.
  - [PTY]: Show PTY list.

## CT (Clock Time)

Some stations broadcast the time and date within the encoded RDS signal. The clock time is automatically adjusted when "CT" is set to ON.

**Note: Stations broadcasting close to time zones may not broadcast the correct time in your particular area. In this case, turn CT Off and manually set the time.**

## PTY (Program Type)

PTY is the function that displays the program category of the current station such as category (news, sports, talk etc.) Use the scroll bar to select various category codes.

Once a category code is selected the PTY options will display on the screen.

When one PTY option is touched (e.g. News), auto search for next available PTY by increasing tuning frequency until the PTY of the next station matches the current. If no matched PTY has been found, the unit will return to the original radio frequency.



## PLAYBACK OF AUDIO FILES

### Compatible Audio Discs Types

This system will play the following types of discs:

- DVD - DVDs that contain audio and/or video.
- Audio discs - Audio CD's that contain audio files.
- MP3 discs - A disc that contains audio, video and image files (for example, a CD-R with downloaded MP3 files).

**NOTE: This unit is designed to play pre-recorded (original) CD/DVDs. Some burned CD / DVDs may not play due to different recording formats.**

### DVD Operation

#### DVD Main Menu

**NOTE: When properly installed, DVD video cannot be displayed on the main TFT screen unless the parking brake is applied. If you attempt to play a DVD while the vehicle is moving, the TFT screen displays:**

#### **Warning!!!**

It is illegal to view video while driving or operating a motor vehicle. Set parking brake to view video.

From the Main Menu Screen touch the DISC Icon or insert a disc into the disc slot, label side up. Playback begins when a disc is inserted correctly.

#### **Insert a disc**

Upon inserting a disc, the unit will switch to [DISP] mode automatically.


#### **Eject The Disc**

Press the [▲] key on the front panel or remote control to eject the disc.

#### **Touch Screen Controls**

The touch key areas for DVD playback are outlined below:

- A: Return to the main menu
- B: Disc type
- C: Time display
- D: Play the video and display playback information
- E: Display onscreen control menu

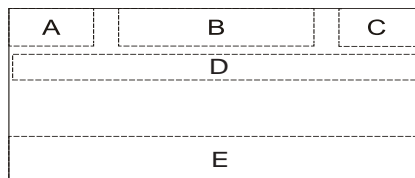

**Screen Control Areas**



---

## Controlling Playback

To access the on-screen controls, touch the screen anywhere except for the upper left corner and touch again to cancel display.

## Connecting a USB Device

1. Open the USB door.
2. Connect a USB device into the USB connector. Play starts automatically.

### NOTES:

1. **If there are audio files supported on the USB stick, the system will enter the audio files menu automatically.**  
**If there are no audio files, but there are video files supported on the USB stick, the system will enter the video files menu automatically.**  
**If there are no audio or video files, but there are picture files supported on the USB stick, the system will enter the picture files menu automatically.**  
**If there are no audio/video/picture files supported on the USB stick, the screen will display: There are no audio/video/picture files supported.**
2. **Not all USB devices are compatible with the unit.**

## Play

Once a disc, or a USB device is inserted, play starts automatically.

## Pause

When playing audio/video files, press the [▶||] key on the remote control or open the on-screen control icons menu and then touch the [▶||] icon, press the [▶||] again and continue to play.

## Stop

For audio files or video files, press the Stop button on the remote control or open the on-screen control icons menu and then touch the Stop icon to stop playback.

Press the [▶||] to resume from the pause point.

Touch the Stop icon again to stop entirely or press the Stop button on the remote control.

## Previous/Next

Touch [◀◀] / [▶▶] key on the screen to skip to previous / next track / chapter.

## Search for a Folder

### For Folder Control

1. Touch [📁] to display all available folders.
2. Touch a folder, then touch the desired file .
3. Touch the file again to start play.

### For Audio Files

1. Touch [🎵] to display all available audio folders.
2. Touch a folder, then touch the desired file .
3. Touch the file again to start play.



### Video Files

1. Touch Video icon [ ] to display all available video folders.
2. Touch a folder, then touch the desired file.
3. Touch the file again to start play.

### Picture Files

1. Touch Picture icon [ ] to display all available picture folders.
2. Touch a folder, then touch the desired file.
3. Touch the file again to start play.

### Repeat Playback

Press the Repeat [RPT] Button on the remote control or open the on-screen control icons menu and then touch the Repeat[ ] icon to switch the repeat modes as below:

| Disc type    | Repeat mode   |
|--------------|---|
| DVD          | Repeat chapter → Repeat title → Repeat all → Repeat off |
| VCD(PBC off) | Repeat one → Repeat all → Repeat off                    |
| CD           | Repeat one → Repeat all → Repeat off                    |
| MP3/WMA      | Repeat one → Repeat folder → Repeat all → Repeat off    |
| MPEG         | Repeat one → Repeat folder → Repeat all → Repeat off    |
| Picture      | Repeat one → Repeat folder → Repeat all → Repeat off    |

#### Repeat Mode

### Repeat A-B

When a DVD, VCD is played back, you can play back the contents between the time points from A to B repeatedly:

Repeat A- → Repeat A-B → RepeatA-B Off

#### Repeat A-B ON and OFF

### Random Play

You can play audio tracks/files in random order. During play, press the [RDM] key on the remote control repeatedly to turn Random play ON or OFF.

**NOTE: When [RDM] is off, the unit resumes play from the current sequence.**

### Playback Control Function

This function is available for the VCD discs with Playback Control function (Ver 2.0 or higher). Press the [MENU] Button on the remote control or open the on-screen control icons menu and then touch the [ ] icon repeatedly to activate this function. Press again to cancel.

#### Notes:

1. When Playback Control is ON, playback goes back to the track list and starts from the first track.
2. When Playback Control is on, fast motion playback, slow motion playback or skip search is available but repeat playback and searching for a particular chapter or track is prohibited.
3. If you use random playback, scan playback or searching playback when Playback Control is ON, Playback Control will be OFF automatically.



## Select Audio Mode

When playing VCDs, the user can select an audio mode (R/L/Stereo).

1. During playback, touch the bottom half of the screen to display menu on the screen.
2. Touch the Next icon [ ⏭ ] to display the 2nd menu.
3. Touch the Audio icon [ 🔊 ] repeatedly until the audio mode is selected.

## Select Subtitle Language

For DVD discs that contain two or more subtitle languages.

1. During play, touch the screen to display menu on the screen.
2. Touch the Next icon [ ⏭ ] to display the 2nd menu.
3. Touch the Language icon [ 🗨 ] repeatedly to select a language. The selected language is displayed.

## Change Viewing Angle

Some DVDs contain alternate scenes, such as scenes recorded from different camera angles.

For such DVDs, you can select from the available alternate scenes.

1. During playback, touch the screen to display menu on the screen.
2. Press the Angle icon [ 📐 ] repeatedly on the remote control. The viewing angle is changed.


## Video Setup

Touch the Settings icon [ ⚙ ] to access video setup mode, touch Left or Right direction icons [ ⏪ ]/[ ⏩ ] to set the desired effect. You may set the brightness, contrast, and saturation of the video output from 1 to 20.

## Playback Information

Touch the screen during playback of a DVD or VCD disc and the playback information will be displayed on the top area of the TFT.

### For DVD

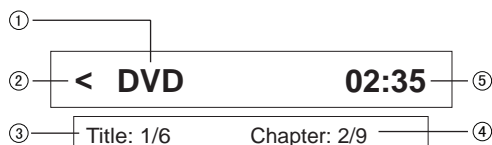


### DVD Information Display

1. Disc type.
2. Return to the main menu.
3. DVD Title information. "1/6" indicates that this DVD has 6 titles and the title playing back now is the first title.
4. DVD Chapter information. "2/9" indicates that current title has 9 chapters and the chapter playing back now is the first chapter.
5. Time display.



## For VCD

1. Disc type.
2. Return to the main menu.
3. VCD Track information. "1/16" indicates that this VCD has 16 tracks and the track playing back now is the first title.
4. Time display.

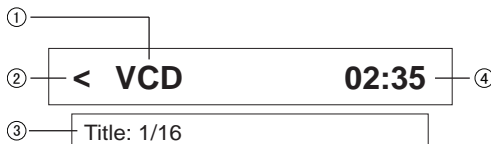

VCD Information Display


## Elapsed Time

1. Elapsed time of the current track.
2. Total time of the current track.




Elapsed Time Display

## Direct Track Entry

 
To select a track directly, touch the [  ] icon on screen control to display the direct entry menu. Enter the desired track using the on-screen number pad. Press [ OK ] to the selected track.

## Rotate Pictures

1. When viewing pictures, touch the screen to display menu on the screen.
2. Touch the Rotate Icon [  ] repeatedly to rotate the picture.

## Zoom





The user can zoom in pictures for a close view.

1. When viewing pictures, touch the screen to display menu on the screen.
2. Touch [  ] repeatedly to zoom in the picture.






# General Disc Information

## Disc Properties

| Symbol  | 12cm Disc Properties   | Max Play Time                             |
|---|--|---|
|  | Single side single layer (DVD-5)<br>Single side double layer (DVD-9)   | (MPEG 2 Method)<br>133 minutes            |
|  | Double side single layer (DVD-10)<br>Double side double layer (DVD-18) | 242 minutes<br>266 minutes<br>484 minutes |
|  | Single side single layer (VCD)   | (MPEG 1 Method)<br>74 minutes             |
|  | Single side single layer   | 74 minutes                                |

## Disc Symbols

| Symbol  | Meaning  |
|---|--|
|    | Number of voice languages recorded. The number inside the icon indicates the number languages on the disc (maximum of 8).  |
|    | Number of subtitle languages available on the disc (maximum of 32).  |
|    | Number of angles provided (maximum of 9).  |
|  | Aspect ratios available. "LB" stands for Letter Box and "PS" stands for Pan/Scan. In the example on the left, the 16:9 video can be converted to Letter Box video.   |
|  | Indicates the region code where the disc can be played. <ul style="list-style-type: none"> <li>• Region 1: USA, Canada, East Pacific Ocean Islands</li> <li>• Region 2: Japan, Western Europe, Northern Europe, Egypt, South Africa, Middle East</li> <li>• Region 3: Taiwan, Hong Kong, South Korea, Thailand, Indonesia, South-East Asia</li> <li>• Region 4: Australia, New Zealand, Middle and South America, South Pacific Ocean Islands / Oceania</li> <li>• Region 5: Russia, Mongolia, India, Middle Asia, Eastern Europe, North Korea, North Africa, North-West Asia</li> <li>• Region 6: Mainland China</li> <li>• ALL: All regions</li> </ul> |



---

## EQUALIZER CONTROL MENU

### Adjusting Equalizer Controls

The Equalizer adjustment screen allows the user to easily adjust the audio tone controls to suite individual listener preferences.

**Note:** Set the EQ controls for the most natural sound.

The Balance / Fader level options of a selected audio / video source (Disc, Radio, USB, AV IN 1, or AV IN 2, etc) are adjusted through the Equalizer adjustment screen.

### Equalizer (EQ)

Touch the Equalizer (**EQ**) icon to view and select the EQ settings.

The following equalizer frequencies are available for adjustment:

- 80Hz
- 160Hz
- 320Hz
- 600Hz
- 1kHz
- 3kHz
- 8kHz
- 16kHz


An adjustment range of +16dB to -16dB is available for each frequency band.



---

## Adjusting the Fader and Balance

The user can adjust front/rear fader settings, L/R balance settings, and subwoofer levels here.

1. Enter the EQ setup mode.
2. Touch the  icon in the EQ interface menu.

**Balance** - This feature is used to balance the audio output levels between the left and right side of the vehicle. Touch the ◀ or ▶ icons to change the balance control settings -12 (Left) to +12 (Right). The setting can also be changed by touching screen within the grid to move the blue sphere.

**Fader** - This feature is used to fade the audio output levels between the front and rear of the vehicle. Touch the ▲ or ▼ icons to change the fade control settings -12 (Rear) to +12 (Front). The setting can also be changed by touching screen within the grid to move the blue sphere.

**Sub (Subwoofer)** - This feature is used to reduce or increase the subwoofer sound level. Touch the slide bar ◀ or ▶ icons to adjust the subwoofer volume from -12 to +12. This setting will vary depending on the input level setting of your subwoofer amplifier.

To exit Balance-Fader, touch the return icon on the top left corner of the screen.



---

## iPod® / iPhone® CONTROLS

### Accessing iPod® Mode

The user can control an iPod® / iPhone® using the touch screen to access albums, songs, etc.

The unit will automatically switch to iPod® mode when an iPod® or iPhone® is plugged into the front panel USB connector. Also the iPod® can be accessed from the Main Menu Screen by touching the iPod® icon (only available when an iPod® or iPhone® is connected to the front panel USB connector)

**NOTE: For audio connectivity, the iPod® / iPhone® must be connected to the VX3024 using the iPod® / iPhone® adapter cable that came with the iPod / iPhone device (also available separately). Be sure your iPod® / iPhone® has the latest Apple firmware installed to avoid connectivity issues**

### iPod®/iPhone® Main Menu

To access the iPod® mode touch [iPod] on the main menu to enter iPod® menu. Access iPod menu from here. Touch ▲ or ▼ icons to browse menu.

**Note: Video cannot be viewed using the standard Apple Lightning cable.**

### The on-screen icons and touch key areas are outlined below;

**SRC Icon** - Touch this icon to return to the Main Menu Screen.

**iPod** - Displays the current source.

**Track Number** - Lists the current audio track playing and the total number of audio tracks in audio mode. Lists the current video folder and the total number of video folders in video mode.

**Time Display** - This indicator displays the time as entered by the user in the Settings Menu.

**More ( ▲/▼ )** - Touch the ▲/▼ icons to display the next or previous page of the iPod® menu.

**( ⏪ ) Previous** - Touch this icon to play the previous track.

**( ▶/⏸ ) Play/Pause** - Touch this icon to begin playback. Touch this icon again to





---

pause playback.

(▶▶) **Next** - Touch this icon to play the next track.

**List** - Touch this icon to access the list of audio and video files contained on the iPod®. Touch a folder icon and the contents of the folder will be displayed. Touch a desired track icon twice and the track will begin playing.

(⌘) **Shuffle** - Touch this icon to play audio or video tracks in a random order. The icon will light on the main TFT LCD screen.

(↺) **Repeat** - In audio mode touch this icon to repeat playback of the current audio track. The icon on the TFT will display and a small letter "A" will appear below the icon and the all the audio tracks will repeat. Touch this icon again and single track will repeat. The icon on the TFT will display and small number "1" will appear below the icon. Touch the icon again the repeat function will be cancelled. The icon on the main TFT LCD screen will dim and playback of the remainder of the tracks will resume.

(EQ) **Equalizer** - Touch this icon to access the Equalizer Control Menu. (See "Adjusting Equalizer Controls")

**Direct Entry** - Touch this icon to the display the Direct Entry Screen.

## iPod® List

Touching the List icon will display the iPod® List Screen. The iPod® List Screen illustrates the audio and video files present in the iPod®. The contents are divided into folders and various file types. The file types consist of audio and video file. Touching the folder icon will display the files present in the folder.

(🎵) **Audio Files** - Touch the audio file icon to display the audio file. Touch the audio file icon to select a track. Touch the audio file icon again to confirm and playback will begin.

(📺) **Video Files** - Touch the video file icon to display the video file. Touch the video file icon to select a video file. Touch the video file icon again to confirm and playback will begin.

(🖼️) **Image Files (JPEG etc)** - Image files are selected and controlled by the iPod®.

(📁) **Folders** - Touch the icon to display the folder/file hierarchy. Touch the folder

## Moving Through Tracks

Touch the Next (▶▶) icon to advance to the next track on the iPod®.

Touch the Previous (◀◀) icon to move to the previous track on the iPod®.

## Pausing Playback

Touch the Play/Pause (▶||) icon to suspend or resume playback.

## PANDORA RADIO OPERATION


Pandora Radio is available via your iPhone® (data usage will occur) or Android™ device (via Bluetooth®).

**Note: The Pandora app must be installed on your iPhone® / iPod® touch or Android device.**

**Note: To play Pandora Radio on this multimedia receiver using an Android device, it is necessary to first establish a connection using Bluetooth®.**

### Pandora Radio

The on-screen indicators and touch key areas for Pandora Radio functions are outlined below.

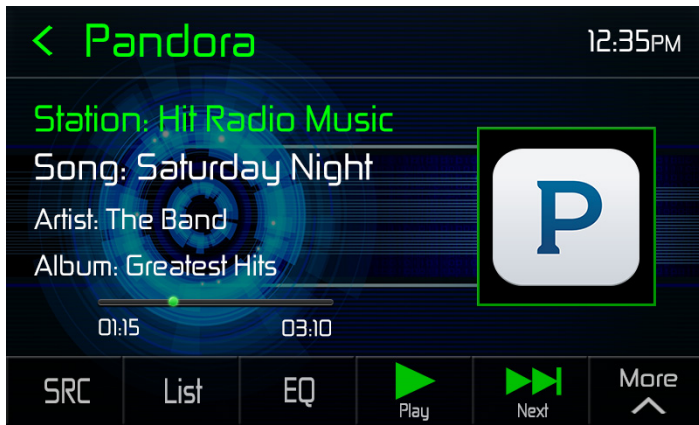

#### Pandora Radio User Interface Screen

**SRC Icon** - Touch this icon to return to the Main Menu Screen.

**Pandora** - Displays the current source.

**Time Display** - This indicator displays the time as entered by the user in the Settings Menu.

**Pandora Radio Information Display** - Displays the Pandora station, artist, song, and album information.

**Elapsed Time Indicator** - Displays the elapsed and total playing time of the current track playing.

**Pandora Preview Window** - Displays album art, if available.

**More ▲** - Touch to display the bookmark sub-menu.



---

( || / ► ) **Pause / Play Icon** - Touch the || icon to pause playback. Touch the ► icon to begin playback.

( ►► ) **Next Icon** - Press this icon skip a song, subject to the skip limit.

( 👍 ) **Thumbs Up** - Press thumbs up to tell Pandora you like the track currently playing, and Pandora will play more tracks like it.

( 👎 ) **Thumbs Down** - Press thumbs down to tell Pandora not to play this track.

Pandora will skip to the next track. If the skip limit has been reached, Pandora will continue to play but your feedback will be recorded.

**Station List Icon** - Press this icon to access the Station List Screen.

Touch the Bookmark Track icon to bookmark a track.

Touch the Bookmark Artist icon to bookmark an artist.

Touch the More ▼ icon to return to the Pandora Radio user interface screen.

## Station List Screen

The Station List Screen allows you to search for music by stations you created.

Touch a station on the list to choose that station.


Touch the Scroll Down (▼) icon to view the next page in the list or the Scroll Up

(▲) icon to view the previous page.

Touch the Return to Now Playing icon to return to the Pandora Radio user interface screen.

## To Launch / Stop Pandora Radio

1. Launch the Pandora app on the iPhone®, iPod® or Android device.
2. Touch the Pandora icon on the main menu screen. If only one device is connected to the radio, the Pandora Radio user interface screen appears.

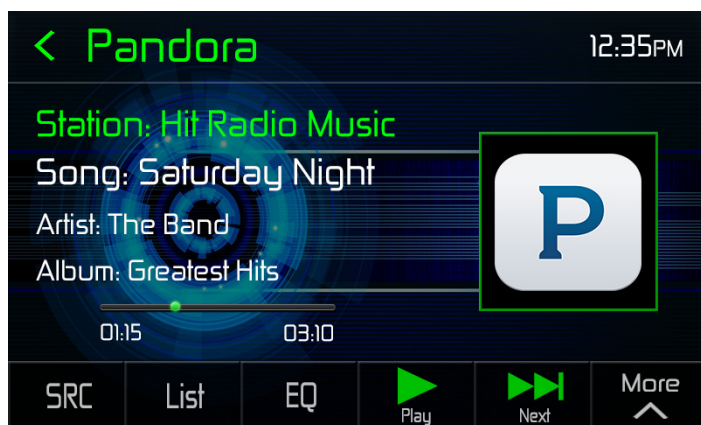

**Pandora Radio User Interface Screen**

### Pausing Playback

1. Touch the Pause icon [⏸] on the bottom of the screen to pause play. "PAUSE" appears in the display, and Pause icon [⏸] will switch to a Play icon [▶].
2. Touch the Play icon [▶] to resume playback.

### Selecting a Track

#### Track-Up

Touch the Forward icon [▶▶] to move to the beginning of the next track.

#### Track-Down

1. Touch the Back icon [⏮] once to move back to the beginning of the current track.
2. Touch the Back icon [⏮] twice to move back to the beginning of the previous track.

### Fast Forward / Fast Reverse

#### Fast Forward

Touch and hold the Forward icon [▶▶] to fast forward a track.

#### Fast Reverse

Touch and hold the Back icon [⏮] to fast reverse a track.

### Repeat Play

This function allows the user to play the track repeatedly by touching the Repeat icon [↺] to select Repeat one or Repeat all.

### Random Play

This function allows the user to play all tracks recorded in a random order by touching the Random icon [⌘] to perform random play.





---

## BLUETOOTH OPERATION

**NOTE: The line-of-sight distance between this unit and your mobile phone must be 8 feet (2.4 meters) or less for sending and receiving voice and data via BT wireless technology.**

Please make sure your mobile phone supports BT functions (Headset or Handsfree profiles or both). Adhere to the following guidelines for successful operation.

- Before using BT functions, you must pair your mobile phone to the VX3014 unit (see "Pairing the BT system with Your Mobile Phone and Unit"). To ensure the best reception for pairing and re-connection, please make sure the mobile phone battery is fully charged before you begin.
- Try to perform pairing within a few minutes of the mobile phone being turned on.
- Once the unit has been paired with the mobile phone, the unit's model number, "VX3014", will be displayed on the mobile phone.
- To achieve the best performance, always keep the mobile phone within 10 feet (3 meters) of the unit.
- Always keep a clear path between the mobile phone and the unit. Never place a metal object or any other obstacle between the mobile phone and the unit.
- Some mobile phones may have a "Power Saving Mode" option. PLEASE DO NOT use the power saving mode with the VX3014.
- Before accepting or making a call, make sure your mobile phone's "BT function" is turned on.
- To ensure the best conversation quality/performance, stay within 3 feet (1 meter) of the units microphone when talking.
- To manually disconnect the mobile phone from the unit, touch the "Chain Link" icon on the BT user interface (next to the mobile phone name) and the BT device will be "disconnected", but still paired.

The user can make or receive phone calls with BT enabled phones through the unit.

### Pairing BT Devices

To connect your BT phone to the unit, the user needs to pair the phone to the unit. Pairing only needs to be done once per phone. **The user can pair up to five (5) phones.** Use your mobile phone to begin the BT pairing process:

1. Turn ON the BT function on the device/mobile phone.
2. Search for BT devices using your mobile phone.
3. Select the BT device ID "VX3014" in the pairing list.
4. Enter default password "5309".

**NOTES:**

- The operational range between this unit and a BT device is approximately 5 meters.
- Before you connect a BT device to this unit, familiarize yourself with the BT capabilities of the device.
- Compatibility with all BT devices is not guaranteed.
- Any obstacle between this unit and a BT device can reduce the operational range.
- Keep this unit away from any other electronic device that may cause interference.





---

## Disconnecting a BT Device

To disconnect one device, touch [ Disconnect ]. After "Disconnect" is pressed, the radio will display a screen listing paired devices. Pressing the Green "Connect" icon will reconnect a previously paired phone to the VX3024. Pressing the "Wastebin" icon next to a device's name will unpair the phone from the radio.

### NOTES.

- The device will be disconnected when the device is moved beyond the operational range.
- If you want to reconnect the device to the unit, place it within operational range.
- If you do not want to reconnect the device to the unit automatically, touch [ Options ], then set [ Auto connect ] to [ OFF ].  
For details, see the "Adjust BT Settings" section.

## Making a Call

1. Select BT function in the home menu.
2. Press "Option". Go to > "Phone Synch". Press "Synch" to import the mobile phone contacts. If you have many contacts, this may take up to 3-4 minutes initially. **Up to 1000 contacts can be imported.**
3. Search for phone number from the following list:

[Phone Book]  
[Call Log]  
[Missed calls]  
[Received calls]  
[Dialed calls]

Or touch the number pad directly, then touch [  ] to dial.

## Receiving a Call

By default, all incoming calls are received automatically.

1. If there is an incoming call, the screen will display "Incoming call...".
2. Touch the screen to select [ hang up ] or [ Answer ].  
Speak into the BT microphone.

### Tip

You can select to receive calls manually by setting [Auto Answer] to [OFF]

## Adjust BT Settings

1. In BT menu, touch [ Options ]. The option menu is displayed.
2. Touch on the selected option to change the setting.
  - [BT]: To turn the "BT" function ON or OFF.
  - [Auto connect]: To turn the "Auto Connect" function ON or OFF .
  - [Auto answer]: To turn the "Auto Answer" function ON or OFF .
  - [Pairing code]: To set the pairing code.
  - [Phone synch]: To synchronize phone book, touch [ OK ] on the sub-menu  
Phonebook synch may take several minutes to load on initial setup.



---

## PTT (Push to Talk) Function

The VX3014 has a PTT button to allow you to access Siri or Google Voice through the head unit when connected via BT. Your mobile phone must support Siri or Google Voice in order for this feature to be supported on the head unit.

**NOTE: Samsung "S" Voice and other third-party apps may not be supported.**

## BT Music Function

BT provides an Advanced Audio Distribution Profile (A2DP) profile for streaming music from a mobile phone or a portable multimedia player (PMP, sometimes referred to as a MP3 player).

**NOTE: Please quit A2DP mode before attempting to make a phone call, as unexpected results may occur depending on your mobile phone model.**

AVRCP is an abbreviation for Audio/Video Remote Control Profile. Mobile phones supporting this function can control the playback of a BT audio player.

The unit can control a BT audio player via Advanced Audio Distribution Profile (A2DP) or Audio/Video Remote Control Profile (AVRCP). BT audio players (or BT adapters compatible with these profiles) can be connected to this unit.

While listening to music from any source, the user can make a phone call by pressing the number keys on the mobile phone. The unit will stop playing music and the TFT screen will display "Calling", after the call is received, the voice will be transferred to the unit. When the call ends, the screen will display music playing menu.

If there is an incoming phone call, the music will stop, and the screen will display "Incoming". When the call ends, the screen will display music playing menu.



---

## AV In 1 / AV In 2

### AV In 1

AV In 1 is used for playback of audio/video from an external device connected to the unit through a 3.5mm connector located on the front panel.


### AV In 2

AV-In 2 is used for playback of audio/video from an external device connected through RCA connectors located on the back of the unit. You can connect an external audio/video device to the unit.

1. Connect the external device with an appropriate AV cable.
2. Touch the upper left corner to display the main menu.
3. Touch [AV In 1] / [AV In 2] to access external device.

**NOTE: Audio / Video devices must be connected to this unit using an audio / video adapter cable that is available separately.**

**NOTE: Video will only play when the vehicle parking brake is engaged. The parking brake wire must be connected for this feature to operate.**

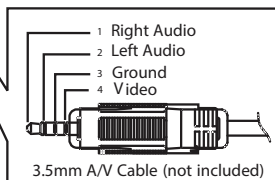

### Connecting External Devices

## SWC Ready

The built-in SWC interface is compatible with PAC steering wheel control modules. The PAC SWI-RC is recommended.

A third-party SWC adapter **must** be used in order for the VX3014 to be compatible with any steering wheel controls.

### Note:

**Not all OE steering wheel functions may be supported by the VX3014. PTT - Will activate Siri / Google Voice if mobile phone supports the feature. Not compatible with all phones / vehicles.**

The following controls are available for most vehicles:

|                    |               |                   |             |
|--------------------|---------------|-------------------|-------------|
| 1. Volume Up (+)   | 4. Preset (+) | 7. Seek / Track + | 10. BT Send |
| 2. Volume Down (-) | 5. Preset (-) | 8. Seek / Track - | 11. BT End  |
| 3. Mute            | 6. Source     | 9. Band           | 12. PTT     |

## PAC SWI-RC Installation Hints

1. Set "Radio Select Switch". Set the SWI-RC to position 7 - "Pioneer/Other/Sony".
2. Programming - Use the Pioneer/Sony/Other radio function mapping order for Jensen branded head units.
3. When programming the SWI-RC, if a function is not supported (or not desired), then the function **MUST** be skipped as per the PAC SWI-RC instructions.
4. The SWC function **MUST** be programmed in the correct order per the PAC SWI-RC radio function mapping order instructions.

| SWI-RC (5VDC Reference) |                                      |                 |
|-------------------------|--------------------------------------|-----------------|
| Function Mapping        | Center Pin Voltage (Function Select) | Tip Pin Voltage |
| Volume +                | H 5.0v                               | 2.89            |
| Volume -                | H 5.0v                               | 3.40            |
| Mute                    | H 5.0v                               | 1.37            |
| Preset +                | L 0.0v                               | 2.15            |
| Preset -                | L 0.0v                               | 2.56            |
| Source                  | H 5.0v                               | 0.79            |
| Seek + / Track +        | H 5.0v                               | 2.15            |
| Seek - / Track -        | H 5.0v                               | 2.56            |
| Band                    | H 5.0v                               | 3.94            |
| BT Answer Call          | L 0.0v                               | 1.37            |
| BT End Call             | L 0.0v                               | 1.79            |
| PTT / Voice Activation  | L 0.0v                               | 3.94            |



---

## REAR CAMERA OPERATION

This unit is "Camera Ready." Before accessing any camera features, you must install a rear video camera (Sold separately).

When the rear camera is installed, a rear view image of what is behind the vehicle will appear (On the screen) when the vehicle is placed in reverse gear. When shifting out of reverse gear, the screen will display the previous source.



## Troubleshooting

| Problem  | Cause  | Corrective action                              |
|--|--|--|
| <b>General</b>                                   |  |  |
| Unit cannot power on                             | Unit fuse blown.                                     | Install new fuse with correct rating.          |
|  | Car battery fuse blown.                              | Install new fuse with correct rating.          |
|  | Illegal operation                                    | Reset the unit.                                |
| Remote control does not work                     | Battery depleted.                                    | Change the battery.                            |
|  | Battery installed incorrectly.                       | Install the battery correctly.                 |
| No/low audio output                              | Improper audio output connection.                    | Check wiring and correct.                      |
|  | Volume set too low.                                  | Increase volume level.                         |
|  | Speakers damaged.                                    | Replace speakers.                              |
|  | Heavily biased volume balance.                       | Adjust the channel balance to center position. |
|  | Speaker wiring is in contact with metal part of car. | Insulate all speaker wiring connections.       |
| Poor sound quality or distortion                 | Pirate disc is in use.                               | Use original disc.                             |
|  | Speaker power rating does not match unit.            | Replace speakers.                              |
|  | Wrong connections.                                   | Check wiring and correct.                      |
|  | Speaker is shorted.                                  | Check wiring and correct.                      |
| Unit resets itself when engine is off            | Incorrect connection between ACC and BATT.           | Check wiring and correct.                      |
| <b>TFT monitor</b>                               |  |  |
| Warning information is shown at all times        | Parking brake wiring is not correct.                 | Check wiring and correct.                      |
| Flashing image or interference appears on screen | Pirate disc is in use.                               | Use original disc.                             |
|  | Video cable damaged.                                 | Replace cables.                                |
|  | Improper video signal connections.                   | Check wiring and correct.                      |



# Troubleshooting (Continued)

| Problem  | Cause   | Corrective action                      |
|--|---|--|
| <b>Disc playback</b>                                     |   |  |
| Cannot insert disc                                       | A disc is inside the unit already.                | Eject current disc and insert new one. |
| Disc does not play back                                  | Disc is warped or scratched.                      | Use disc in good condition.            |
|  | Disc is dirty or wet.                             | Clean disc with soft cloth.            |
|  | Incompatible disc is used.                        | Use compatible disc.                   |
|  | Disc is inserted upside down.                     | Insert disc with label side up.        |
|  | Disc region code is not compatible with unit.     | Use disc with proper region code.      |
| PBC cannot be used during VCD playback                   | PBC is not available on the disc.                 | Use disc with PBC available.           |
| Repeat or search function is invalid during VCD playback | PBC is on.  | Turn PBC off.                          |
| <b>Error messages</b>                                    |   |  |
| No disc  | Disc is dirty.                                    | Clean disc with soft cloth.            |
|  | Disc is upside down.                              | Insert disc with label side up.        |
|  | No disc inside.                                   | Insert disc.                           |
| Bad disc   | Disc is dirty.                                    | Clean disc with soft cloth.            |
|  | Disc is upside down.                              | Insert disc with label side up.        |
| Unknown disc   | Disc format is not compatible with this unit.     | Use disc with compatible format.       |
| Region Error   | DVD region code is not compatible with this unit. | Use disc with compatible region code.  |



---

## SPECIFICATIONS

### DVD/CD Player

Compatible Disc Media: DVD  $\pm$  R / RW (Single and Dual Layer) and CD-R / RW  
Compatible Media Formats: CD-DA, MP3, WMA, VCD, SVCD, Xvid, AVI, MPEG 1/2  
Signal to Noise Ratio: >95dBA  
Dynamic Range: >95dB  
Frequency Response: 20Hz to 20kHz, -3dB  
Channel Separation: > 60dB @ 1kHz  
D/A Converter: Cirrus Logic CS4361 24-Bit, 192kHz

### Video

Format: NTSC, PAL (Auto-Detection)  
Output: 1Vp-p (75-ohm)  
Input: 1Vp-p (75-ohm)

### FM Tuner

Tuning Range: 87.5MHz - 107.9MHz  
Mono Sensitivity (-30dB): 9dBf  
Quieting Sensitivity (-50dB): 15dBf  
Alternate Channel Selectivity: 70dB  
Signal to Noise Ratio @ 1 kHz: 58dB  
Image Rejection: 80dB  
Stereo Separation @ 1 kHz: >30dB  
Frequency Response: 30Hz - 15kHz, -3dB

### AM Tuner

Tuning Range: 530kHz - 1720kHz  
Sensitivity (-20dB): 15uV  
Signal to Noise Ratio @ 1kHz: 50dB  
Image Rejection: 60dB  
Frequency Response: 50Hz - 2kHz, -3dB

### TFT Monitor

Screen Size: 6.2" (Measured Diagonally), 16:9 Widescreen  
Screen Type: TFT LCD, LED Backlight  
Resolution: 800h x 480v x RGB WVGA



---

## General

Auxiliary (Audio) Input Impedance: 10k-Ohm

Power Supply: 11 to 16VDC, Negative Ground

Power Antenna / Amp Remote (Blue): 500mA Max (Current Limited Protection)

Operating Temperature: 0C ~ 65C / 32F ~ 149F

Fuse: 15-Amp, ATO Type

Chassis Dimensions: 7" x 7" x 4" (178mm x 178mm x 100mm)

## CEA Power Ratings



Power Output: 13 Watts RMS x 4 Channels Into 4-Ohms @ < 1% THD+N

Signal to Noise Ratio: 70dBA Below Reference  
(Reference: 1 Watt, 4-Ohms)

Frequency Response: 20Hz - 20kHz, -3dB. (Aux  
Input Used as Reference Input)

Reference Supply Voltage: 14.4VDC

\*Specifications Subject to Change Without Notice.





---

## Care and Maintenance

1. Use only a clean silicone cloth and neutral detergent to clean the front panel or monitor. A rough cloth and non-neutral detergent (such as alcohol) may result in scratching or discoloration.
2. Do not get water or cleaning fluids on the unit.
3. If the temperature inside the player gets too hot, a protective circuit automatically stops play of the disc. If this occurs, allow the unit to cool before operating the player again.
4. Never insert anything other than a 12 cm (5") compact disc into the player as the mechanism can be damaged by foreign objects.
5. Do not attempt to use a 8 cm (3") CD-Single disc in this unit, either with or without an adapter, as damage to the player and/or disc may occur. Such damage is not covered by the Warranty on this product.
6. The CD player may not operate properly in extreme hot or cold. If such conditions occur, allow the interior of the vehicle to reach a normal temperature before using player.
7. When the vehicle warms up during cold weather or under damp conditions, condensation may appear on the LCD panel. Should this occur, the screen will not operate properly until the moisture has evaporated.
8. We suggest you use a cleaning disc in this unit more frequently than in the unit in your home due to the environmental conditions of the vehicle.





**Dual Electronics Corporation  
Heathrow, FL 32746**

**Technical Assistance: 888-921-4088  
[www.jensenmobile.com](http://www.jensenmobile.com)**

**© 2016**

**VX3014 Common Replacement Parts**

|   |          |
|---|----------|
| Wire Harness (Pwr/Spk/Line Out/ BT Mic / SWC Adapter) | 30313990 |
| Trim Ring   | 30413940 |
| Remote Control  | 30714230 |
| Hardware Kit  | 30513940 |
| Mounting Sleeve                                       | 30113940 |

**Operation manuals and other material online at: [www.jensenmobile.com](http://www.jensenmobile.com)**

