		; Mod	el 07S1BPr
unit and combina be progr alarm re	nsmitter is designed is programmed by u ttion with the transm rammed into any of t	using the remote itter button. Althe the Audiovox rem it will offer limited	g Guide r upgrade remote start start's program switch in ough this transmitter can ote start and or alarm, d use and should be
To progr	am this transmitter i	nto your remote s	start upgrade unit:
 2) Press 3) Press wish t has b 4) Repe 	the ignition to the on and release the pro- and hold, for 3 sec to add until the parki een learned. at step 3 for each tra the ignition off to exit	ogramming switch conds, the button ing light flashes in ansmitter up to a	n 3 times of the transmitter you ndicating the transmitter total of 4. de.
NOTE: Do not allow more than 15 seconds to lapse between steps or the program mode will be automatically exited and you will have to start over.			
Replaci	ng The Batteries:		
of a co small fl screwd blade, remove transm back c keeping the me	driver carefully e itter over g hold of tal key prevent	Carefully slide the two batteries out from under	Carefully remove the discharged batteries by sliding them out from under the clip in the direction indicated by the arrow, Properly dispose of the exhausted battery and insert two new CR1220 taking care to arrange it so that the + is facing up away from the circuit board.

Rev A: Add new URL 11/4/2011

128-8213a 1 of 2



128-8213a 2 of 2