


 




Transmitter Programming Guide
Model : APSOE3B4SCF

The transmitters included with the system have been pre-programmed at the factory, with each button pre-assigned to control a specific function of the system. Some systems may have a 3, 4, or 5 channel RECEIVER, depending on the model, the transmitters included with the system are 7 channel transmitters. This allows you to program each transmitter to more than one vehicle in two car families and also allows you to change which button or buttons control certain functions of the system.

TRANSMITTER		SYSTEM RECEIVER	
CHANNEL	BUTTONS	CHANNEL	FUNCTION
1		1	Remote Arm *Remote Panic/Car Finder *Remote Door Lock
2		2	Remote Disarm *Remote Panic/Car Finder *Remote Door Unlock
3		3	Remote Trunk Release/Remote Start



* Remote Panic/Car Finder is available only on certain models.
 * Door Lock/Unlock may require additional components in certain vehicles.

- AS 9075** Remote Car Starter
- AS 9256** Remote Trunk Release Relay
- AS 9154** Remote Garage Door Interface
- AS 9153** Remote Window Roll Up

PROGRAMMING TRANSMITTERS:

It is important to remember that during programming, each individual step of the procedure must be executed within 15 seconds of the previous step. When the 15 second time limit is allowed to expire, the system will automatically exit program mode. This is indicated by a long "chirp" from the siren.

Additionally, any time the ignition key is turned off while programming, the system will immediately exit program mode. This is also indicated by a long "chirp" from the siren.

TO PROGRAM ADDITIONAL TRANSMITTERS:

Some systems may only flash the parking lights to indicate that the transmitter is learned, others may where indicated that the siren will emit a long chirp tone, the optional horn may be connected, in which case neither or either both the horn and siren may sound,

1. (a) Enter the vehicle, and turn the ignition key to the "on" position.
2. (a) Press and release the valet/bypass push button switch 3 times.
3. (a) The dash LED will flash one time and the siren will "chirp" 1 time indicating the system is ready to accept programming for channel 1, Arm, Lock and Panic.
4. (a) You can assign the Lock/Arm button by pressing and holding the lock button until the siren emits a long chirp tone.

The chirp tone confirms that programming of channel 1 was successful.

Up to 4 transmitters can be programmed, press and hold the selected button of each additional transmitter until the chirp tone is heard, or move to step #5

5. Press and release the valet/override switch one time to advance to channel 2.
6. (a) The dash mounted LED will flash 2 times, and the siren will "chirp" 2 times indicating that the system is ready to accept programming for channel 2. Unlock/2nd Unlock, Disarm, and Panic. Press and hold the Unlock button on your keychain transmitter until the siren emits a long chirp tone. This confirms that programming of channel 2 was successful. Up to 4 transmitters can be programmed, press and hold the selected button of each additional transmitter until the chirp tone is heard.
7. Press and release the valet/override switch one time to advance to channel 3.


8. The dash mounted LED will flash 3 times, and the siren will "chirp" 3 times, indicating that the system is ready to accept programming for channel 3. Remote Start & or Trunk Release Output, (where so equipped).
9. (a) Press and hold the Trunk/Key button on your keychain transmitter until the siren emits a long chirp tone. This confirms that programming of channel 3 was successful. Up to 4 transmitters can be programmed, press and hold the selected button of each additional transmitter until the chirp tone is heard.

NOTE: If programming to a Keyless Entry (non alarm) unit, there will be NO chirp indication.

BATTERY REPLACEMENT:

The transmitter incorporates a small red LED built into the case. This LED can be used to indicate battery condition. You will notice a decrease in transmitter range as the battery condition deteriorates. To replace the battery...

1. Remove the transmitter cover by removing the small screw from the back of the transmitter case.
2. Remove the discharged battery, making note of the orientation of the + and - contacts, and dispose of properly.
3. Install the new (type GP27A) battery, taking care to orient the + and - contacts properly.
4. Replace the transmitter cover, taking care not to damage the LED or switches on the circuit board.

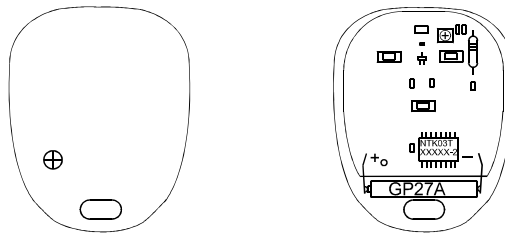



ORDER FORM FOR AP30E3B4SCF TRANSMITTER

IMPORTANT: To help us expedite your order, please print all of the information legibly, and mail this form and your payment according to the instructions below. Please indicate which button pad is used with your transmitter as indicated above. _____

Please indicate transmitter model number as found on back of case. _____

1. Name : _____

Address : _____

City : _____ State : _____ Zip Code : _____

2. Telephone Number : (_____) _____

3. Enter the total number of transmitters required here : _____

4. The cost per transmitter is \$ 65.00.

5. Enter the total amount enclosed here : _____

(New York state residents must include the appropriate sales tax.)

6. Method of payment; check one of the boxes below.

Mastercard Visa Check or money order * (do not send cash)

* **Make checks payable to Audiovox Corporation**

7. Credit Card Number : _____

8. Credit Card Expiration Date : _____



Credit card purchasers can order additional or replacement transmitters by phone. Simply dial 1 - 800 - 645 - 4994, and follow the instructions from the operator interface.

9. Mail this form, and your check, to ;

Audiovox Electronics Corp., 150 Marcus Blvd., Hauppauge, NY 11788

Attn.: TRANSMITTER DEPARTMENT

©2006 Audiovox Electronics Corp., 150 Marcus Blvd., Hauppauge, NY 11788

128-7768