

OWNER'S GUIDE MODEL APSSEC OEM REMOTE



WWW.VOXXELECTRONICS.COM

Table of Contents

Using Your Remote Control.....	3
Arming the Security System	3
Disarming the Security System	3
User Selectable Notification Chirps.....	3
User Selectable LED.....	3
Valet Mode.....	4
Manually Overriding the Security System	4
Stand Alone Valet Override	4
Custom Code Valet Override	5
Status LED, Light Flashes and Siren/Horn Indications	6
Warranty Information	7

Using Your Remote Control

Arming the Security System

To arm the system, exit the vehicle, close all doors, then press the **Ⓜ** button. The system will chirp and the parking lights will flash one (1) time, indicating the system is armed, has locked the doors and activated the starter disable feature. The LED status indicator will blink steadily, once per second.

Disarming the Security System

To disarm the system press the **Ⓜ** button. The system will chirp and the parking lights will flash two (2) times, indicating the system is disarmed and has unlocked the doors.

User Selectable Notification Chirps

System ARM/DISARM chirps can be toggled ON or OFF without entering the programming feature banks.

1. Turn the ignition ON then OFF.
2. Press and release the valet/programming button three (3) times.

The system will respond with one (1) chirp for ON or two (2) chirps for OFF.

User Selectable LED

This feature will control whether the LED is ON or OFF when the system is Armed/Locked and can be toggled ON or OFF without entering the programming feature banks.

1. Turn the ignition ON, OFF, ON, OFF.
2. Press and hold the valet/programming button for five (5) seconds.

The system LED will respond with one (1) flash for ON or two (2) flashes for OFF.

Valet Mode

When valet mode is activated the status LED will light solid, and all security and remote start functions will be disabled. To enter or exit valet mode simply follow the steps outlined below:

1. Turn the vehicle's ignition ON.
2. Push and hold the programming/valet button.
3. The LED will turn on solid when valet mode is active.
4. Release the programming/valet button.

Manually Overriding the Security System

Your system can be disarmed without the use of the transmitter. This is necessary to operate your vehicle if the transmitter is lost or its battery fails. To by-pass the alarm system;

1. Open the vehicle door. The alarm will sound.
2. Turn the ignition key to the ON position.
3. Within ten (10) seconds, press and release the valet push button switch.

The alarm system will stop sounding and enter the (by-passed) mode. You can now start and operate the vehicle normally.

Stand Alone Valet Override (Optional)

Your system can be disarmed without the use of the transmitter or valet button. This is necessary, since you will need the ability to operate your vehicle if the transmitter is lost or its battery fails. To by-pass the alarm system;

1. Open the vehicle door. The alarm will sound.
2. Cycle the ignition key ON, OFF, ON.
3. Within ten (10) seconds, press and release the Brake pedal three (3) times.

The alarm system will stop sounding and enter the (by-passed) mode. You can now start and operate the vehicle normally. This feature must be programmed ON by an authorized dealer.

Custom Code Valet Override (Optional)

Unlike the default Valet Override, Custom Code Override is a user personalized code that offers a higher lever of security. If the user chooses to use Custom Code Override, Feature Bank 2; Feature 9 must be programmed for "Custom Code". Once the option has been selected the code must be programmed. Once the Custom Code is programmed it cannot be changed without first disarming the alarm.

Custom Code Override Procedure

The Custom Code is made up of 2 numbers. Each chosen number must be between digits 1-9. The default Custom Code is "11". To disarm the alarm using the Custom Code option:

1. Turn the vehicle ignition to ON.
2. Within five (5) seconds, Press the valet button one (1) time.
3. Within five (5) seconds, Turn the ignition OFF/ON.
4. Within five (5) seconds, Press the valet button one (1) time.
5. Turn the vehicle ignition to OFF then ON to start the vehicle.

Custom Code Programming Procedure

In this example, the user has selected Custom Code "23". To program a user selected custom code:

Start with the alarm disarmed.

1. Turn the ignition to the ON position.
2. Within ten (10) seconds, press the valet button three (3) times to enter programming.
3. Within ten (10) seconds, Cycle the ignition OFF/ON, OFF/ON, OFF/ON. The system will beep one (1) time.
4. Within ten (10) seconds, Press the valet button two (2) times. This number will indicate the first digit of the chosen Custom Code.
5. Within ten (10) seconds, Cycle the ignition OFF/ON.
6. Within ten (10) seconds, Press the valet button three (3) times. This number will indicate the second digit of the chosen Custom Code.
7. Cycle the ignition OFF.

If the Custom Code was accepted the LED will flash the first number (2), pause, then the second number (3). This will repeat two (2) more times to confirm the Custom Code entry. If after fifteen (15) seconds the LED does not flash please repeat steps 1-7.

Status LED, Light Flashes, and Horn Indications

Status LED Flash Indications

LED Flashes	Function
OFF	Disarmed
Slow Flash	Armed
Fast Flash	Passive Arming Countdown
ON (Solid)	Valet Mode
1 Flash / Disarmed	Zone 1 Trigger, Shock Sensor
2 Flashes / Disarmed	Zone 2 Trigger, Trunk / Hood
3 Flashes / Disarmed	Zone 3 Trigger, Door

Siren/Horn Chirp Indications

Chirps	Function
1	Arm
2	Disarm
3	Door Ajar Upon Arming
4	Disarm / Triggered

Parking Light Flash Indications

Flashes	Function
1	Arm
2	Disarm
3	Disarm / Triggered



LIMITED LIFETIME WARRANTY

Voxx Electronics Corporation (the Company) warrants to the original purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within the Lifetime from the date of original purchase in the original vehicle, such defect(s) will be repaired or replaced with new or reconditioned product, (at the Company's option) without charge for parts or repair labor. A transmitter for a vehicle security or remote start system is warranted for 12 months from the date of original purchase.

To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), authorization number, specification of defect(s), transportation prepaid, to an approved warranty station. This warranty is not transferable.

This Warranty does not cover damage to the vehicle's electrical system or costs incurred for the installation, removal or reinstallation of the product. This Warranty does not cover batteries, broken LCD transmitter display screens, nor apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, abuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s).

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

The company does not warrant that this product cannot be compromised or circumvented. THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT WITHOUT INSTALLATION LABOR.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Voxx Electronics Corporation, 2351 J. Lawson Blvd., Orlando, Florida 32824

Voxx Electronics Corporation.
Customer Service 1-800-225-6074
www.VoxxElectronics.com

FCC COMPLIANCE

This device complies with Part 15 of the FCC rules and with RSS-210 of Industry Canada. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including any interference that may cause undesired operation.

Warning!

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

PATENTED: www.voxxintl.com/company/patents