


Congratulations on purchasing your new Acoustic Research High Resolution Music Player.

Please read these instructions for quick tips on using the Player.

Getting Started

- Charging your Player with provided AC/DC adapter
 - Connect the USB port of the included AC/DC power adapter to the Player
 - Plug the other end of the adapter to any standard 100-240V AC wall outlet. Charging should be started automatically
 - It should be **charged for at least 6 hours** before using for the first time
 - Alternatively, the Player charges automatically every time you connect it to your computer. Charging process may be slower and the charging time depends on the current output of the USB port

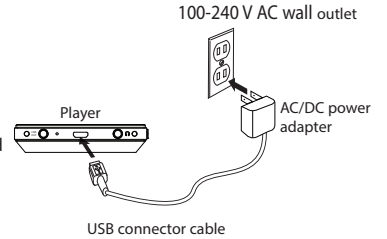

* Use only the provided AC/DC adapter
 * Image is for reference only, the AC/DC adapter shown in the image may vary from the actual product
 * Music playback during battery charging is possible, but it will slow down the charging process

- Install or remove microSD card
 - Open the protection cover of the microSD expansion slot. Gently insert a microSD card* into the microSD expansion slot. Close the protection cover
 - Before removing a microSD card, tap on **SD card connected - Touch to unmount sdcard** on the notification bar. After that, open the protection cover and gently push the card to release it

* Up to 128 GB microSD card is supported

v1.0 (1.0.0.0) (EN)

- Transfer audio files to your Player

Windows 7/Windows 8:

 - Connect your Player to the computer
 - Open **Windows Explorer**, select **Computer**, open **ARM2** under Portable Devices
 - Open the desired storage media **Internal SD card** or **SD card** (Optional, only if microSD card is installed)
 - Drag-and-drop audio files (or folders containing audio files) to the desired destination**

Mac OS X (10.5 or above):


 
- Download and install **Android File Transfer** from www.android.com/filetransfer/ (First time installation only)
- Connect your Player to the computer
- Run Android File Transfer if it does not pop up automatically
- Select the desired storage media by clicking on the tab **Internal SD card** or **SD card** (Optional, only if microSD card is installed)
- Drag-and-drop audio files (or folders containing audio files) to the desired destination**

- Disconnect the Player from the computer and enjoy media on the go.

** Music files are automatically organized under different views according to embedded music tags in

Need more help? Do not return this product to the store.
 Visit www.acoustic-research.com for the latest firmware, user manual and FAQ's.

General controls

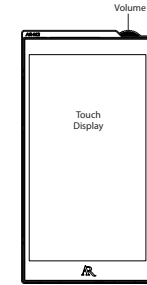

Switch on the Player	Press and hold the Power button for 3 seconds.
Switch off the Player	Press and hold the Power button for 3 seconds. Select Power off.
Switch off the display and lock the touch display	When the display is on, press the Power button. The display will also switch off automatically after a period of inactivity (1 minute by default)
Switch on the display and unlock the touch display	When the display is off, press the Power button. Swipe the lock icon towards any edges of the screen.
Go to the Home screen	Tap on the Home icon to reached the Home screen
Go to the APPS menu	At Home screen, tap on the APPS icons at the lower right corner
Navigate to an audio file	In APPS menu, tap on AR Music Player In AR Music Player, tap on your desired view by selecting the corresponding tab
Play an audio file	Tap the music file in any view
Pause playback	Press the Play/Pause button during music playback, press again to resume.
Show the Option menu	In any navigation view, tap and hold at any media item
Adjust the volume	Rotate the volume knob clockwise to reduce the volume or counter clockwise to increase it.
Skip to the next file	Press ▶▶▶ .
Skip to the previous file	Press ◀◀◀ within the beginning 4 seconds of the current audio file.
Delete files from the Player	Tap at the file and hold until the option menu appear Select Delete and confirm the action
Force shutdown the Player (if it is not responding)	Press and hold Power button for 10 seconds to force shutdown the Player.



For Customer Service
 Visit Our Website At
www.acoustic-research.com
 Product Information, Photos,
 FAQ's, Owner's Manuals