


Congratulations on purchasing your new Acoustic Research High Resolution Music Player.

Please read these instructions for quick tips on using the Player.

Getting Started

1. Charging your Player

- Charge the Player with USB power adapter conforming with the USB Battery Charging Specifications 1.2 or above (not supplied).
- Power adapter with 5V 2A output is recommended for high speed charging.
- The Player should be **charged for at least 6 hours** before using for the first time.
- Alternatively, the Player charges automatically every time you connect it to your computer. Charging process may be slower and the charging time depends on the current output of the USB port.

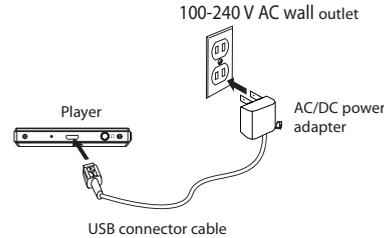

* Use only USB power adapter conforming with USB Battery Charging Specifications 1.2 or above (not supplied)
* Image is for reference only, the AC/DC adapter shown in the image may vary from the actual product
* Music playback during battery charging is possible, but it will slow down the charging process

2. Install or remove microSD card

- Open the protection cover of the microSD expansion slot. Gently insert a microSD card* into the microSD expansion slot. Close the protection cover.
- Before removing a microSD card, tap on **SD card connected - Touch to unmount sdcard** on the notification bar. After that, open the protection cover and gently push the card to release it.

3. Transfer audio files to your Player

Windows 7/Windows 8/Windows 10:

- Connect your Player to the computer
- Open **Windows Explorer**, select **Computer**, open **ARM20** under Portable Devices
- Open the desired storage media **Internal SD card** or **SD card** (Optional, only if microSD card is installed)
- Drag-and-drop audio files (or folders containing audio files) to the desired destination**

Mac OS X (10.5 or above):



 
- Download and install **Android File Transfer** from www.android.com/filetransfer/ (First time installation only)
- Connect your Player to the computer
- Run Android File Transfer if it does not pop up automatically
- Select the desired storage media by clicking on the tab **Internal SD card** or **SD card** (Optional, only if microSD card is installed)
- Drag-and-drop audio files (or folders containing audio files) to the desired destination**

- 4. Disconnect the Player from the computer and enjoy media on the go.

* Up to 200 GB microSD card is supported.

**Music files are automatically organized under different views according to the embedded music tags in each file.

General controls

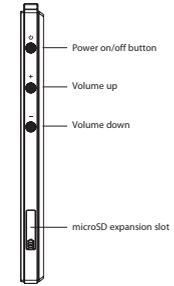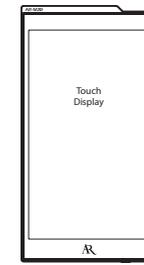

Switch on the Player	Press and hold the Power button for 3 seconds.
Switch off the Player	Press and hold the Power button for 1 second and then select Power Off.
Switch off the display and lock the touch display	When the display is on, press the Power button. The display will also switch off automatically after a period of inactivity (1 minute by default).
Switch on the display and unlock the touch display	When the display is off, press the Power button. Swipe the lock icon towards any edges of the screen.
Go to the Home screen	Tap on the Home icon to access the Home screen.
Go to the APPS menu	At Home screen, tap on the APPS icons at the lower right corner.
Navigate to an audio file	In APPS menu, tap on AR Music Player . In AR Music Player, tap on your desired view by selecting the corresponding tab at the screen top.
Play an audio file	Tap on a music file in any view.
Pause playback	Press the Play ▶/Pause button II during music playback in the widget or in the AR Music Player app, press again to resume.
Show the Option menu	In any navigation view, tap and hold on any media item.
Adjust the volume	Press the volume down button to reduce the volume or volume up button to increase it.
Skip to the next file	Press ▶▶ in the widget or in the AR Music Player app.
Skip to the previous file	Press ◀◀ in the widget or in the AR Music Player app.
Delete files from the Player	Tap and hold on the file until the Option menu appears. Then select Delete and confirm the action.
Force the Player to shut down (if it is not responding)	Press and hold the Power button for 10 seconds.

Need more help? Do not return this product to the store.
Visit www.acoustic-research.com for the latest firmware, user manual and FAQ's.