

Dual Multimedia
Headrest Replacement
Entertainment System

Quick Start Guide



NOTICES

NOTICE OF INTENDED USE

Our systems are designed to enable viewing of video ONLY for rear-seat occupants, and are not intended for viewing by the driver when the vehicle is in motion. Such use might distract the driver or interfere with the driver's safe operation of the vehicle, and thus result in serious injury or death. Such use might also violate state or local laws.

Manufacturer disclaims any liability for any bodily injury or property damage that might result from any improper or unintended use.

About the Registered Marks

This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.

NOTE: Features and specifications listed in this manual are subject to change without notice

Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

iPod® and iPhone® are registered trademarks of Apple, Inc.

 
Please contact your dealer for complete Owner's Manual.

Turning On The System

- A) Turn vehicle ignition to ON or ACC
- B) Press POWER on the front display or wireless remote on each system



Front Panel Controls

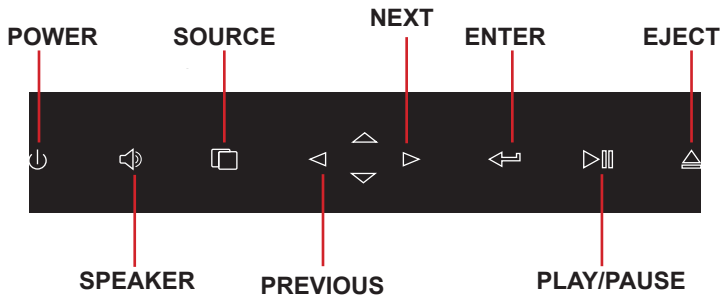

* Please contact your dealer for a list of supported systems.

Using The Headphones

 
A) Turn on by pressing the OFF/ON button located on the ear piece. The power LED on the ear piece should illuminate. If not, check that the batteries are inserted properly and have a charge.

B) The headphones each have a two-position slide switch labeled “Ch.A/ Ch.B”. They must have a clear line of sight to the headrest monitor and must be switched to the designated A/B Channel to operate properly.

C) To adjust the volume, use the knob on the ear piece.



Remote Control

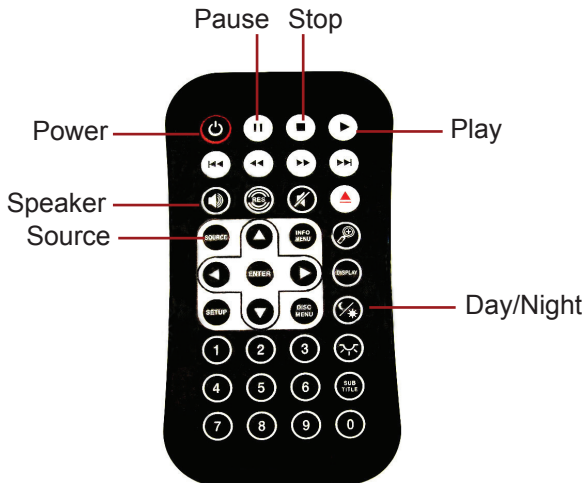

Playing A Disc

A) Touch the SOURCE button on the front control panel or remote control until “DVD Player” appears.

B) With the label facing away from you, insert a disc into the disc slot. Do not force disc into slot. If a DVD/CD menu appears on the screen, press PLAY or ENTER as instructed on the screen. Most disc will load and play automatically.

C) To obtain best viewing angle, adjust the screen display as needed by pressing the bottom corners.

Note: Not all discs are supported by this system. You may find a disc that will not play on this system, but works fine on other players. Various manufacturers of discs change technology from time to time which may create compatibility issues. This is not a problem with the unit and is not covered by warranty.

Please check with the Owner's Manual for more detailed information.

Listening Over Vehicle Speakers

A) Press SPEAKER on the remote or touch front control panel. “SPEAKER SOUND ON FM__ PRESS LEFT OR RIGHT TO ADJUST” will appear on the screen.

B) Turn the vehicle's radio on and tune to the FM frequency displayed on the screen.

C) If radio interference is heard, try another frequency (see Owner's Manual for more information).

Using External Video Sources

A) Connect the RCA audio and video outputs of the device to the RCA adapter cable. Plug into AUX input port on front of monitor.

B) Press **SOURCE** on the remote or front control panel until “AUX 1” appears on the screen.

Using External HDMI Sources

- A) Connect the external source HDMI output to the AV Box or HDMI input port.
- B) Press MODE (SOURCE on the remote control) until “AUX 2” appears on the screen.

Adjusting The Display

Selecting a display mode: The system’s “widescreen” display has a 16:9 aspect ratio - wider than a standard television. While many DVDs provide widescreen video images that fit the screen, standard broadcast TV and many video games do not.

- To view a widescreen DVD, press the **DISPLAY** button on the remote until “WIDE” is displayed on the screen.
- To watch a fullscreen DVD, the internal game system, or broadcast television, select “STANDARD.”

Change the Display Adjustments Remote Control Only: The display has adjustable video settings. To change these settings, press and hold the **DISPLAY** button on the remote control to bring up the following menu:

▶ BRIGHTNESS	32
CONTRAST	32
COLOR	32
TINT	32

To select a setting to be changed: Press the **DOWN** arrow button to move the cursor down the menu list. Once you have selected the item to change, use the **LEFT** and **RIGHT** arrows on the remote or the front panel to adjust the settings. After you have finished making your desired changes, press the **DISPLAY** button on the remote to exit and save the changes you have made.

To change the value of a setting: Use the **LEFT** and **RIGHT** arrow buttons. The range is from 0 to 63.

PN: GC1075-GEN Rev A

All rights reserved. Copyright 2015