

# CODE ALARM

## TRANSMITTER PROGRAMMING

Note: This mode will only retain the last 4 remote transmitters programmed. If the transmitter memory is exceeded, the security system will start deleting transmitters from memory in chronological order.

To program transmitters:

1. Turn the ignition ON.
2. Press and hold the valet/override button.
3. Within 10 seconds the system will chirp/flash the parking lights (3) three times, release the button.
4. Press Button 1 of each transmitter you wish to program. The system will respond with 1 chirp for each accepted transmitter (up to 4).
5. Turn the Ignition OFF to exit programming. The system will also exit programming after 15 seconds of inactivity.

Note: This system has 1 button programming which programs all channels of the system.



**Technical Support**  
(800) 421-3209