

# RCA QuickStartGuide

English **small wonder**

EZ2000 Series RCA Small Wonder Camcorder  
www.rcaaudiovideo.com

**Congratulations on purchasing your new RCA High Definition Small Wonder Camcorder.**  
Please read these instructions for quick tips on using the product.

The User Manual PDF file can also be found in the camcorder memory under the User Manuals folder.

## 1. Content of the box

- Small Wonder Camcorder
- AC/DC adapter
- USB cable
- AV cable
- Carrying case
- Wrist strap
- Quick Start Guide
- Owner Registration card
- Warranty leaflet

## 2. Charging your camcorder

 
Please charge the battery for at least three hours before first use.

### NOTE:

The unit is properly charging when you see the animated charging symbol on the Camcorder display.


If you do not see this charging symbol, follow these steps:

1. Make sure that you have the camcorder connected to the AC/DC power adapter.
2. Momentarily slide and hold the Camcorder power switch to the ON position to initiate charging.

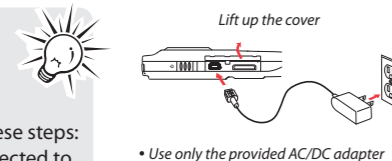


• Use only the provided AC/DC adapter

## 3. General controls

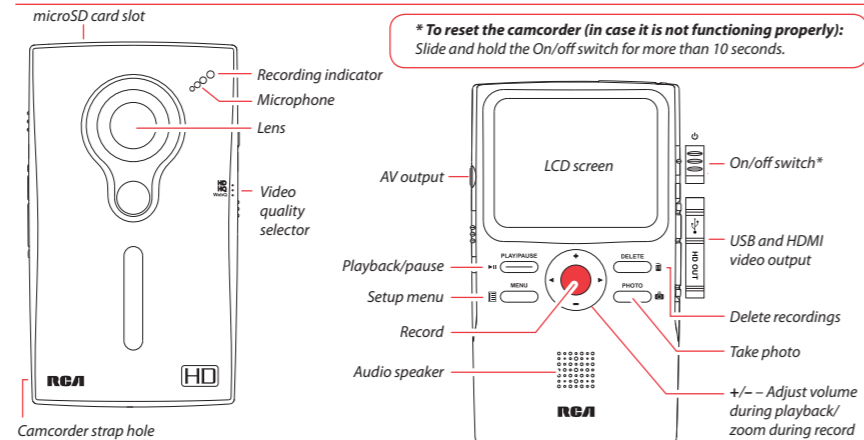 

## 4. Inserting (or removing) memory card

 The camcorder internal memory will only permit minutes of recording time. A microSD memory card (not included) is recommended for recording.

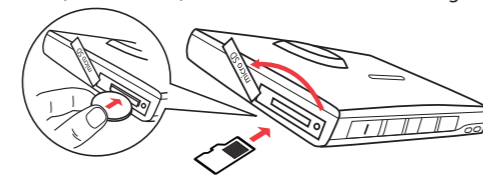


As the memory card is small in size, it is recommended to use a small coin to help insert or remove it.

**To insert card:** Push the card in until a click is heard


**To remove card:** Push card in until a click is heard, then slowly release the card. As card is under minimal tension when locked in memory slot, please use care when removing.

## 5. Turning on the camcorder

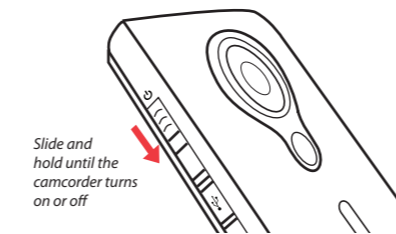 


Slide and hold until the camcorder turns on or off

 The camcorder has two operation modes (Preview and Playback). It is always in Preview mode after switched on. Refer to the diagram below for switching between modes.

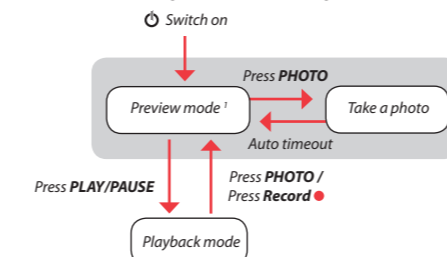


<sup>1</sup> In Preview mode, press **Record** to record a video.

## 6. Selecting recording quality

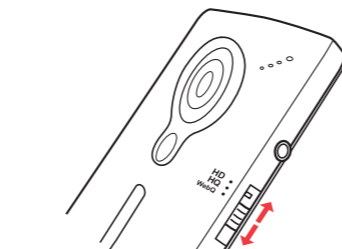 

 
Preview mode Selected recording quality Battery indicator Memory card indicator



Settings	Resolutions (pixel) & Frame Rates (FPS)	Approx. recording durations on a 16 GB memory card <sup>2</sup>
HD	1280 x 720 @ 30fps	8 hours
HQ	720 x 480 @ 30fps	14 hours
WebQ	320 x 240 @ 30fps	40 hours

<sup>2</sup> Actual recording time and capacity will vary depending on type of video content being recorded, system requirements, and other factors.


## 7. Video recording and photo taking

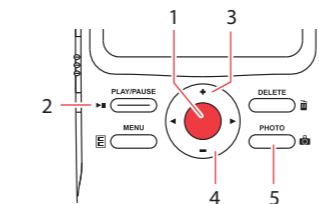 

- 1 Start, stop, resume recording in Preview mode; enter Preview mode from other modes
- 2 Pause recording
- 3 Zoom in during recording
- 4 Zoom out during recording
- 5 Take photos



## 8. Playing back or deleting recordings

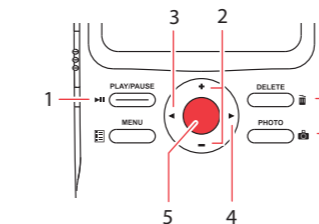 

- 1 Enter Playback mode to play the most recent recording; start or pause playback
- 2 Adjust volume during playback
- 3 Cue to previous recording
- 4 Cue to next recording
- 5 Enter Preview mode from Playback mode
- 6 Press to select delete one or all recordings.
- 7 Enter Preview mode from playback mode; take photos



QuickTime and the QuickTime logo are trademarks or registered trademarks of Apple Computer, Inc., used under license therefrom.

## 9. Installing RCA Memory Manager application

Connect the camcorder to your PC with the provided USB cable.

### To install Memory Manager

**Windows:** Open **My Computer** and double-click the drive labeled SMALLWONDER. Double-click **MemoryMgr3\_Windows\_Installer.exe** to start the installation.

**Mac:** Open the mounted drive labeled SMALLWONDER. Double-click the **RCA Mac Installers.dmg** folder. Double-click the **MemoryMgr3 Mac Installer** to start the installation. After the Memory Manager 3 installation has completed, double-click **RCA Detective Installer** to install the RCA Detective application.

### To ensure that videos can be managed and played on your PC:

- Make sure to install the included Memory Manager application.

## 10. Learning more about the camcorder

Read the user manual for more information on the followings:

- Using the **MENU** button to setup the camcorder (including date and time)
- Viewing videos on TV
- Recording videos to VHS tape or DVD
- Connecting the camcorder to your PC
- Tips and troubleshooting
- Safety and warranty information



For Customer Service  
Visit Our Website At  
[www.rcaaudiovideo.com](http://www.rcaaudiovideo.com)  
Product Information, Photos,  
FAQ's, Owner's Manuals

Audiovox Electronics Corp.  
150 Marcus Blvd., Hauppauge,  
NY 11788

© 2010 Audiovox Electronics Corp.  
Trademark Registered  
Printed in China