




For Customer Service  
Visit Our Website At  
**[www.audiovoxproducts.com](http://www.audiovoxproducts.com)**  
Product Information, Photos,  
FAQ's Owner's Manuals



**AUDIOVOX**  
ELECTRONICS CORP.

128-9132a

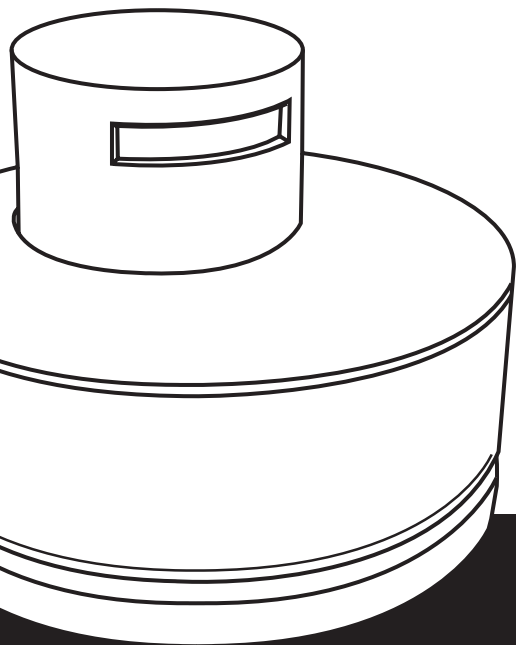

# **IPD-HDSS IPD-HDSS(W)**

**OWNERS MANUAL**

## INTRODUCTION

Congratulations on your purchase of the IPD-HDDS/IPD-HDDS(W) Desktop/Under Cabinet Docking Station. The Desktop/Under Cabinet Docking Station is available in two colors: black (IPD-HDDS) or white (IPD-HDDS(W)). The IPD-HDDS/IPD-HDDS(W) is compatible with the Audiovox iPad protective case (IPD-1, IPD-2C, IPD-2HP, IPD-2FM or IPD-2CX, sold separately).


Please read the instruction manual for this product before using it. The documentation provided will allow you to fully enjoy all the features this unit has to offer. Please save this manual for future reference.

***CAUTION: Do not attempt to remove the Protective Case mounting arm when the RED switch is in the locked position. Damage to the Desktop/Under Cabinet Docking Station will result.***

***WARNING! Never disassemble or adjust the unit.***

***WARNING! To prevent injury from shock or fire, never expose this unit to moisture or water.***


## Package Includes:

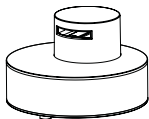


Desktop/Under Cabinet Docking Station




3 Phillips flat head screws #8 X 5/8"

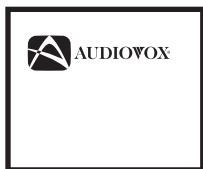


Owner's Manual

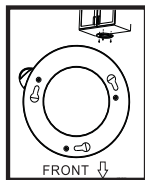


Template Document Number 128-9134

 

3.5mm AUX-IN

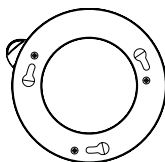

 
Desktop/Under Cabinet  
Docking Station Mounting Bracket



AC/DC Power Adaptor

# CONTROLS AND INDICATORS


## FRONT VIEW

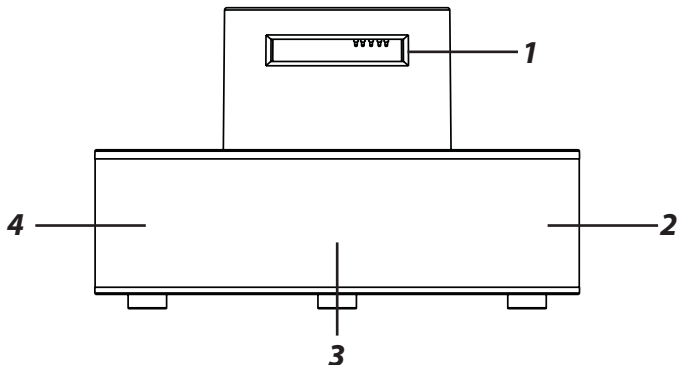

1. **Protective Case Mounting Arm Port**  
This port allows the Protective Case Mounting Arm to be inserted in to the Under Cabinet/Desktop Docking Station.
2. **Right Speaker**
3. **Red Power On LED**  
When the LED is ON the Under Cabinet/Desktop Docking Station is ON.
4. **Left Speaker**

# CONTROLS AND INDICATORS

## REAR VIEW

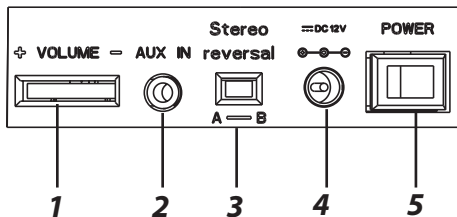

1. **Volume -VOL+ Adjustment**  
Rotate to increase or decrease the volume.
2. **AUX IN Jack**  
3.5mm jack which is used to accept audio inputs from an external device.
3. **STEREO REVERSAL A-B Switch**  
This switch adjusts the right and left speaker audio output based on the position of the Under Cabinet/Desktop Docking Station. Set the switch to the **A** position when mounted under a cabinet. Set the switch to the **B** position when placed on a desktop.
4. **DC 12V Connector**  
Allows for the connection of the 12VDC adapter to power the Under Cabinet/Desktop Docking Station.
5. **POWER Switch**  
Turns the Under Cabinet/Desktop Docking Station ON and OFF

## **OPERATING INSTRUCTIONS**

### **Power On/Off**

Use the rear panel **POWER** switch to turn the Under Cabinet/Desktop Docking Station ON and OFF. When the Under Cabinet/Desktop Docking Station is ON, the front RED LED will be ON.


### **Volume Adjustment**

Rotate the rear panel volume control to increase or decrease the Under Cabinet/Desktop Docking Station volume.

For best operation leave the volume control set to max and control the volume with the iPad volume control.

## UNDER CABINET DOCKING STATION INSTALLATION


1. Position the template under the cabinet with the arrow pointing toward the front of the cabinet. Using a sharp object mark the positions for the holes for the mounting screws.

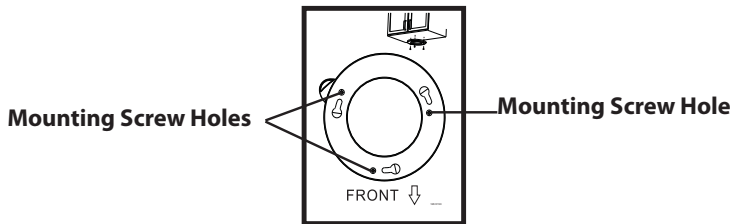

2. Drill three small pilot holes for the mounting screws using a 1/16 inch or 3/32 inch drill bit.

**Caution: Do not drill all the way through the cabinet!**

3. Insert the screws through the Mounting Bracket into the pilot holes. Refer to figure below.

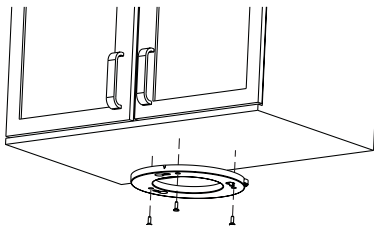


4. Tighten the screws securing the Mounting Bracket of the Under Cabinet/Desktop Docking Station to cabinet surface.

**Caution: Do not over tighten the screws!**




5. Turn the Under Cabinet/Desktop Docking over and locate the three holes to insert three thumb screws that secure to the Mounting Bracket.


**NOTE:** *The unit may come with rubber feet already installed. If so remove the rubber feet first before installing the screws.*

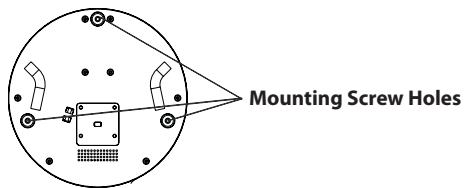


6. Insert the thumb three screws in to the bottom of Under Cabinet/Desktop Docking Station. Do not overtighten the screws.

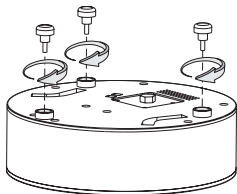


7. Move the locking lever to the unlock position. Insert the bottom of Under Cabinet/Desktop Docking Station into the Mounting Bracket and rotate.

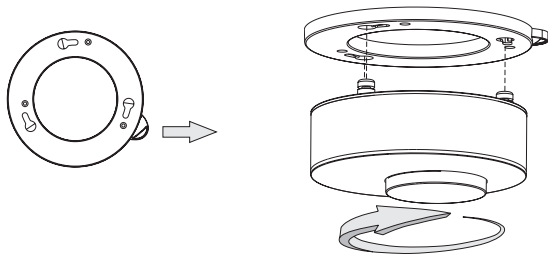

8. Move the locking lever to the lock position. Ensure that the Under Cabinet/Desktop Docking Station is secured to the Mounting Bracket.
9. Set the **STEREO REVERSAL A-B** Switch to the **A** position.
10. Press on the bottom of the Under Cabinet/Desktop Docking Station to extend the bottom assembly to reveal the port for the Protective Case Mounting Arm.

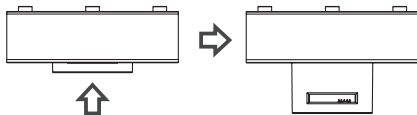

11. Pull the Protective Case Mounting Arm approximately 45 degrees.

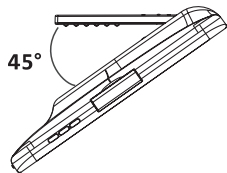


12. Hold the **RED** switch on the Protective Case in the **UNLOCK** position.




13. While holding the **RED** switch on the Protective Case Mounting Arm in the **UNLOCK** position, insert the mounting arm fully into the Under Cabinet Docking Station.
14. When the mounting arm is fully inserted into Under Cabinet Docking Station, release the RED switch on the Protective Case mounting arm moving the switch to the LOCK position.

**CAUTION: Do not attempt to remove the Protective Case mounting arm when the RED switch is in the locked position. Damage to the Under Cabinet Docking Station will result.**

15. Adjust the Protective Case to the desired viewing angle.

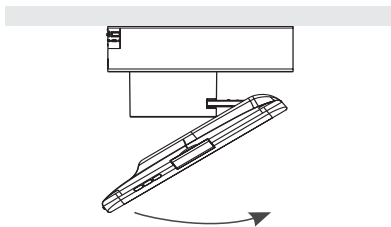

16. Adjust the Protective Case to the desired side to side viewing angle.

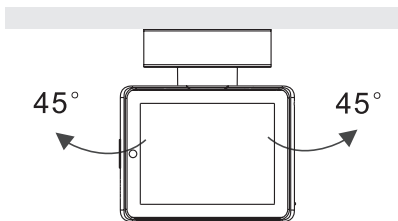


## DESKTOP DOCKING STATION INSTALLATION

1. Turn the Under Cabinet/Desktop Docking Station upside and locate the three holes that will contain rubber feet.




2. Place the rubber feet in the screw holes on the bottom of the Under Cabinet/Desktop Docking Station.

*NOTE: The unit may come with rubber feet already installed.*

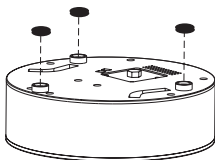

3. Set the **STEREO REVERSAL A-B** Switch to the **B** position.
4. Press on the top of the Under Cabinet/Desktop Docking Station to extend the top assembly to reveal the port for the Protective Case Mounting Arm.

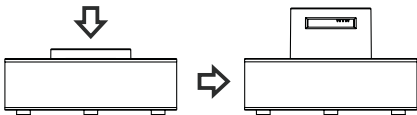

*NOTE: To attach a Protective Case when the Under Cabinet/Desktop Docking Station is on a desktop, refer to the **UNDER CABINET DOCKING STATION INSTALLATION** procedure and perform Steps 11 through 17.*

## NOTES

This page left intentionally blank



**AUDIOVOX**

## **12 MONTH LIMITED WARRANTY**

*Applies to Audiovox Consumer Goods Video Products*

AUDIOVOX ELECTRONICS CORP. (the Company) warrants to the original retail purchaser of this product that should this product (excluding game controllers) under normal use and conditions, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced with reconditioned product (at the Company's option) without charge for parts and repair labor. A game controller, if supplied, is similarly warranted for ninety (90) days.

To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the Company at the address shown below.

This Warranty does not extend to the following: elimination of externally generated static or noise, correction of antenna problems, costs incurred for installation, removal or reinstallation of the product, or to damage to digital memory devices, media devices, gaming devices, discs, speakers, accessories, or vehicle electrical systems.

This Warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.