



QuickStartGuide


M45/M46 series
www.rcaaudiovideo.com

Congratulations on purchasing your new RCA Player.
Please read these instructions for quick tips on using the player.

A comprehensive User Manual in your selected language (English, Spanish, or French) will be copied to your PC as part of the easyRip software installation. You can find the User Manual PDF file as a shortcut on your desktop. The User Manual PDF file can also be found in the player memory under the User Manuals folder.

Getting Started

1. Connect your player to your computer.

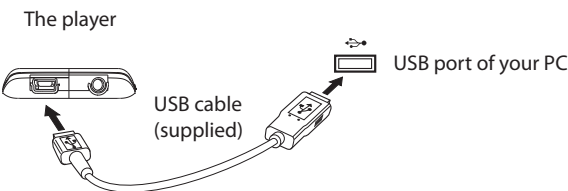

- The RCA easyRip™ Media Software installer is stored in the player, go to **MyComputer** in the Start menu, find and open the drive letter associated with the player (i.e. LYRA) and then double-click the **rcaeasyrip_setup** file to launch the installer.
- The player charges automatically every time you connect it to your computer. It should be **charged for at least 3 hours** before using for the first time.


* The latest software can be downloaded from www.rcaaudiovideo.com.
** RCA easyRip is currently not compatible with DRM files and Audiobooks.

v1.0 (1.0.1.0) (EN/F)

2. Transfer audio/video/picture files to your player with either of the two methods below:

- a) **RCA easyRip:** Helps to rip CD's, create playlists, load content and manage your library with an intuitive and modular design. Click the easyRip icon () on your PC desktop to launch the software.
- For details in using RCA easyRip, click the **Help** icon () on the module dock.

- b) **Windows Explorer:** drag-and-drop audio/image files to the **Internal Storage** folder (Windows Vista™, Windows® 7) or the **Music** or **Picture** folder (Windows® XP) of the player.
- Video files must be transferred via easyRip, which automatically converts files to the Lyra's optimal format.

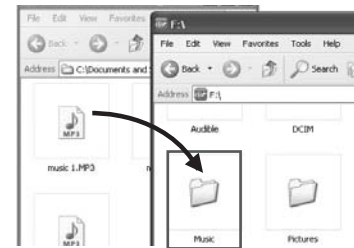

- The player is also compatible with most PC music management software.
- Secure music transfer requirements:** to enable function of transferring subscription music content to the player, please select MTP (Media Transfer Protocol) mode under Protocol in the player's Settings menu (refer to page 28 of the user manual).

3. Disconnect the player from the computer and enjoy media on the go.

* Keep player out of direct sunlight. Exposure to direct sunlight or extreme heat (such as inside a parked car) may cause damage or malfunction.

Windows is a registered trademark of Microsoft Corporation in the United States and other countries.


Learn more about the player

- To view the user manual directly from the player:**
Step 1: Click **Start**.
Step 2: Click **My Computer** (XP users) / Click **Computer** (Vista and 7 users).
Step 3: Find and open the drive letter associated with the player (i.e. LYRA) and then open User Manuals folder.
Step 4: From the User Manuals folder, select the user manual in your preferred language for more information on the player's features, safety and warranty information, and answers to Frequently Asked Questions (FAQ's).

Need more help? Do not return this product to the store.

Visit www.rcaaudiovideo.com for the latest firmware, RCA easyRip Media Software, user manual and FAQ's.

General controls

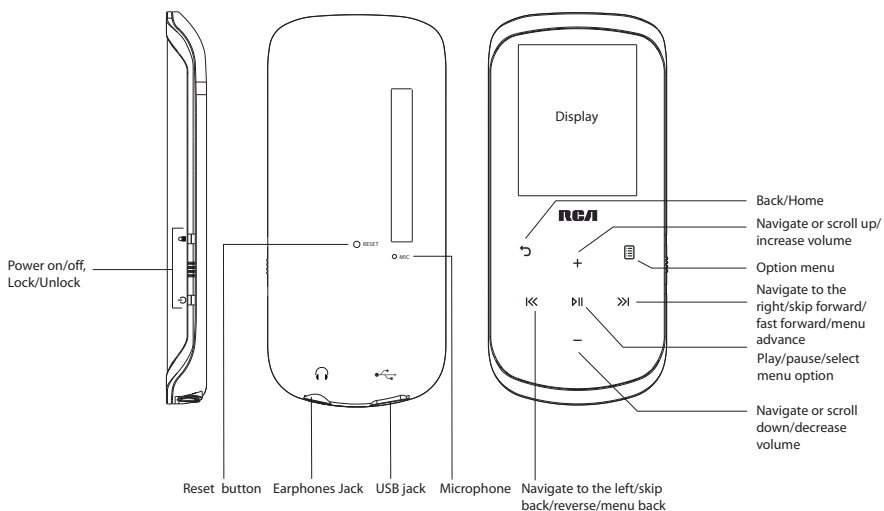

- Turn the player on/off: Slide down
- Lock/Unlock the keys: Slide up. To unlock, slide to the middle position.
- Go to the Home menu (to access Music, Pictures, Videos, Radio, Audiobooks, Favorites, Voice Memo and Settings): Press and hold to display the Home menu.

Navigate to an audio/video/picture file

In the Home menu, Press + or - and or to select the player menu and press + or - to scroll up or down to the desired file

| | |
|---|---|
| Play an audio/video/picture file | Press or |
| Pause playback | Press at the playback (Now Playing) screen, press again to resume |
| Show the Option menu | Press |
| Adjust the volume | Press + or - at the playback (Now Playing) screen |
| Skip to the next file (or section of audiobooks*) | Press |
| Skip to the previous file (or section of audiobooks*) | Press within the beginning 4 seconds of the current audio file |
| Reverse or fast forward an audio file | Press and hold or during playback |
| Delete files from the player | Refer to page 17-27 of the user manual |
| Reset the player (if it is not responding) | Press the RESET button on the back of the player with a non-metal pointed object (e.g. toothpick). |

* Refer to the user manual for information on section skipping for audiobooks.

Visit <http://store.audiovox.com> to find the best accessories for your products.

Audiovox Electronics Corp.
150 Marcus Blvd., Hauppauge, NY 11788

© 2010 Audiovox Electronics Corp.
Printed in China

For Customer Service Visit Our Website At www.rcaaudiovideo.com
Product Information, Photos, FAQ's, User Manual