 


# **Owner's Manual**

## **In - Dash Navigation Radio**

**Addendum for Pandora Radio**



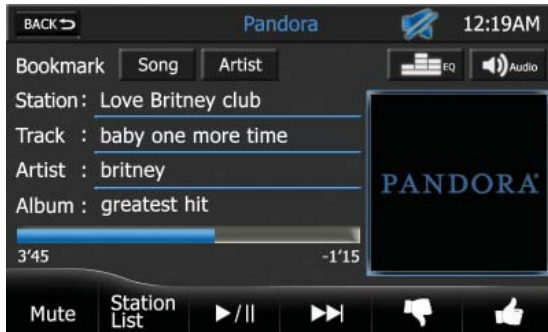

## PANDORA SCREEN

You can access Pandora Radio via your iPhone.

NOTE: Your iPhone must be connected to the Media Link using the iPhone adapter cable that comes with your iPhone or is available separately. The Pandora app must be installed on your iPhone.

### Back ↶ Icon:

Press this icon to return to the iPod Screen.

### 🔇 Mute Indicator:

This indicator is displayed when the volume is muted.

### Time Display:

This indicator displays the time as entered by the user in the Settings Menu.

### Song Icon:

Press this icon to bookmark a song.

### Artist Icon:

Press this icon to bookmark an artist.

### EQ - Equalizer Icon:

Press this icon to access the equalizer controls.

### 🔊 Audio Icon:

Press this icon to access the audio controls.

### Playback Information Display:

Displays station, track, artist, album, and elapsed time information.

### Pandora Preview Window:

Displays album art, if available.

### Mute Icon:

Press this icon to mute the audio output of the unit. The mute indicator will appear. Press this icon again to unmute the volume. The mute indicator disappears.

### Station List Icon:

Press this icon to access the Station List Screen.

### ▶/⏸ Play/Pause Icon:

Press this icon to begin playback. Press this icon again to pause playback.

### ⏭ Next Icon:

Press this icon skip a song, subject to the skip limit.

### 👎 Thumbs Down Icon:

Press this icon to tell Pandora to not play this track. Pandora will skip to the next track. If the skip limit has been reached, Pandora will continue to play but your feedback will be recorded.

### 👍 Thumbs Up Icon:

Press this icon to tell Pandora "you like this track" and bring in more tracks like it to your station.

# Pandora Radio Operation

## Station List Screen



The Station List Screen allows you to search for music by stations you created. Press a list box item to choose a station. Press the Scroll Down (▼) icon to view the next page in the menu list or the Scroll Up (▲) icon to view the previous page.

### Back ↵ Icon:

Press this icon to return to the Pandora Screen.

### 🔇 Mute Indicator:

This indicator is displayed when the volume is muted.

### Time Display:

This indicator displays the time as entered by the user in the Settings Menu.

### By Date Icon:

Press this icon sort the station list by date created.

### A-Z Icon:

 
Press this icon sort the station list in alphabetical order.

## To Launch/Stop Pandora Radio

1. Launch the Pandora app on your iPhone. The Pandora icon appears on the Main Menu Screen.




2. Press the Pandora icon. The Pandora Screen appears.

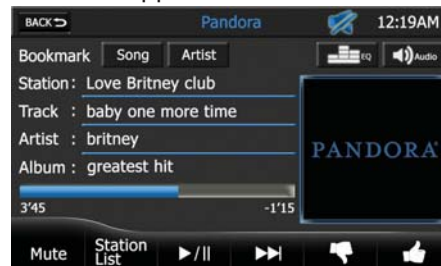

3. Press the ▶/|| icon to begin playback.

 4. Press the Back ↵ Icon to exit Pandora and return to the iPod Screen.

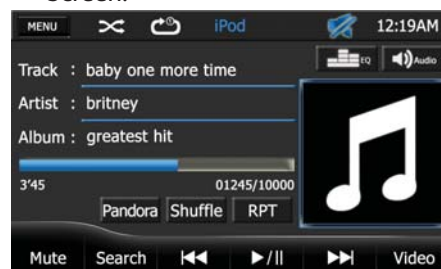

5. Press the Pandora icon to return to Pandora Radio.



Note: When you exit Pandora and return to music stored on the iPod, you must select "Search", then select a song/playlist/artist etc, on the iPod to begin playback of iPod music. This is due to a limitation in the way the Apple device interacts with the Pandora app. A future release of Pandora may address this issue.

**Pandora Error Messages**

| <b>Error</b>                                   | <b>Solution</b>  |
|--|--|
| BookMark Song Error                            | The song could not be bookmarked, please try again in a moment.  |
| BookMark Artist Error                          | The song could not be bookmarked, please try again in a moment.  |
| Thumbs Up / Down Error<br>"Error Track Rating" | Song feedback could not be sent, please try again in a moment.   |
| No Active Station Error                        | This account has no stations in it. Please visit Pandora.com and login to your account and add stations. |
| Skip Limit Reached                             | Please note that Pandora limits skips to a maximum of six skips per station, per hour.                   |



For Customer Service  
Visit Our Website At

**[www.adventproducts.com](http://www.adventproducts.com)**

Product Information, Photos,  
FAQ's Owner's Manuals

If technical support is required, please contact  
Advent Technical Support at 1-800-323-4815.