 






Personal GPS Locator Quick Start Guide



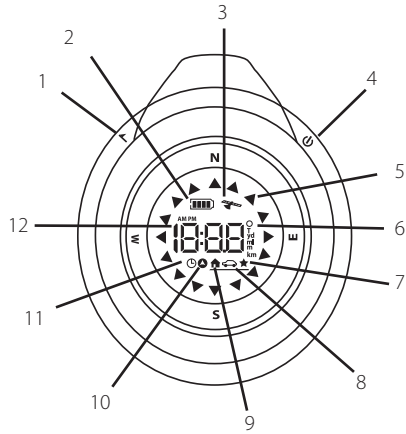

 
 


1. Store/Set (➤) Button - Press to save a setting.
- Press to turn on the backlight. The backlight will remain on for twenty seconds.
2. Battery (🔋 / 🔌) Indicator - Indicates amount of battery charge remaining. Displays 🔋 when the battery is fully charged. Displays 🔌 and flickers when battery power is insufficient.
3. GPS Satellite (📶) Indicator - Steady when GPS signal is locked. Flashes when acquiring GPS signal.
4. On/Off/Mode (⏻) Button - Press and hold to turn unit on/off.
- Press to change mode.
- Press to turn on the backlight. The backlight will remain on for twenty seconds.
5. Direction Arrow (▲) - Points to the North when in Compass Mode. Points to the stored location when in Location Mode.
6. Units Indicator - Displays time mode (T), degrees (O), yards (yd), miles (mi), kilometers (km), or meters (m)
7. Favorite (★) Indicator - Lit when in Favorite Location Mode.
8. Car (🚗) Indicator - Lit when in Car Location Mode.
9. Home (🏠) Indicator - Lit when in Home Location Mode.
10. Compass (🧭) Indicator - Lit when in Compass Mode.
11. Time (🕒) Indicator - Lit when in Time Mode.
12. Data Display Area - Data displayed depends on the mode selected.

To turn the unit on:







1. Press and hold the On/Off () switch for three seconds.
2. Wait for the GPS signal to lock. The GPS Satellite () Indicator will be steady when locked. If the GPS signal is not locked, the time will not display and location modes will not operate.

Note: The GPS signal may not lock when you are indoors. To receive the best signal, use the GPS Locator outdoors. Hold the unit face up towards the sky. Move away from tall buildings, trees or overhead obstructions.



To change mode of operation:

1. Press the Mode () Button to change the mode in the following sequence: Time Mode (), Compass Mode (), Home Location (), Car Location (), Favorite Location ().



To set and store a location:

1. You must first physically be at the location you want to store.
2. Press the Mode () Button repeatedly until the Home Location (), Car Location () or Favorite Location () indicator appears.
3. Once you are in the desired location, make sure that you are connected to the satellite.
4. Press and hold the Store/Set () Button until the location is set. The location has been set when you see a zero on the display and all the Direction Arrows () around the display are on. This indicates you have "locked-in" that location.

To return to a location:

1. Select the desired location (Home, Car, or Favorite) on the device. At this point, only one direction arrow on the circumference of the display will light up. This indicates what direction you need to head towards. The digital read out in the display represents the distance, in either meters or yards, you are from the desired location.
Note: If the GPS Satellite () Indicator is flashing, the GPS is not locked and distance and direction can not be displayed.
2. Press the Store/Set () Button to change the units of measurement from yards to meters or from miles to kilometers.
Note: If distances are greater than 1,999 meters, the unit will display distances in miles/kilometers.
3. As you follow the arrow and get closer to the location, the digital read out will decrease until it reaches zero, indicating you are at your desired location.

To turn the unit off:

1. Press the On/Off () switch for three seconds. The backlight will light.
2. When the backlight is lit, press and hold the On/Off () switch for three seconds.