



English QuickStartGuide

VR5210

www.rcaaudiovideo.com

Congratulations on purchasing your new RCA iREMEMBER.

Please read these instructions for quick tips on using the player.

Need more help? Do not return this product to the store.


Visit www.rcaaudiovideo.com for the latest user manual and FAQ's.

Date and time setup

1. Insert 2 AAA batteries (not included).
2. Slide the / switch to to turn on the player.
3. While playback is stopped, press **MENU** to access the player menu.
4. Press / to select **DATE+TIME** and press **PLAY-PAUSE** button to confirm selection.
5. Press / to select **SET TIME, SET DATE** and **TIME FORMAT** and press **PLAY-PAUSE** button to confirm selection.
6. Press **PLAY-PAUSE** button to select hour, minute, AM/PM, month, day and year. Press / to adjust the value and then press **PLAY-PAUSE** to confirm selection.

v1.0 (1.0.1.0) (EN/F/E)

General controls

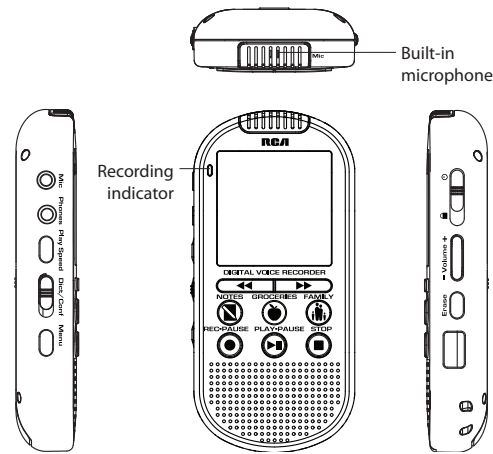

Turn the player on/off	Slide the / switch to
Lock/Unlock the keys	Slide the / switch to to lock the keys. Reverse the step to unlock.
Go to the Settings menu (to access Quality, Beep Tone, Auto-Append, Format, Reset and Version)	While in stop mode, press MENU to access the Settings menu
Navigate to folders and files	While in stop mode, press NOTES, GROCERIES or FAMILY to access the corresponding folders. Press / to select files
Start playback	Press PLAY-PAUSE to start playback
Pause playback	During playback, press PLAY-PAUSE to pause playback, press again to resume playback
Start recording	While in stop mode, press REC-PAUSE to start recording
Pause recording	While in record mode, press REC-PAUSE to pause the recording. Press again to resume
Stop recording	Press STOP

Select recording mode	Use the Dict/Conf switch to select between dictation and conference recording modes
Adjust the volume	While in stop mode or during playback, press - Volume +
Select playback speed	Press Play Speed to select different speeds (SLOW, NORMAL and FAST)
Display file information	While in stop mode, press and hold MENU
Skip one file forward or backward	While in stop mode, press ◀ / ▶
Delete files from the player	While in stop mode select file to be deleted, press ERASE . Press ◀ / ▶ to select one of the deleting options and press PLAY•PAUSE to confirm selection
Reset the player (if it is not responding)	Go to the Settings menu. Press ◀ / ▶ to select Reset and then press PLAY•PAUSE to confirm selection



12 Month Limited Warranty Applies to RCA Voice Recorders

AUDIOVOX ACCESSORIES CORP. (the Company) warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced with reconditioned product (at the Company's option) without charge for parts and repair labor.

To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the Company at the address shown in the User Manual.

This Warranty does not extend to the elimination of externally generated static or noise, to correction of antenna problems, loss/interruptions of broadcast or internet service, to costs incurred for installation, removal or reinstallation of product, to corruptions caused by computer viruses, spyware or other malware, to loss of media, files, data or content, or to damage to tapes, discs, removable memory devices or cards, speakers, accessories, computers, computer peripherals, other media players, home networks or vehicle electrical systems.

This Warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Visit <http://store.audiovox.com> to find the best accessories for your products.



© 2012 Audiovox Accessories Corporation
Indianapolis IN
Trademark Registered
Printed in China