

TERK OMNI AMPLIFIED MULTI-DIRECTIONAL
PLATINUM HDTV ANTENNA
ULTRA PRO Quick Start Guide

Check out setup videos at
www.TERK.com/Setup

1 Find the best location for your antenna.



TV antennas perform best when facing the direction of the broadcaster's tower.

For help finding your local broadcast towers, go to www.TERK.com


Antenna Placement Tips

- ✓ Avoid metal surfaces (like a metal stand).
- ✓ Move the antenna close to or in a window.
- ✓ Position the antenna as high as possible.

2 Place the antenna.

Place the antenna on a flat surface within reach of your TV, facing the direction where most of your broadcast towers are located.


3 Connect the antenna's coaxial cable to your TV.

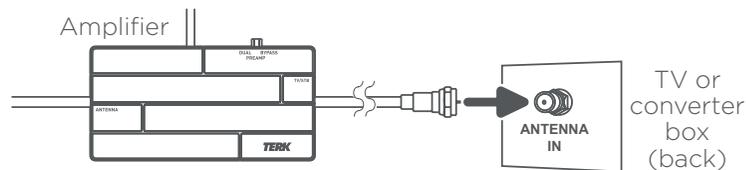

IMPORTANT: Make sure your TV is turned off.

FOR BEST RESULTS make sure you uncoil the antenna's coaxial cable completely! Leaving any part of the coaxial cable coiled will compromise your reception performance.

4 Plug in the antenna's power cord to a power outlet.

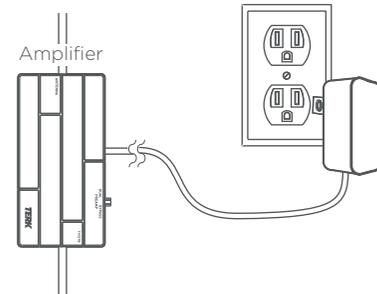

TIP: The amplifier has a 3-way DUAL / PREAMP / BYPASS switch that lets you adjust the amplifier for different TV signals. The DUAL position uses both external amplifier and the preamp built into the antenna itself. The PREAMP position uses just the preamp. The BYPASS position turns all amplification off. Most TV channels will perform better with this switch left in the DUAL position. However, if a channel is not providing the performance you expect, try watching it with this switch in the PREAMP or BYPASS position to see if that makes a difference.

5 Scan for channels on your TV.

Most TVs have a channel scan option in their menu system, many times in a SETUP or CHANNEL menu under ANTENNA. For detailed instructions on performing a channel scan, see the owner's manual that came with your TV.

IMPORTANT: For some channels you might get better performance with the antenna in a different position or facing a different direction. Sometimes just a little bit of adjustment can make a difference!

STOP!

DO NOT RETURN this product to the store!
Please call our toll-free help line at **1-800-768-1969**
or visit **TERK.com**

1 Encuentre la mejor ubicación para su antena.



Las antenas de TV funcionan mejor cuando están orientadas hacia la torre de radiodifusión. Si necesita ayuda para conocer la ubicación de las torres de radiodifusión locales, visite www.TERK.com


Consejos para la ubicación de la antena

- ✓ Evite las superficies de metal (tal como un soporte de metal).
- ✓ Mueva la antena a una ventana o cerca de ella.
- ✓ Coloque la antena lo más alto posible.

2 Coloque la antena.

Coloque la antena en una superficie plana cerca de su TV, orientada en la dirección donde se encuentran la mayoría de las torres de radiodifusión.


3 Conecte el cable coaxial de la antena a su TV.

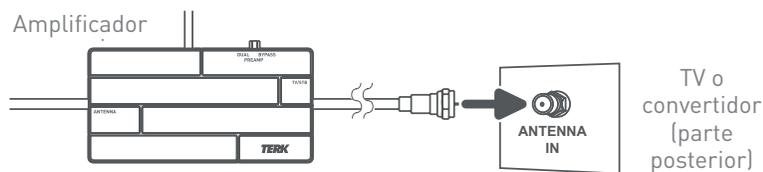

IMPORTANTE: Asegúrese que el TV esté apagado.

PARA OBTENER LOS MEJORES RESULTADOS, asegúrese de desenrollar completamente el cable coaxial de la antena. La recepción será afectada si no se desenrolla completamente el cable coaxial.

4 Enchufe el cordón de alimentación de la antena en un tomacorriente.

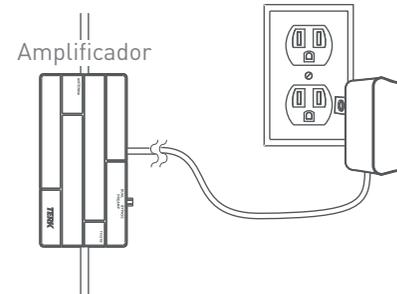

CONSEJO: El amplificador tiene un interruptor DUAL / PREAMP / BYPASS de 3 vías que le permite ajustar el amplificador para diferentes señales de TV. La posición DUAL utiliza ambos, el amplificador externo y el preamplificador incorporado en la antena. La posición PREAMP utiliza únicamente la rampa. Y la posición BYPASS desactiva todas las funciones de amplificación. La mayoría de los canales de TV funcionarían mejor cuando se deja este interruptor en la posición DUAL. Sin embargo, si un canal no funciona en la forma esperada, intente verlo con el interruptor en las posiciones PREAMP o BYPASS para ver si hay alguna diferencia.

5 Busque canales en su TV.

La mayoría de televisores tienen una opción para buscar canales en el sistema de menús, frecuentemente como un menú de configuración o lista de canales debajo de la antena. Para obtener instrucciones detalladas sobre cómo llevar a cabo una búsqueda de canales, consulte el manual del propietario incluido con el TV.

IMPORTANTE: Para algunos canales es posible que pueda obtener un mejor desempeño con la antena en una posición diferente u orientada en una dirección diferente. ¡Algunas veces un ajuste pequeño hace una gran diferencia!

¡ALTO!

¡NO devuelva este producto a la tienda!
Llame a nuestra línea de ayuda libre de cargo al 1-800-768-1969 o visite TERK.com