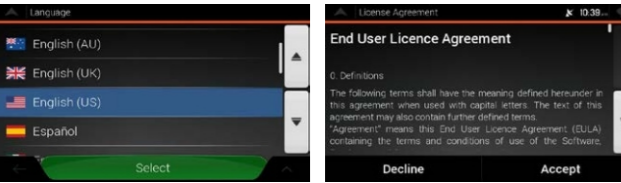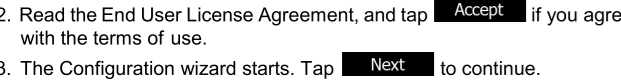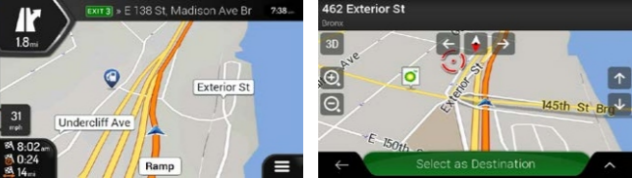## Initial set-up

1. Select your preferred language, then tap **Select** to confirm your selection. Later you can change it in Regional settings.

2. Read the End User License Agreement, and tap **Accept** if you agree with the terms of use.
3. The Configuration wizard starts. Tap **Next** to continue.
4. Select the language and speaker used for voice guidance messages and tap **Next**. Later you can change it in Regional settings. Tap any item in the list for a short voice sample. Tap **Next** to confirm your selection.
5. Set your preferred units and time formats, and tap **Next**.
6. Set your route preferences, and tap **Next**.
7. (optional) You are now asked if you authorize the system to activate connected services, for example weather and fuel price information. Tap **Accept** to activate these services right away or **Next** to activate them later. To access connected services, you need internet connection via your cell phone.
8. If you have activated these services right away, you can see a message saying that the connected online features are activated. Tap **Next**.
9. Select the connected services you want to use and tap **Next**.
10. The initial set-up is now complete, tap **Finish** to enter the map screen.

Map screen

The map screen is the most important and frequently used screen of the software. During navigation, the map screen shows route information.

When there is no GPS position, the current position arrow is transparent. It shows your last known position. When a GPS position is available, the current position arrow is displayed in full color showing your current position.

If you have not selected a route destination, you can see your heading and the current street on the map screen. If you selected a destination, the following three data fields are displayed in the bottom left corner:
• The estimated time of the arrival at the destination
• The remaining time of the trip
• The remaining distance to the destination.

You can change the default values in **Settings**, **Data Fields** or by tapping and holding the area where the data fields appear.

Tap the screen once where the data fields appear to open the Trip Summary screen.
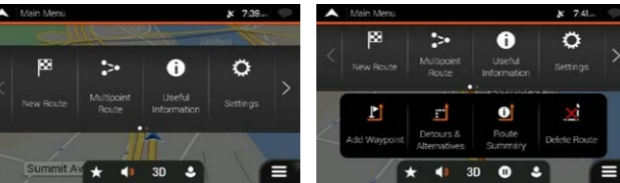
The following additional buttons are displayed when you are navigating a route and you are approaching your destination:

• **P** :Tap it to check the available parking facilities around your destination.

• :Tap it to access additional options: check the trip summary, find Places around your final destination, save the current location, switch to pedestrian navigation or suspend the navigation.

• **mic** : If the TTS voice language is the same as the language of Advent Generation II a microphone icon appears on the screen. By using Voice Recognition you can give voice commands to Advent Generation II. By tapping the street name at the bottom of the map, you can open the **Where Am I** screen. By tapping , you can open the Navigation menu.

Navigation menu

On the Map screen, tap to open the Navigation menu.

You can see the following menu options when you are navigating without a planned route:

Button	Instruction
New Route	Select your destination by entering an address or its coordinate, or by selecting a Place, a Saved Location, or a Saved Route. You can also look up your recent destinations from the Smart History.
Multipoint Route	Build your route from one or more route points. You can also plan a route independently of your current GPS position by setting a new starting point.
Traffic	Check the traffic events affecting your route, or view historical traffic data.

When you are navigating with a planned route, the following menu options are also available:

Button	Instruction
Add Waypoint	Add an intermediate destination to your route.
Detours & Alternatives	See route alternatives to avoid parts of the route, or to avoid a specific road from your planned route.
Route Summary	View the route in its full length on the map and to display route parameters and route alternatives. Tap to access additional options, like Simulation or Route Preferences.
Delete Route	Delete your route.
Delete Waypoint	Delete the next waypoint or the whole route.

Button	Instruction
i	Access additional options and to check some useful information, for example traffic information, fuel prices, and so on.
Settings	Customize the way the navigation software works.
	See information about the navigation software.
Exit	Stop the navigation and exit the software.

When you are navigating with a planned route, the following menu options are also available:

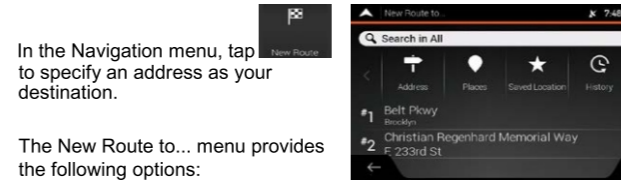| Button	Instruction
	Add an intermediate destination to your route.
	See route alternatives to avoid parts of the route, or to avoid a specific road from your planned route.
	View the route in its full length on the map and to display route parameters and route alternatives. Tap to access additional options, like Simulation or Route Preferences.
	Delete your route.
	Delete the next waypoint or the whole route.

In the navigation menu, you have the following additional options:

Button	Instruction
★	Open the Saved Locations screen where you can save a location as a favorite destination or edit a saved location.
🔊	Set the volume or mute the navigation.
3D	Switch to 3D mode.
2D	Switch to 2D mode.
2D	Switch to 2D North up view mode.
⏸	Suspend navigation.
▶	Resume navigation.
	Access the User profiles menu where you can create new profiles or edit the existing profiles. If more drivers are using the navigation system, they can create their own profiles with their own settings. Their smartphones can be assigned to the relevant user profile, which makes data synchronization possible between the smartphone and the built in navigation system.

Button	Instruction
	Check those notifications that contain important information but do not require immediate action from the users.
	Open additional options within the menu options on certain screens.
▲	Return to the map from any menu screen.

New Route menu

In the Navigation menu, tap to specify an address as your destination.

The New Route to... menu provides the following options:

Button	Instruction
🔍 Search in All	Find your destination regardless of its type in (Undefined variable: BrandingVariables.NameOfIQS).
Address	Specify an address as your destination.
Places	Select a place of interest as your destination.
Saved Locations	Choose from the list of your saved locations.
Online Services	Use the Online Search service.
History	Choose from the list of all recent destinations.
Saved Routes	Select a saved route as your destination or intermediate destination.
Coordinates	Select a destination by entering its coordinate.

Select a destination by choosing a picture that contains the coordinates of the required location.

Two of your recent destinations are listed in the New Route to... menu for easy access. Tap any of the smart history items to set the location as your destination.

Navigating to an address

Tap on the Navigation view to access the Navigation menu.

In the Navigation menu, tap . In the US, the screen proposes only the country and the state while in other countries you can see the city or town where you are located.

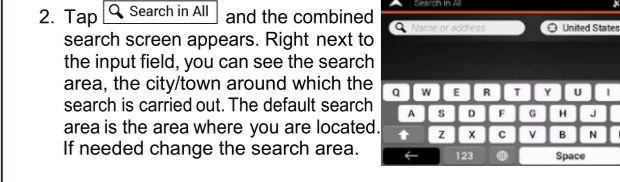To change the country or the state, perform the following steps:
1. Use the keyboard to enter the name of the country and state.
2. After entering a couple of characters, the list of countries and states that match the entered string appears. Together with the country, select the state, or select the name of the country where it stands without a state to search for an address in all its states.
3. Tap ✓ to open the list of results and select the country of your choice.

Outside the United States, the current city is displayed. This field is empty when you are in the US. If you leave it empty, you can immediately search for a street in all the cities of the selected state. To change the city, perform the following steps:
1. Tap **City** and use the keyboard to enter a part of the city/town name.
2. As you enter letters, the names that match the string appear in a list. Tap ✓ to open the list of results.
3. Select a city/town from the list.

Using combined search

You can initiate a separate search for addresses, Places, saved locations, or recent destinations, but the fastest way to search for any of these is to use combined search.

1. On the Map screen, tap to access the Navigation menu and then .

2. Tap **Search in All** and the combined search screen appears. Right next to the input field, you can see the search area, the city/town around which the search is carried out. The default search area is the area where you are located. If needed change the search area.

3. With the proper search area displayed, you can start entering the name, address, or category of the destination you are looking for.
4. Tap ✓ to see the search results. You can see all results in the list, regardless of their type. Addresses, Places, Place categories, Saved Locations and recent destinations are mixed within one list.
5. If needed, tap the related button to narrow the list of search results by types (the number on the related icon shows the number of matching results):
   • Tap to see the list of recent destinations with a matching name or address.
   • Tap to see the list of your saved location (Favorite) destinations with a matching name.
   • Tap to see the list of matching addresses.
   • Tap to see the list of Place categories. Scroll the list and select one of the categories. You get the list of Places in that category ordered by their distance from your current position.
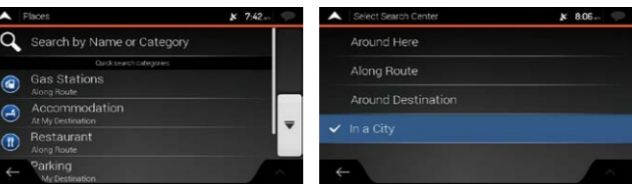

• Tap to see the list of matching Places ordered by their distance from your current location.
• (optional) Should your product contain Places from different data providers, you can further narrow the list by showing the results from one provider only. Look for the provider logos. Select any of them to see Places from that provider.
• Tap to see the list of matching Places. The search uses the Online Search service.
6. The map appears with the selected destination in the middle. If necessary, tap the map somewhere else to modify the destination. The Cursor ( ) appears at the new location.
7. (optional) If needed, change some of the route setting parameters.
Tap to avoid freeways, tap to avoid Period Charge or Per-use Toll roads, tap to avoid ferry, or tap to avoid carpool roads.
8. Tap **Select as a Destination** to confirm the destination, or tap to select a different destination.
9. After a short summary of the route parameters, the map appears showing the entire route. Wait for a few seconds or tap **Start Navigation**.
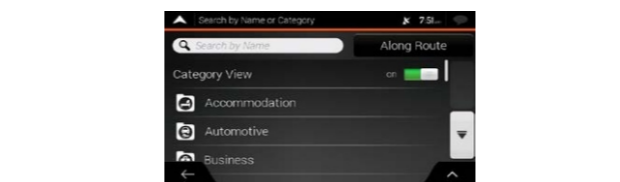
Navigating to a place of interest

1. On the Map screen, tap to access the Navigation menu. In the Navigation menu, tap , then tap . You are offered the following pre-set search categories:
• Tap **Gas Station** to get a list of gas stations along the route or if it is not available, around your current position or your last known position.
• Tap **Accommodation** to get a list of accommodation near the destination, around your current position or your last known position.
• Tap **Restaurant** to get a list of restaurants along the route, around your current position or your last known position.
• Tap **Parking** to get a list of parking lots near the destination or if it is not available, around your current position or your last known position.

2. Tap **Search...** to open the Search By Category window. Here, you can search for Places of Interest by their name, categories and subcategories at the following locations:
• Tap **Around Here** to search around the current position or if it is not available, around the last know position.
• Tap **In a City** to search for a place within a selected city.
• Tap **Around Destination** to search for a place around the destination of the active route.
• Tap **Along Route** to search along the active route, and not around a given point. This is useful when you search for a later stopover that results in a minimal detour only, such as searching for upcoming gas stations or restaurants.
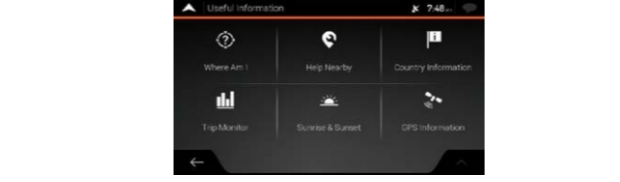
An example of navigating to a place of interest

For example, to find a park around your destination, perform the following steps:
1. On the Map screen, tap to access the Navigation menu. In the Navigation menu, tap , then tap .
2. Tap **Search...** to open the Search By Category window.
3. Select the area around which the Place should be searched for. Tap the **Around Here** button and select **Around Destination**.

4. Browse the list of place categories, and tap one of them.
5. Tap **Category View** to browse the whole category, or tap a subcategory to narrow down your search.
6. Tap any of the list items.
7. (optional) If needed, change some of the route setting parameters.
8. Tap to avoid freeways, tap to avoid Period Charge or Per-use Toll roads, tap to avoid ferry, or tap to avoid carpool roads.
9. Tap **Select as Destination** to confirm the destination, or tap to select a different destination.
10. After a short summary of the route parameters, the map appears showing the entire route. Wait for a few seconds or tap **Start Navigation**.
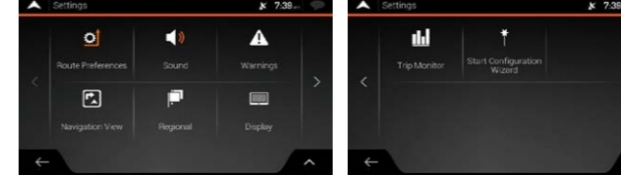
Useful Information menu

The Useful Information menu provides various additional functions. In the Navigation menu, tap . You need an Internet connection via your cell phone to access online services (for example, parking and weather information).

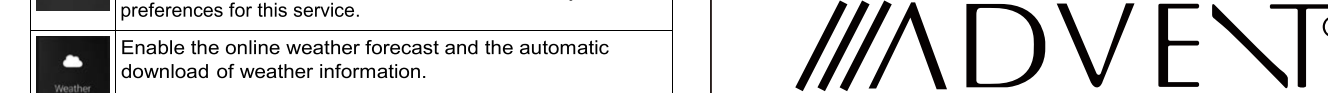| Button	Description
Where Am I	Shows information on the current position (latitude, longitude, nearest town, next crossing street, and so on) or the last known position if GPS reception is not available.
Help Nearby	Offers assistance near your current position.
Country Information	Offers a list of countries with useful driving information about the selected country (for example speed limits, maximum blood alcohol level).
Trip Monitor	Shows statistical data of your trips, like the start time, end time and average speed.
Sunrise & Sunset	Shows a world map with the sunlit and dark areas of the world. Tap to check the exact sunrise and sunset times for all your route points.
GPS Information	Shows the GPS Information screen with satellite position and signal strength information.

Settings menu

You can configure the program settings, and modify the behavior of Advent Generation II. Tap , and .
Tap the arrows to view the content of other pages.

The Settings menu provides the following options:

Button	Instruction
Route Preferences	Select the type of vehicle you are driving, the road types used in route planning, and the route planning method.
Sound	Adjust the different sound volumes.
Warnings	Enable and set up warnings for speed limit, alert points (such as speed cameras), and road signs.
Navigation View	Fine-tune the appearance of the map screen or adjust how the software helps you navigate with different kinds of route-related information on the map screen.
Regional	Change the voice guidance language, set the time zone, the measurement units, the time and date, and formats, and customize the application for your local language.

	Enable or disable menu animations.
Traffic	The recommended route is not always the same between two points. Whenever suitable data exists, traffic information can taken into account in the route calculation. Set your preferences for this service.
Weather	Enable the online weather forecast and the automatic download of weather information.
Fuel	Enable or disable the online fuel price service and select the fuel types to consider.
Trip Monitor	Turn the automatic trip log saving on or off and check the current size of the trip database.
Online Services	Enable or disable services that require an Internet connection.
Usage Reports	Collects usage information and GPS logs that may be used for improving the application and the quality and coverage of maps. Tap this button to enable or disable collecting these data.
Start Configuration Wizard	Modify the basic software parameters set during the initial set-up process. See Page 1.

///ADVENT®

iGo Next Gen Navigation Quick Start Guide.

A complete navigation manual can be downloaded from our website at no charge. Visit www.adventproducts.com for more information on your product.