

RCA QuickStartGuide

English **small wonder**
EZ1000 Series RCA Small Wonder Camcorder
www.rcaaudiovideo.com


Congratulations on purchasing your new RCA Small Wonder Camcorder. Please read these instructions for quick tips on using the product.

The User Manual PDF file can also be found in the camcorder memory under the User Manuals folder.

1. Content of the box

- Small Wonder Camcorder
- USB cable
- AV cable
- Carrying case
- 4 x AAA batteries
- Wrist strap
- Quick Start Guide
- Owner Registration card
- Warranty leaflet

2. Battery Installation

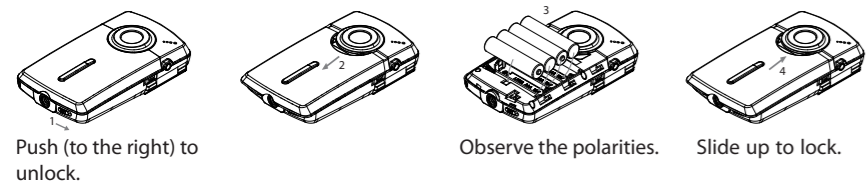


Push (to the right) to unlock.

Observe the polarities.


Slide up to lock.

3. General controls

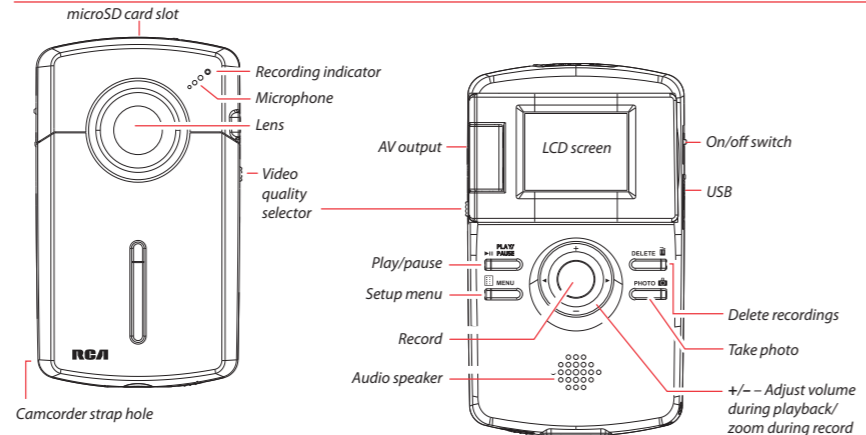


4. Inserting (or removing) memory card

The camcorder internal memory will only permit minutes of recording time. A microSD memory card (not included) is recommended for recording.

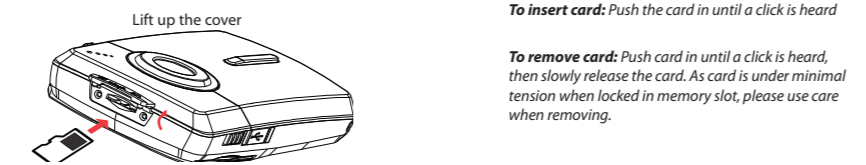


As the memory card is small in size, it is recommended to use a **small coin** to help insert or remove it.

5. Turning on the camcorder

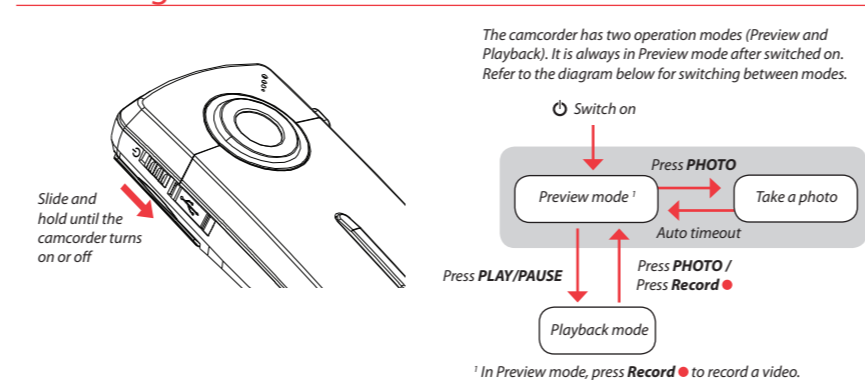


6. Selecting recording quality

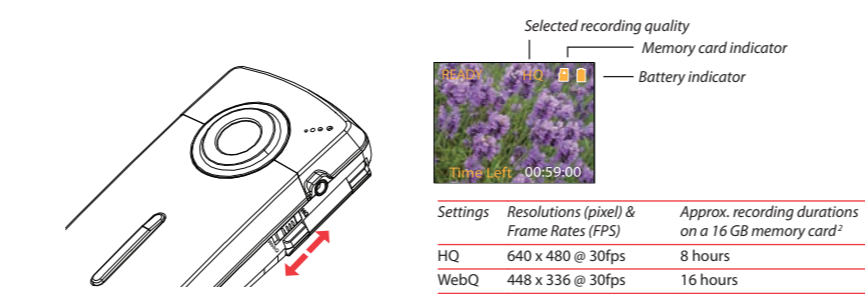


² Actual recording time and capacity will vary depending on type of video content being recorded, system requirements, and other factors.

7. Video recording and photo taking

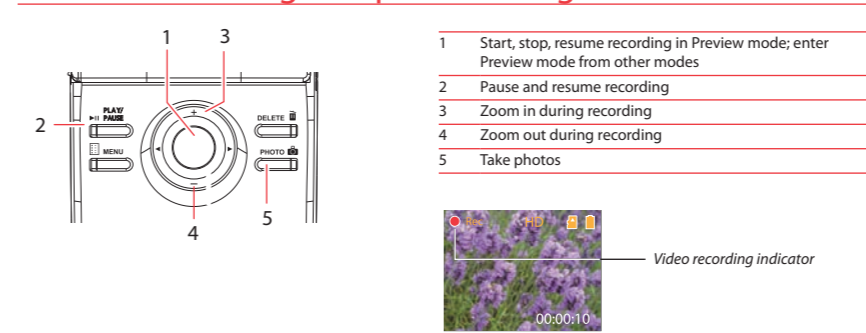

8. Playing back or deleting recordings

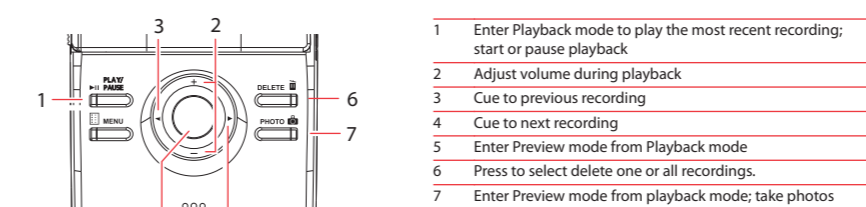

² Actual recording time and capacity will vary depending on type of video content being recorded, system requirements, and other factors.

9. Installing RCA Memory Manager application

Connect the camcorder to your PC with the provided USB cable.

To install Memory Manager
Windows: Open **My Computer** and double-click the drive labeled SMALLWONDER. Double-click **MemoryMgr3_Windows_Installer.exe** to start the installation.

Mac: Open the mounted drive labeled SMALLWONDER. Double-click the **RCA Mac Installers.dmg** folder. Double-click the **MemoryMgr3 Mac Installer** to start the installation. After the Memory Manager 3 installation has completed, double-click **RCA Detective Installer** to install the RCA Detective application.

To ensure that videos can be managed and played on your PC:

- Make sure to install the included Memory Manager application.

10. Learning more about the camcorder

- Read the user manual for more information on the followings:
- Using the **MENU** button to setup the camcorder (including date and time)
 - Viewing videos on TV
 - Recording videos to VHS tape or DVD
 - Connecting the camcorder to your PC
 - Tips and troubleshooting
 - Safety and warranty information



For Customer Service Visit Our Website At www.rcaaudiovideo.com
Product Information, Photos, FAQ's, Owner's Manuals
Audiovox Electronics Corp.
150 Marcus Blvd., Hauppauge, NY 11788
© 2010 Audiovox Electronics Corp.
Trademark Registered
Printed in China

RCA Guide de Démarrage Rapide

Français **small wonder**
Camscope RCA Small Wonder Séries EZ1000
www.rcaaudiovideo.com


Félicitations d'avoir acheté votre nouveau camscope RCA Small Wonder. Veuillez lire ces instructions pour des conseils sur l'utilisation de cet appareil.

Le fichier PDF du guide de l'utilisateur se trouve aussi sur le lecteur, dans le répertoire « User Manuals ».

1. Contenu de la boîte

- Camscope Small Wonder
- Câble USB
- Câble AV
- Étui de transport
- 4 piles AAA
- Dragonne
- Guide de démarrage rapide
- Carte d'enregistrement du propriétaire
- Feuillet de la garantie

2. Installation des piles

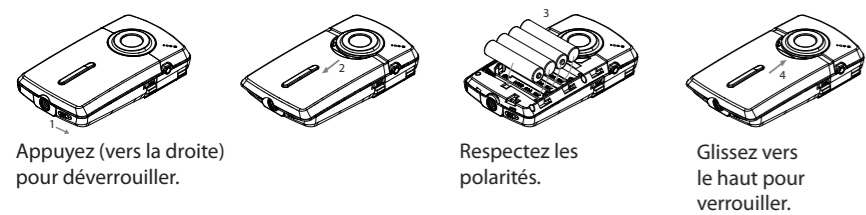


Appuyez (vers la droite) pour déverrouiller.

Respectez les polarités.


Glissez vers le haut pour verrouiller.

3. Commandes générales

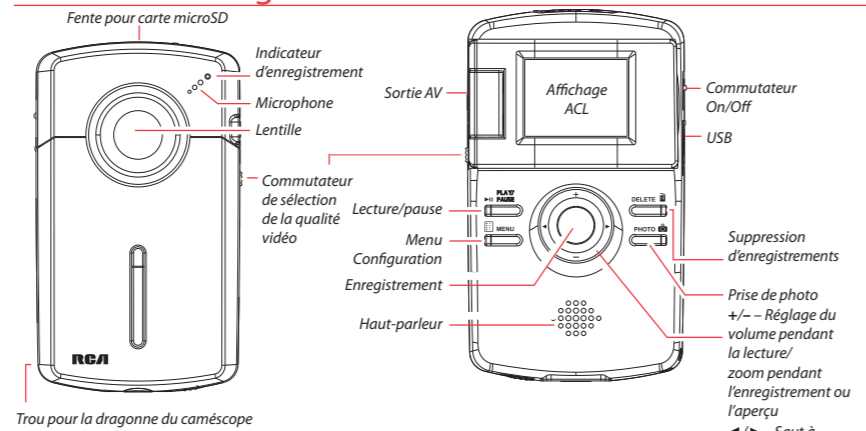


4. Insertion (ou retrait) d'une carte-mémoire

La mémoire interne du camscope n'offre que quelques minutes d'enregistrement. Une carte-mémoire microSD (non fournie) est recommandée pour l'enregistrement.

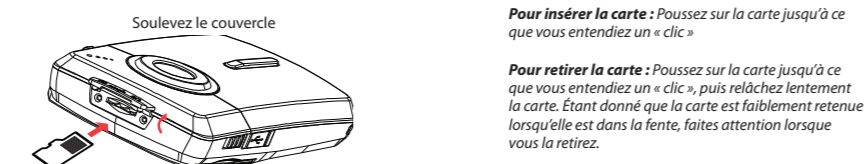


Étant donné que la carte-mémoire est de petite taille, nous vous recommandons d'utiliser une pièce de monnaie pour l'insérer ou la retirer.

5. Démarrage du camscope

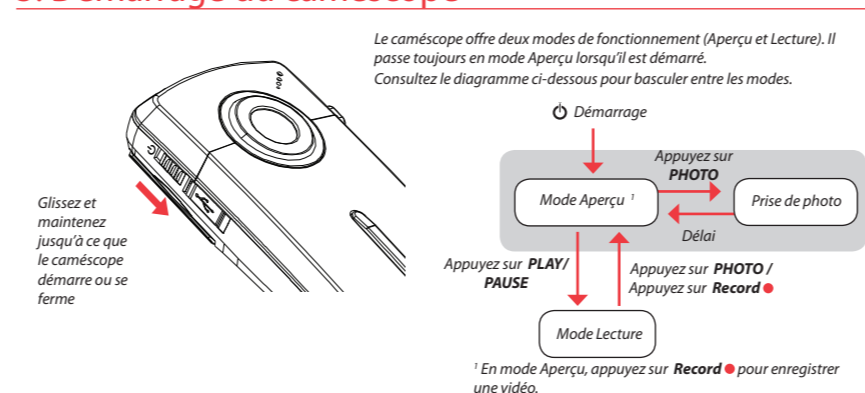


6. Sélection de la qualité d'enregistrement

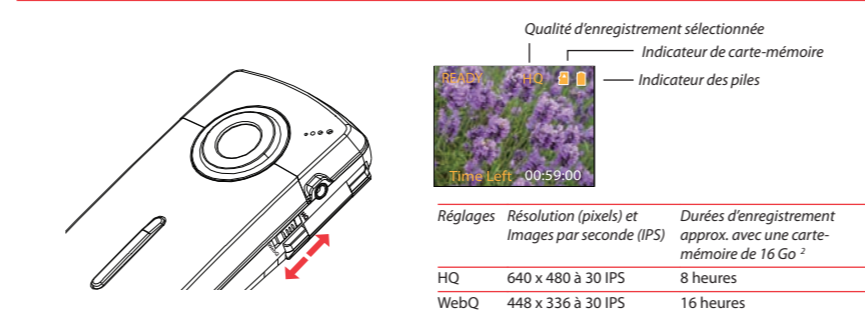


² La durée réelle d'enregistrement dépend du type de contenu vidéo enregistré, des exigences du système et d'autres facteurs.

7. Enregistrement vidéo et prise de photo

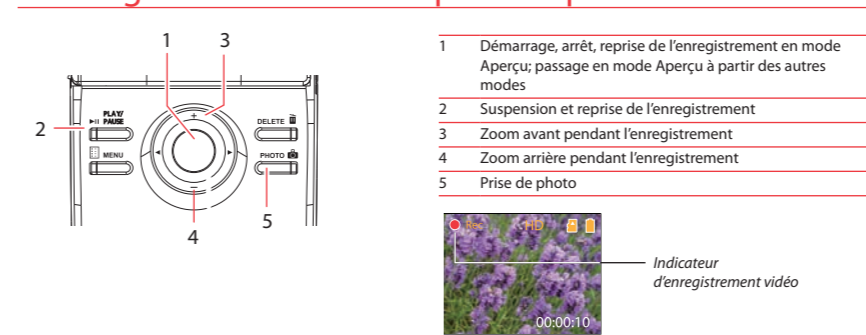

8. Lecture ou suppression d'enregistrements

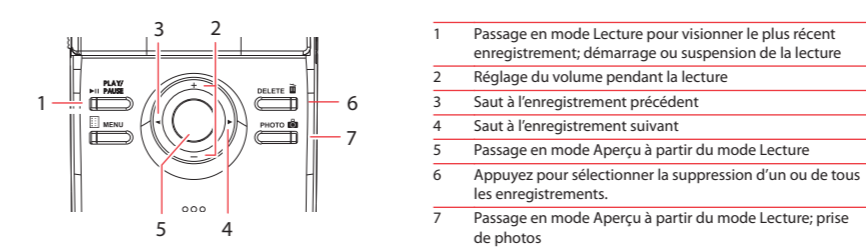

9. Installation du logiciel RCA Memory Manager

Branchez le camscope à votre ordinateur à l'aide du câble USB fourni.

Pour installer Memory Manager
Windows: Ouvrez **Mon Ordinateur** puis double-cliquez sur le lecteur nommé « SMALLWONDER ». Double-cliquez sur **MemoryMgr3_Windows_Installer.exe** pour démarrer l'installation.

Mac: Ouvrez le lecteur nommé « SMALLWONDER ». Double-cliquez sur le répertoire **RCA Mac Installers.dmg**. Double-cliquez sur **MemoryMgr3 Mac Installer** pour démarrer l'installation. Après que l'installation de Memory Manager 3 est terminée, double-cliquez sur **RCA Detective Installer** pour installer le logiciel RCA Detective.

Pour vous assurer que les vidéos peuvent être gérées et lues sur votre ordinateur :

- Assurez-vous d'installer le logiciel Memory Manager fourni.

10. En savoir plus sur le camscope

- Lisez le guide de l'utilisateur pour plus de renseignements sur les points suivants :
- Utilisation du bouton **MENU** pour régler le camscope (incluant la date et l'heure)
 - Visionnement de vidéos sur un téléviseur
 - Enregistrement de vidéos sur une cassette VHS ou un DVD
 - Branchement du camscope à votre ordinateur
 - Conseils et dépannage
 - Précautions et renseignements sur la garantie



For Customer Service Visit Our Website At www.rcaaudiovideo.com
Product Information, Photos, FAQ's, Owner's Manuals
Audiovox Electronics Corp.
150 Marcus Blvd., Hauppauge, NY 11788
© 2010 Audiovox Electronics Corp.
Marque(s) * Déposée(s)
Imprimé en Chine