RCA

QuickStartGuide

M62 series
www.rcaaudiovideo.com
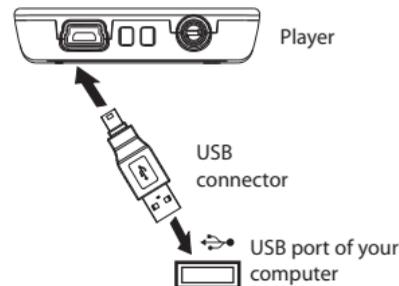
Congratulations on purchasing your new RCA Player.
Please read these instructions for quick tips on using the player.
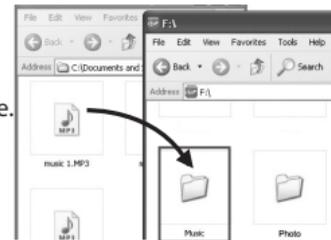
A comprehensive User Manual in your selected language (English, Spanish, or French) will be copied to your PC as part of the easyRip software installation. You can find the User Manual PDF file on your desktop. The User Manual PDF file can also be found in the player memory under the User Manuals folder.

Getting Started

1. Connect your player to your computer.
* The RCA easyRip™ Media Software installer is stored on the player. Go to **My Computer** (XP users) / Go to **Computer** (Vista and 7 users) in the Start menu, find and open the drive letter associated with the player (i.e. RCA MP3) and then double-click the **rcaeasyrip_setup.exe** file to launch the installer.
* The player charges automatically every time you connect it to your computer.
  It should be **charged for at least 3 hours** before using for the first time.

Player
USB connector
USB port of your computer

2. Transfer audio/video/photo files to your player with either of the two methods below:
a) **RCA easyRip**: Helps to rip CD's, create playlists, load content and manage your library with an intuitive and modular design. Click the easyRip icon ( ) on your PC desktop to launch the software.
* For details in using RCA easyRip, click the **Help** icon ( ) on the module dock.

* The latest software can be downloaded from *www.rcaaudiovideo.com*.
** RCA easyRip is currently not compatible with Audible.

v3.0 (1.0.3.0) (EN/E)

---

b) **Windows Explorer**: drag-and-drop audio/image files to the **Internal Storage** folder (Windows Vista™, Windows® 7) or the **Music** or **Photo** folder (Windows® XP) of the player.
* The player is also compatible with most PC music management software.

3. Disconnect the player from the computer and enjoy media on the go.

IMPORTANT:
* Video files must be converted and transferred via RCA easyRip for playback on your player.
* Video, photo, and audible files must be transferred to their respective folders on the player to ensure proper detection and playback.
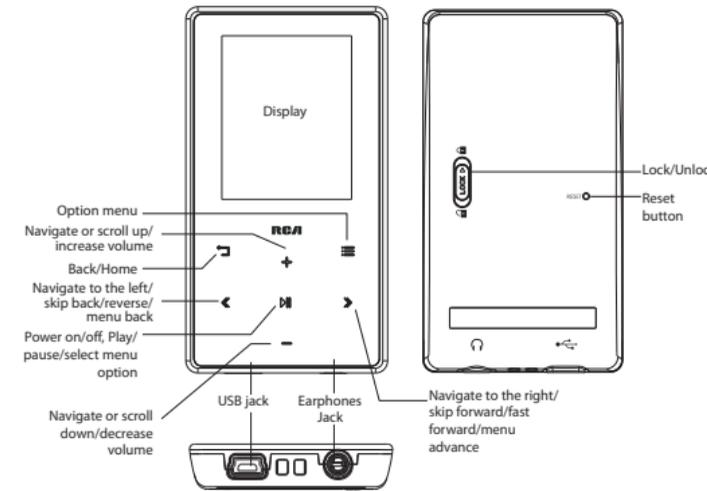

Learn more about the player
* **To view the user manual directly from the player:**
  Step 1: Click **Start**.
  Step 2: Click **My Computer** (XP users) / Click **Computer** (Vista and 7 users).
  Step 3: Find and open the drive letter associated with the player (i.e. RCA MP3) and then open User Manuals folder.
  Step 4: From the User Manuals folder, select the user manual in your preferred language for more information on the player's features, safety and warranty information, and answers to Frequently Asked Questions (FAQ's).
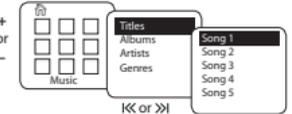
Need more help? Do not return this product to the store.
Visit **www.rcaaudiovideo.com** for the latest firmware, RCA easyRip Media Software, user manual and FAQ's.

General controls

Display
Option menu
Navigate or scroll up/increase volume
Back/Home
Navigate to the left/skip back/reverse/menu back
Power on/off, Play/pause/select menu option
Navigate or scroll down/decrease volume
Lock/Unlock
Reset button
USB jack
Earphones Jack
Navigate to the right/skip forward/fast forward/menu advance

Turn the player on/off	Press and hold ▶ⅠⅠ button
Lock/Unlock the keys	Slide the Lock Slider towards the Lock icon (🔒) (Away from the headphone jack). To unlock, slide the Lock Slider towards the un-lock icon (🔓) (Towards the headphone jack).
Go to the Home menu (to access Music, Photo, Video, Radio, Audible, Playlists and Settings)	Press ⬅ to return to the menu.
Navigate to an audio/video/photo file	In the Home menu, Press + or – and ≪ or ≫ to select the player menu and press + or – to scroll up or down to the desired file

---

Play an audio/video/photo file	Press ▶ⅠⅠ or ≫
Pause playback	Press ▶ⅠⅠ at the playback (Now Playing) screen, press again to resume
Show the Option menu	Press ≡
Adjust the volume	Press + or – at the playback (Now Playing) screen
Skip to the next file (or section of audible*)	Press ≫
Skip to the previous file (or section of audible*)	Press ≪ within the beginning 4 seconds of the current audio file
Reverse or fast forward an audio file	Press and hold ≪ or ≫ during playback
Delete files from the player	Refer to Music, Video, Photo, Audible, Radio and Playlists of the user manual.
Reset the player (if it is not responding)	Press the **RESET** button on the back of the player with a non-metal pointed object (e.g. toothpick).

* Refer to the user manual for information on section skipping for Audible.

Product registration
Thank you for purchasing an RCA product. We pride ourselves on the quality and reliability of all our electronic products but if you ever need service or have a question, our customer service staff stands ready to help. Contact us at www.rcaaudiovideo.com

PURCHASE REGISTRATION: Registering On-line will allow us to contact you in the unlikely event a safety notification is required under the Federal Consumer Safety Act.

Register Online at:
WWW.RCAAUDIOVIDEO.COM
Click on Product Registration and Fill Out the Brief Questionnaire