



RCR414HZ / RCR413HZ

Universal Remote Control Owner's Manual

Manual del Propietario (parte posterior)

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause harmful interference to radio communications.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates and uses radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Industry Canada Regulatory Information

CAN ICES-3(B)/NMB-3(B)

Avis d'Industrie Canada

CAN ICES-3(B)/NMB-3(B)

SAVE THIS MANUAL AND THE CODE LISTS!

Remote controls can sometimes lose their programming when you change the batteries. Make sure you keep the manual and code lists in a safe place so that you can reprogram the remote if you need to.

Tip: This remote is already programmed to operate most RCA-branded TVs, DVD players, and satellite receivers. Just press the corresponding key—DVD-BLU RAY for a DVD player, TV for a television, or SAT-CBL for a satellite receiver

Step 1: Install your batteries

Your universal remote requires two AAA alkaline batteries (not included).

To install the batteries:

1. Remove the battery compartment cover.

2. Insert the batteries, matching the batteries to the (+) and (-) marks inside the battery compartment.

3. Push the battery cover back into place.

Battery Precautions:




• Do not mix old and new batteries.

• Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.

• Always remove old, weak or worn-out batteries promptly and recycle or dispose of them in accordance with Local and National Regulations.

Battery Saver

Your universal remote control saves battery power by automatically turning off if any key is pressed for more than 60 seconds. This saves your battery life should your remote get stuck in a place where the keys remain depressed, such as between sofa cushions.

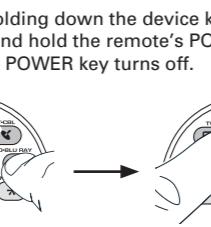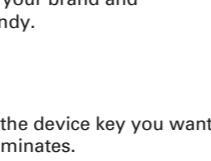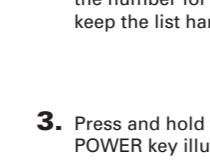



RCR414BHZ / RCR413BHZ Manual del Propietario del Control Remoto Universal Owner's Manual (English on back)

Información FCC

Este aparato obedece las especificaciones de la Parte 15 de las regulaciones FCC. Las funciones están sujetas a las siguientes condiciones: 1) Este aparato no puede causar interferencias dañinas, y 2) este aparato tiene que aceptar cualquier interferencia que reciba, incluyendo la interferencia que pueda causar una operación no deseada.

Note: Se probó este equipo que cumple con las restricciones establecidas para un dispositivo Clase B, de acuerdo con la Sección 15 de la Reglamentación de FCC. Estas restricciones fueron diseñadas para proporcionar una protección razonable contra la interferencia perjudicial en una instalación residencial. Este equipo genera, usa y puede irradiar energía de radiofrecuencia y, si no está instalado o no se lo utiliza de acuerdo con las instrucciones, puede ocasionar interferencia perjudicial para las comunicaciones de radio. Sin embargo, no existe garantía de que no se vaya a producir una interferencia en una instalación particular. Si este equipo produce una interferencia perjudicial con la recepción de la radio o la televisión, la misma puede ser corregida apagando y encendiendo el equipo, se le pide al usuario que intente corregir la interferencia siguiendo una o varias de las siguientes medidas:

- Vuelva a orientar o cambie de lugar la antena receptora.
- Anchez el equipo o su tomacorriente en un circuito diferente al que está conectado el receptor.
- Consulte al distribuidor o a un técnico experimentado de radio y televisión para solicitar asistencia.

Paso 2: Programe el control remoto

Para utilizar este control remoto universal con su sistema de entretenimiento en el hogar, necesitará primero programarlo para manejar sus dispositivos. Para programar el control remoto universal para manejar sus dispositivos, utilice uno de los cuatro métodos a continuación. Intente cada una de ellas en el orden indicado.

4. Cuando haya ingresado el código de cinco dígitos, continúe oprimiendo la tecla de dispositivo y observe la tecla POWER?

Sí, ¡Listo! La tecla de dispositivo está programada.

No, parpadeó cuatro veces y se apagó: Ha ingresado un número de código que no se encuentra en las listas de códigos u omitió un paso en el procedimiento de entrada de códigos. Intente el paso 3 nuevamente.

NOTAS

Pruebe el control remoto con el dispositivo para asegurarse que la tecla de dispositivo esté programada con el código correcto y garantizar así su máxima funcionalidad. Si no puede utilizar alguna de las funciones, intente con otro código de la lista.

Búsqueda Automática de Códigos por Marca

La Búsqueda Automática de Códigos busca a través de los códigos según la marca de dispositivos seleccionada.

5. Espera hasta que la tecla POWER del control remoto se ilumine y permanezca iluminada. Luego, suelte ambas teclas.

