


# ADVENT<sup>®</sup>

## Foot-activated Sensor

### How to use the Foot-activated Sensor:


Standing at the trunk / hatch of the vehicle, raise foot to sensor area and hold for +1 second. When the foot come into the sensor area, ensure it overs the microwave inductor installation location.

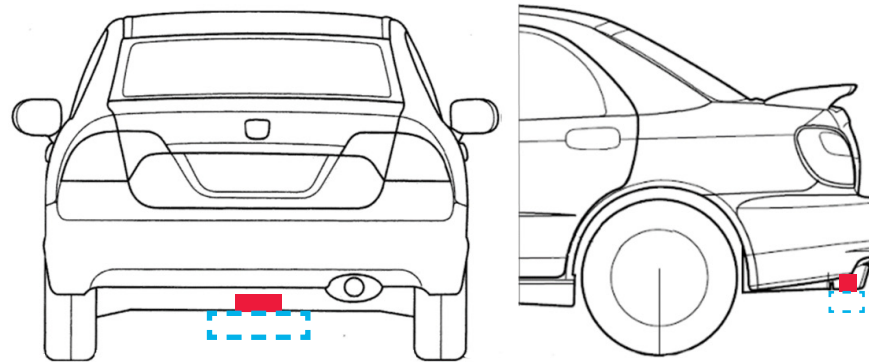

Microwave Inductor



Sensor Area

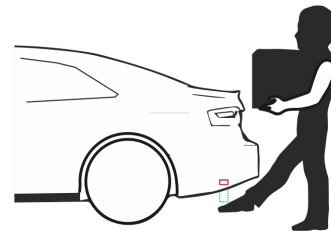

VOXX Electronics Corporation, 180 Marcus Blvd., Hauppauge, New York 11788

428####

User Quick Reference Card PROSVR



### **Common Activation Issues**

- A. Foot motion outside the detecton area.
- B. Foot motion is too slow or fast.
- C. Foot motion is not extending long enough under vehicle.
- D. The key is not nearby the trunk or not in the sensor area.

### **CAUTIONS**

- A. Always carry the original remote control. The system only works when detecting the factory key.
- B. Do not leave the factory key on the car. Unplanned trunk / hatch release can occur.
- C. When washing the car, keep the key away from vehicle to avoid unplanned trunk / hatch release.
- D. For product accompanied with the waterproof strip, after installing the inductor, stick the waterproof strip over it to avoid water and moisture.

**VOXX Electronics Corporation, 180 Marcus Blvd., Hauppauge, New York 11788 | 1-800-645-4994**