
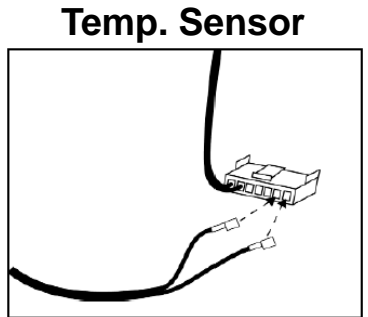
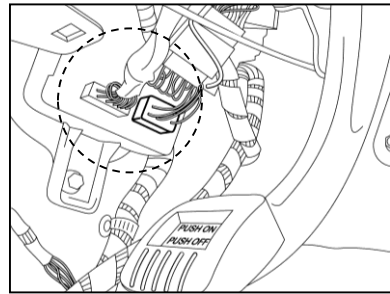
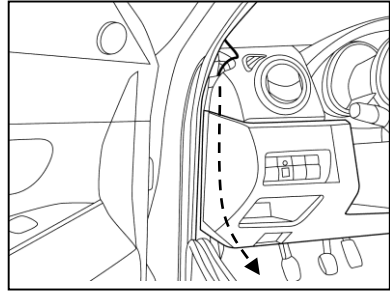
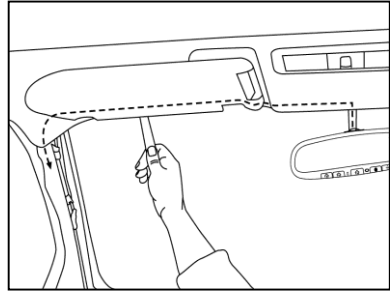



GENTEX

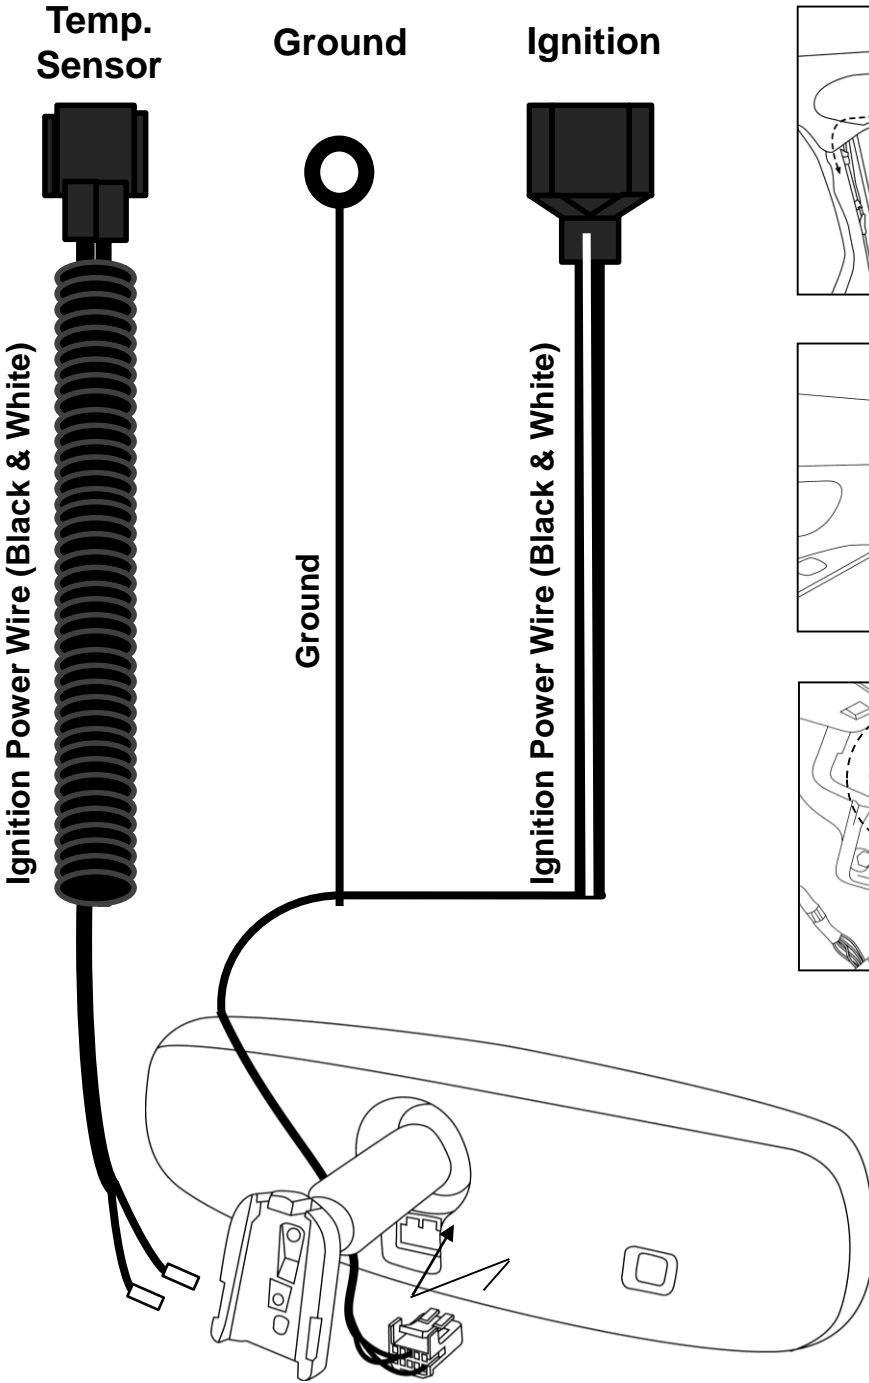

For full installation guides call technical support:
1-844-569-4654
 9am – 9pm (Eastern) Mon – Friday
 10am – 2pm (Eastern) Sat
 or visit
www.VOXXElectronics.com

APPLICABLE KITS:
 ADVGEN20A

GENTEX

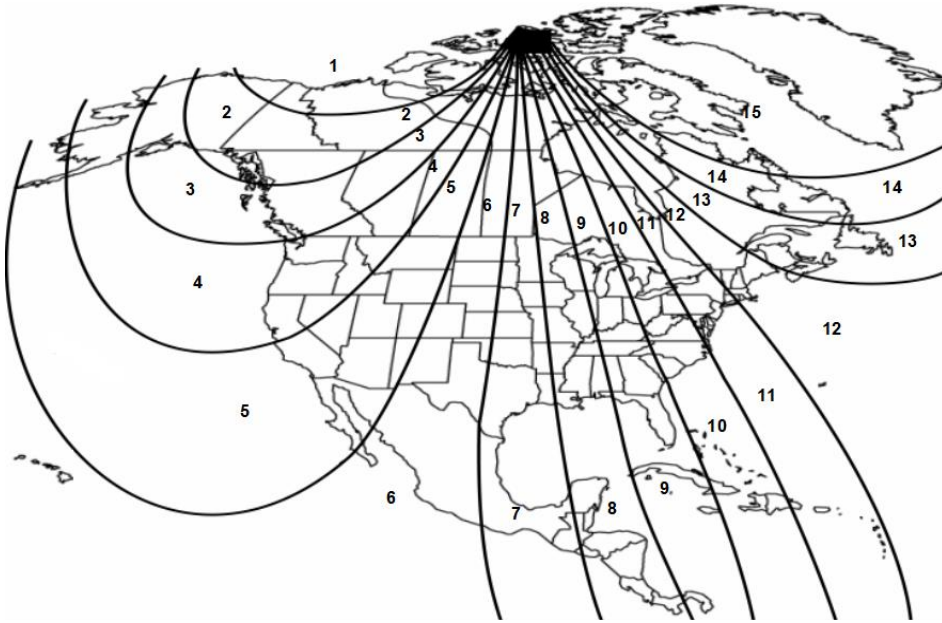

1. Adjust compass zone after mirror installation.

- a) The zone setting is factory preset to Zone 8. Refer to Compass Calibration Zone Map to find correct compass zone setting for your geographical location.
- b) To change the zone setting, push and hold the button for approximately 9 seconds until a number appears in the display.
- c) Press button repeatedly until desired compass zone number is reached.

2. Calibrate compass.

- a) Drive to an open, level area, away from large metallic objects or structures.
- b) Hold the button for approximately 12 seconds until "CAL" or "C" text appears in the display. Release the button to enter the calibration mode.
- c) Drive slowly in up to 3 circles until the "CAL" or "C" text disappears, and a directional heading is displayed.

The compass is now calibrated.